


Note: On circuit description, please refer to KRF-V7030D service manual(B51-5598-00).

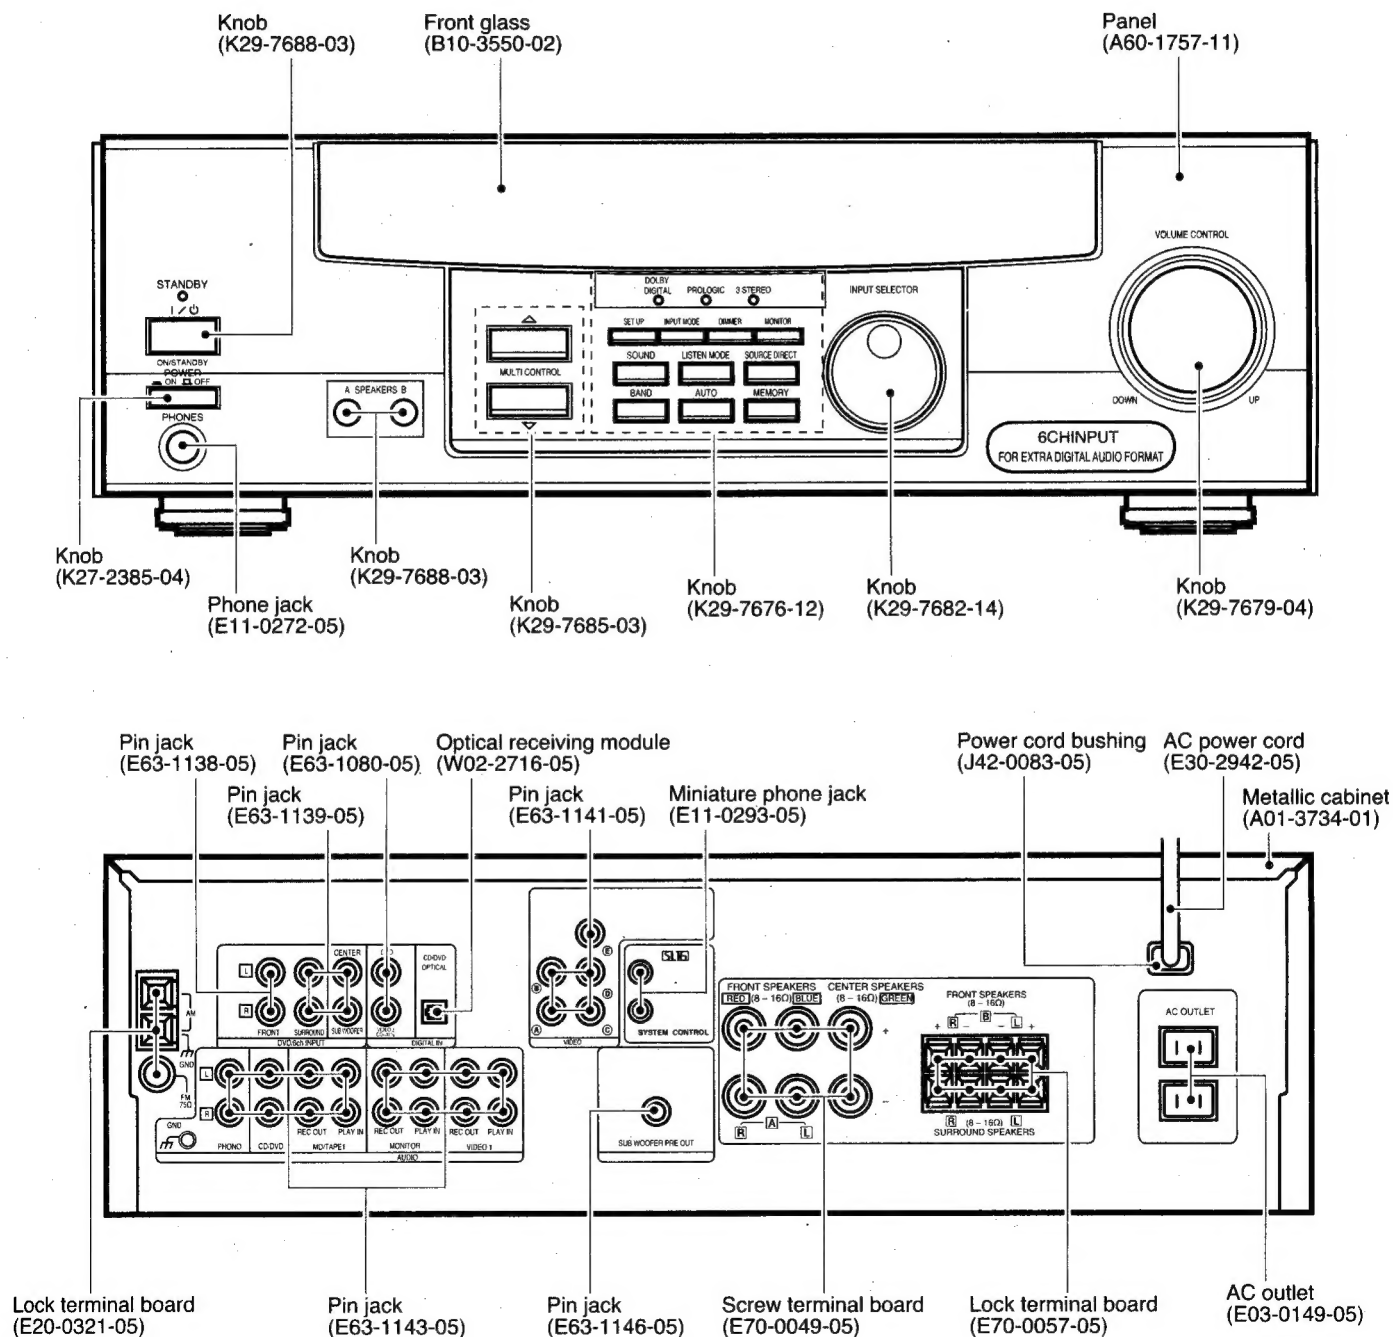

CONTENTS / ACCESSORIES / CAUTIONS

Contents

CONTENTS / ACCESSORIES / CAUTIONS.....	2
CONTROLS	3
BLOCK DIAGRAM	5
CIRCUIT DESCRIPTION	6
ADJUSTMENT	8


PC BOARD	10
SCHEMATIC DIAGRAM	17
EXPLODED VIEW	33
PARTS LIST	34
SPECIFICATIONS	46

Accessories


FM indoor antenna (1)
(T90-0836-05)



AM loop antenna (1)
(T90-0852-05)



*AC plug adaptor (1)
(E03-0115-05)




*Use to adapt the plug on the power cord to the shape of the wall outlet. (Accessory only for regions where use is necessary.)

For VR-406 and KRF-V6030D

Remote control unit (1)

(A70-1330-05): RC-R0609

(A70-1331-05): RC-R0610(E type)



Battery cover (A09-1178-08)

Batteries (R6/AA) (2)




For VR-405, VR-414, KRF-V5030D, and KRF-V4530D


Remote control unit (1)

(A70-1328-05): RC-R0509

(A70-1329-05): RC-R0510(E, T type)



Battery cover (A09-1178-08)



Cautions

Copy from
instruction
manual.

The manual covers the VR-407, VR-406, VR-405, VR-414, KRF-V7030D, KRF-V6030D, KRF-V5030D, and KRF-V4530D. Items such as functions, number of jacks, and remote control details differ somewhat between these models. To confirm the functions available on the model you have purchased, refer to the table below.

Model name	Remote Control	Terminal		
		Speaker out	VIDEO 3 jacks	Front input
VR-407 KRF-V7030D	RC-R0609	2 systems (A, B)	Equipped	Equipped
VR-406 KRF-V6030D	RC-R0609	2 systems (A, B)	Not equipped	Not equipped
VR-405/414 KRF-V5030D/ V4530D	RC-R0509	1 system	Not equipped	Not equipped

This manual is divided into four sections, Preparations, Operations, Other, and Remote Control.

Remote Control (Separate booklet) (VR-407/VR-406/KRF-V7030D/KRF-V6030D only)

Includes the "Quick Start Guide," which shows you how to operate other components using the remote control, as well as a detailed explanation of all remote control operations. Once you have registered your components with the proper setup codes, you'll be able to operate both this receiver and your other AV components (TV, VCR, DVD player, LD player, CD player, etc.) using the remote control supplied with this receiver.

VIDEO 2/MONITOR jacks (for VR-406/405/414/KRF-V6030D/V5030D/V4530D)

The receiver's VIDEO 2/MONITOR jacks can be used in two different ways. Make the appropriate setting for the component connected to the jack when the receiver is turned on.


Use as a VIDEO 2 jack

You can connect a video deck or the like to these jacks and perform video playback and recording. The initial factory setting is "VIDEO 2".

Use as a MONITOR jack

You can connect a cassette deck or the like to these jacks and make use of the deck's monitoring function during recording. Alternately, you can connect a graphic equalizer to these jacks to apply compensation to the music signal.

To use the VIDEO 2/MONITOR jacks as MONITOR jacks, hold down the MONITOR key of the main unit for more two seconds so that the indication shown below appears.

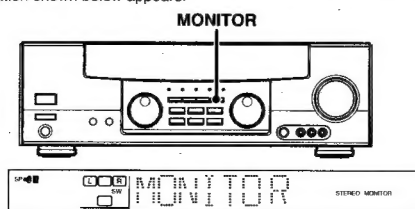

- At the same time the setting is switched to "MONITOR," the audio input source switches to tuner and the video input source switches to VIDEO 1.
- To switch the setting back to "VIDEO 2," once again hold down the MONITOR key for two seconds or more.

Memory back up function

Please note that the following items will be deleted from the unit's memory if the power cord is disconnected from the AC outlet for approximately 3 days.

- Power mode.
- Input selector settings.
- Device preset.
- Picture output.
- Speaker ON/OFF.
- Volume level.
- BASS, TREBLE, INPUT level.
- Subwoofer ON/OFF.
- Dimmer level.
- Monitor ON/OFF.
- MD/TAPE settings.
- 6CH/2CH input setting.
- Listen mode setting.
- Speaker settings.
- Input mode setting.
- Midnight mode setting.
- Broadcast band.
- Frequency setting.
- Preset stations.
- Tuning mode.

Resetting the Microcomputer

If the microcomputer may malfunction (unit cannot be operated, or shows an erroneous display) if the power cord is unplugged while the power is ON, or due to some other external factor. If this happens, execute the following procedure to reset the microcomputer and return the unit to its normal operating condition.

- Please note that resetting the microcomputer will clear the contents of the memory and returns the unit to the state it was in when it left the factory.

For U.S.A. and Canada


Unplug the power cord from the wall outlet, then plug it back in while holding down the POWER key.

For other countries

With the power cord plugged in, turn the POWER key OFF. Then, while holding down the ON/STANDBY key, press POWER.

Model vs PCB

MODEL	ABB	POWER SUPPLY	POWER AMP	PREAMP	DISPLAY
KRF-V4530D	E4	-	X07-3142-71	X08-3010-11	X14-7122-72
KRF-V5030D	E1	-	X07-3142-71	X08-3010-11	X14-7122-72
KRF-V5030D	T5	-	X07-3140-51	X08-3010-11	X14-7122-72
KRF-V5030D	Y5	X00-3000-20	X07-3142-91	X08-3010-11	X14-7120-22
KRF-V5030D-S	E3	-	X07-3142-71	X08-3010-11	X14-7122-72
KRF-V5030D-S	I5	X00-3000-20	X07-3140-21	X08-3010-11	X14-7120-22
KRF-V5030D-S	M5	X00-3000-20	X07-3140-21	X08-3010-21	X14-7120-22
KRF-V5030D-S	X5	-	X07-3140-71	X08-3010-11	X14-7120-72
KRF-V5030DE	E2	-	X07-3142-71	X08-3010-11	X14-7122-72
VR-405	K5	-	X07-3140-10	X08-3010-10	X14-7120-11
VR-405	P5	-	X07-3140-10	X08-3010-10	X14-7120-11
VR-414	K4	-	X07-3140-11	X08-3010-10	X14-7120-11
VR-414	P4	-	X07-3140-11	X08-3010-10	X14-7120-11
KRF-V6030D	E6	-	X07-3132-72	X08-3010-10	X14-7122-71
KRF-V6030D-S	I6	X00-3000-20	X07-3130-22	X08-3010-10	X14-7120-21
KRF-V6030D-S	M6	X00-3000-20	X07-3130-22	X08-3010-21	X14-7120-21
KRF-V6030D-S	X6	-	X07-3130-72	X08-3010-10	X14-7120-71
KRF-V6030DE	E7	-	X07-3132-72	X08-3010-10	X14-7122-71
VR-406	K6	-	X07-3130-11	X08-3010-10	X14-7120-10
VR-406	P6	-	X07-3130-11	X08-3010-10	X14-7120-10

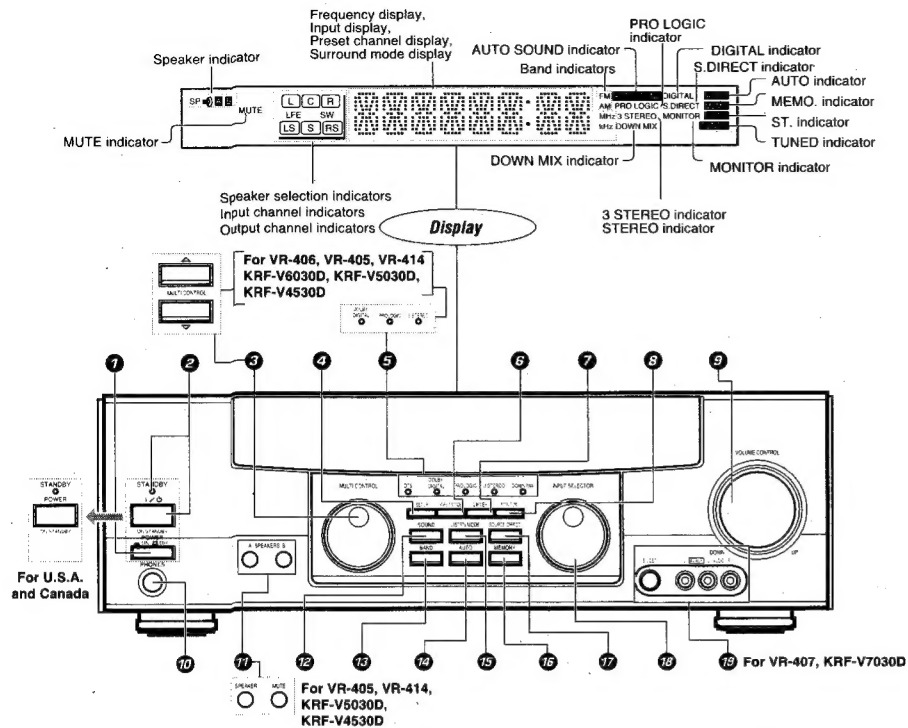

- 1 **POWER key**
(Except for U.S.A. and Canada)
Use to turn the main power ON/OFF.
- 2 **POWER key**
(For U.S.A. and Canada)
Use to turn the power ON/OFF.
- 3 **ON/STANDBY (I/O) key**
(Except for U.S.A. and Canada)
Use to switch the power ON/STANDBY when the POWER is turned ON.
- 4 **STANDBY indicator**
(For VR-407/KRF-V7030D)
Used to make a variety of settings.
- 5 **MULTI CONTROL knob**
(For VR-406/405/414/KRF-V6030D/V5030D/V4530D)
Used to make a variety of settings.
- 6 **SET UP key**
Use to select the surround sound settings.
- 7 **Surround indicators**
• DTS indicator
(For VR-407/KRF-V7030D)
Lights when the receiver is in the DTS mode.


- 8 **DOLBY DIGITAL indicator**
Lights when the receiver is in the Dolby Digital mode.
- 9 **PROLOGIC indicator**
Lights when the receiver is in the PROLOGIC mode.
- 10 **3 STEREO indicator**
Lights when the receiver is in the 3 STEREO mode.
- 11 **DOWN MIX indicator**
(For VR-407/KRF-V7030D)
Lights when the receiver is in the DOWN MIX mode.
- 12 **INPUT MODE key**
Use to switch between the digital and analog inputs.
- 13 **DIMMER key**
Use to adjust the brightness of the display.
- 14 **Use to select the REC MODE.**
- 15 **MONITOR key**
Use to monitor the source that is connected to the MONITOR jack.
- 16 **VOLUME CONTROL knob**
- 17 **PHONES jack**
Use for headphone listening.

- 18 **SPEAKERS A/B keys**
(For VR-407/406/KRF-V7030D/V6030D)
Use to turn the A/B speakers ON/OFF.
- 19 **SPEAKER key**
(For VR-405/414/KRF-V5030D/V4530D)
Use to turn the speaker ON/OFF.
- 20 **MUTE key**
(For VR-405/414/KRF-V5030D/V4530D)
Use to temporarily mute the sound.
- 21 **SOUND key**
Use to adjust the sound quality and ambience effects.
- 22 **BAND key**
Use to select the broadcast band.
- 23 **AUTO key**
Use to select the auto tuning mode.
- 24 **LISTEN MODE key**
Use to select the listening mode.
- 25 **MEMORY key**
Use to store radio stations in the preset memory.
- 26 **SOURCE DIRECT key**
Use to pass the source material direct to the amplifier.
- 27 **INPUT SELECTOR knob**
Use to select the input sources.
- 28 **AUX IN S VIDEO/AUDIO L/R jacks**
(For VR-407/KRF-V7030D)

Standby mode

While the standby indicator of the unit is lit, a small amount of current is flowing into the unit's internal circuitry to back up the memory. This condition is referred to as the standby mode of the unit. While the unit is in the standby mode, it can be turned ON from the remote control unit.

Remote control unit (RC-R0609) (VR-407/406/KRF-V7030D/V6030D)

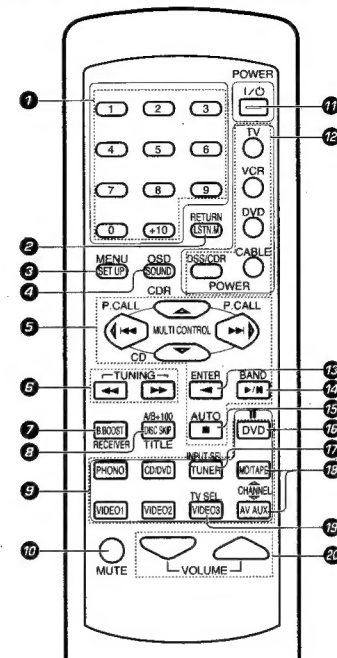

There are some cases in which keys (or knobs) that have the same function on the receiver and on the remote control have different names. In the instructions of this manual, if the names of corresponding keys (or knobs) on the receiver and remote control are different, the name of the remote control key is indicated in parentheses.

- 1 **Numeric keys**
Provide functions identical to those of the original remote control supplied with the component you are controlling.
- 2 **LSTN.M key**
Use to select the listening mode.
- 3 **RETURN key**
Use to operate other components.
- 4 **SET UP key**
Use to select the surround sound settings.
- 5 **MENU key**
Use to operate other components.
- 6 **SOUND key**
Use to adjust the sound quality and ambience effects.
- 7 **OSD key**
Use to operate other components.
- 8 **MULTI CONTROL keys**
Used to make a variety of settings.
- 9 **Use to operate other components.**
- 10 **P.CALL <=> keys**
If CD or MD is selected as the input source, these keys function as P.CALL keys.
- 11 **<=> keys**
If CD or MD is selected as the input source, these keys function as search keys.
- 12 **TUNING <=> keys**
Use to operate the tuner or selected component.


- 13 **B. BOOST key**
Use to select the maximum adjustment setting for the low frequency range.
- 14 **RECEIVER key**
Use to return to the operation of the receiver.
- 15 **DISC SKIP key**
If CD is selected as the input source, this key functions as the multi-CD player disc skip key.
- 16 **A/B key**
If TAPE is selected as the input source, this (A and B) of a double cassette deck.
- 17 **+100 key**
Use to select the disc number with the multi-CD player.
- 18 **TITLE key**
Use to operate other components.
- 19 **INPUT SELECTOR keys (DVD, PHONO, CD/DVD, TUNER, MD/TAPE, VIDEO1, VIDEO2, VIDEO3, AV AUX)**
Selects the inputs and sets the remote control to operate the component registered at the respective input.
- 20 **MUTE key**
Use to temporarily mute the sound.
- 21 **POWER key**
Use to turn the receiver on and off.
- 22 **POWER key (TV, VCR, DVD, DSS/CDR, CABLE)**

- 23 **Use to turn the other components on and off.**
- 24 **ENTER key**
Use to operate other components.
- 25 **< key**
If tape is selected as the input source, this key functions as the play key for side B of the cassette (the side facing away from the front of the deck).
- 26 **BAND key**
Use to select the broadcast band.
- 27 **> key**
If CD is selected as the input source, this key functions as the play/pause key. If MD is selected as the input source, this key functions as the play key.
- 28 **AUTO key**
Use to select the auto tuning mode.
- 29 **key**
If CD or MD is selected as the input source, this key functions as the stop key.
- 30 **key**
Use to operate other components.
- 31 **INPUT SEL. key**
Use to operate other components.
- 32 **CHANNEL </> keys**
Use to select the channel.
- 33 **TV SEL. key**
Use to operate other components.
- 34 **VOLUME keys**
Use to adjust the receiver volume.

KRF-V4530D/V5030D/V6030D/VR-405/406/414
CONTROLS

CONTROLS

Remote control unit (RC-R0509) (VR-405/414/KRF-V5030D/V4530D)

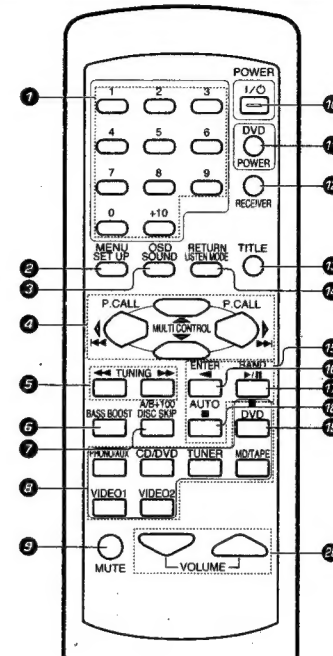

1 Numeric keys

If CD or MD is selected as the input source, these keys function as numeric keys. If tuner is selected as the input source, these keys are used to call up station presets.

2 SET UP key

Use to select the surround sound settings.

3 MENU key

Use to operate other components.

4 SOUND key

Use to adjust the sound quality and ambience effects.

5 OSD key

Use to operate other components.

6 MULTI CONTROL keys

Used to make a variety of settings.

7 P.CALL <P> keys

If tuner is selected as the input source, these keys function as P.CALL keys.

8 <A> keys

If CD or MD is selected as the input source, these keys function as search keys.

9 TUNING <T> keys

If tuner is selected as the input source, these keys function as tuning keys.

10 BASS BOOST key

Use to select the maximum adjustment setting for the low frequency range.

11 DISC SKIP key

If CD is selected as the input source, this key functions as the multi-CD player disc skip key.

12 A/B key

If TAPE is selected as the input source, this (A and B) of a double cassette deck.

13 +100 key

Use to select the disc number with the multi-CD player.

14 INPUT SELECTOR keys (DVD, PHONO/AUX, CD/DVD, TUNER, MD/TAPE, VIDEO1, VIDEO2)

Selects the inputs and sets the remote control to operate the component registered at the respective input.

15 MUTE key

Use to temporarily mute the sound.

16 POWER key

Use to turn the receiver on and off.

17 DVD key

Used to operate DVD player.

For details, refer to the instruction manual of your DVD player.

18 RECEIVER key

Use to return to the operation of the receiver.

19 TITLE key

Use to operate other components.

20 LISTEN MODE key

Use to select the listening mode.

RETURN key

Use to operate other components.

21 Component operation keys

Use these keys to operate other components with system control connections to the receiver.

22 < key

If tape is selected as the input source, this key functions as the play key for side B of the cassette (the side facing away from the front of the deck).

23 > key

If CD is selected as the input source, this key functions as the play/pause key.

If MD is selected as the input source, this key functions as the play key.

24 ■ key

If CD or MD is selected as the input source, this key functions as the stop key.

25 ENTER key

Use to operate other components.

26 BAND key

If tuner is selected as the input source, this key functions as the band selector key.

27 AUTO key

If tuner is selected as the input source, this key functions as the AUTO key.


28 II key

Use to operate other components.

29 VOLUME keys

Use to adjust the receiver volume.

KRF-V4530D/V5030D/V6030D/VR-405/406/414 BLOCK DIAGRAM

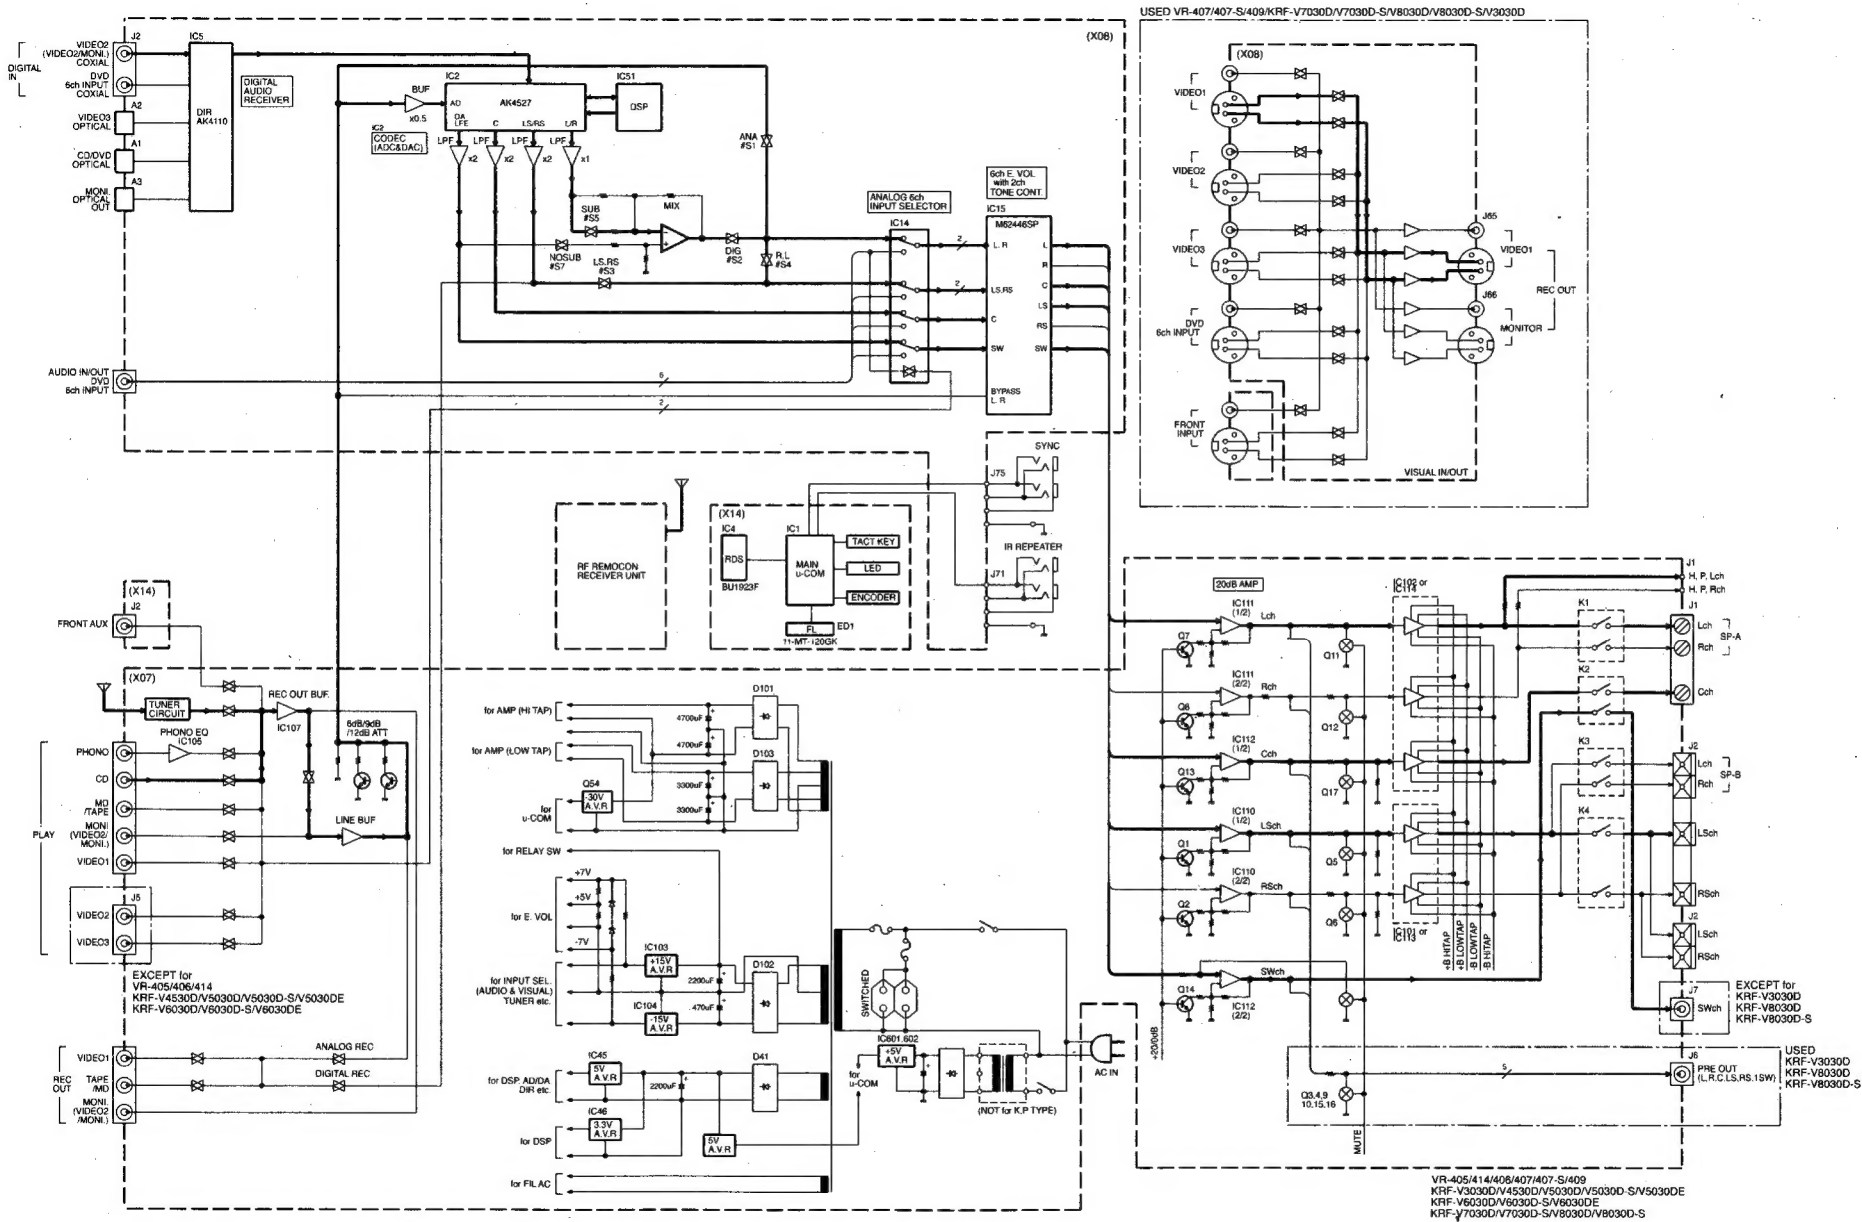

CIRCUIT DESCRIPTION

Pin description of microprocessor : X14,IC1(MN101C35DRA)

Pin No.	Pin Name	I/O	Description
1	S. DATA	I/O	Serial data signal.
2	S.BUS	I/O	Serial busy signal.
3	SEL. ST1	O	Strobe output to input selector (IC106).
4	SEL/VOL/PLL DT	O	Data output to selector,volume and PLL IC.
5	SEL/VOL/PLL CLK	O	Clock output to selector,volume and PLL IC.
6	SEL. ST2	O	Strobe 2 output to input selector (IC109).
7	PLL. CE	O	PLL chip enable.
8	Vdd (+5v)	-	Power supply.
9	OSC OUT	O	8MHz clock output.
10	OSC IN	I	8MHz clock input.
11	Vss	-	Connected to ground.
12	X IN	-	Connected to ground.
13	X OUT	-	No used.
14	MMCD	-	Connected to ground.
15	Vref-	-	Connected to ground.
16,17	KEY2,KEY1	I	Input terminal of key1 and key2.
18	MODEL TYPE	I	Discrimination port of models.
19	TH. SENS	I	No used.
20	PROTECT	I	Detection port of protection signal 1.
21	PROTECT2	I	Detection port of protection signal 2.
22	S.LEVEL/CH SPACE	I	RDS S level and channel space changeover.
23	PLL DO	I	RDS PLL data signal input.
24	Vref+	-	Reference voltage of AD converter..
25	CE	I	Chip enable.
26	RESET	I	Reset signal input.
27	T. MUTE	O	Muting signal output to tuner.
28	RF ST	O	CE signal output of RF receiver IC.
29	RF DT	O	Data signal output of RF receiver IC.
30	RF CLK	O	Clock signal output of RF receiver IC.
31	VOL.ST	O	Latch output of electric volume.
32	DSP INTREQ	I/O	Detection port of DSP INTREQ.
33	DTS DET	I	Detection port of DTS data.
34	REMOCON	I	Remote control signal input.
35	DIR ERR	I	Detection port of DIR error signal.
36	DZF	I	Detection port of CODEC zero input.
37	RDS.CLK	I	RDS clock input.
38	RDS.DAT/CE2	I	RDS data input./u-COM chip enable 2.
39	DSP/DIR/CORDEC CDIN	O	Serial data output.
40	DSP/DIR/CDOUT	I	Serial data input.
41	DSP/DIR/CORDEC CCLK	O	Clock output to IC2, IC5 and IC51on X08.
42	DSP CS	O	DSP chip select.
43	DSP PD	O	DSP power down.
44	DIR CODEC CS	O	CODEC chip select.
45	DIR CODEC PD	O	DIR CODEC power down.
46	NO USE	-	No used.
47-57	1G-11G	O	FL grid control(1G-11G).
58-74	P1-P17	O	FL segment control(P1-P17).
75	PACK CONT.	O	Power pack control.
76	LIMMITER	O	Control port of A class power supply.
77	REAR RE	O	Relay control terminal of surround speaker.
78	CENTER RE	O	Relay control terminal of center speaker.
79	FB RE	O	Relay control terminal of front B speaker.
80	FA RE	O	Relay control terminal of front A speaker.

KRF-V4530D/V5030D/V6030D/VR-405/406/414


CIRCUIT DESCRIPTION

Pin No.	Pin Name	I/O	Description
81	POWER RE	O	Power relay control.
82	CS5. 1(DOWN MIX)LED	Q	Control terminal of CS5.1(DOWN MIX) LED.
83	3 STEREO LED	O	Control terminal of 3 STEREO LED.
84	DTS LED	O	Control terminal of DTS LED.
85	DOLBY DIGITAL LED	O	Control terminal of DOLBY DIGITAL LED.
86	PROLOGIC LED	O	Control terminal of PROLOGIC LED.
87	STANDBY LED	O	Control terminal of STANDBY LED.
88	PRE OUT MUTE	O	Muting control terminal of pre out.
89	20dB ATT	O	20dB attenuation(volume) control terminal.
90	A.MUTE	O	Audio muting signal output.
91	ABOOT	O	EPROM CS.
92	MULTI. ENC CW	I	Multi cont. encoder signal input(clockwise).
93	MULTI. ENC CCW	I	Multi cont. encoder signal input(counterclockwise).
94	SEL. ENC CW	I	Selector encoder signal input(clockwise).
95	SEL. ENC CCW	I	Selector encoder signal input(counterclockwise).
96	VOL. ENC CW	I	Volume encoder signal input(clockwise).
97	VOL. ENC CCW	I	Volume encoder signal input(counterclockwise).
98	STEREO	I	Stereo (tuner) signal input.
99	SD	I	Tuner (SD)detector input.
100	Vpp(-30V)	-	FL power supply(-35V).

ADJUSTMENT

No.	ITEM	INPUT SETTINGS	OUTPUT SETTINGS	RECEIVER SETTINGS	ALIGNMENT POINTS	ALIGN FOR	FIG.
FM SECTION : EXCEPT E,T type		SELECTOR : FM					
1	DISCRIMINATOR (K,P only)	(A) 98.0MHz 1kHz, ±75kHz dev. 70dBf (ANT. input)	Connect a DC voltmeter between CN4 ① and CN4 ② (X07)	98.0MHz	L4 (X07)	0V	
2	TUNING LEVEL	(A) 98.0MHz MONO 1kHz, ±75kHz dev. 29.2dBf (ANT. input)	(B)	MONO 98.0MHz	VR1 (X07)	Adjust VR1 and stop at the point where ED1 (TUNED) goes on.	
FM SECTION : E,T type only		SELECTOR : FM ※ Adjust NO.1 and NO.2 repeat.					
1	DISCRIMINATOR	(A) 98.0MHz 1kHz, ±40kHz dev. 70dBf (ANT. input)	Connect a DC voltmeter between CN4 ① and CN4 ② (X07)	MONO 98.0MHz	L4 (X07)	0V	
2	DISTORTION (MONO)	(A) 98.0MHz 1kHz, ±40kHz dev. MONO 70dBf (ANT. input)	(B)	MONO 98.0MHz	L5 (X07)	Minimum distortion	
3	DISTORTION (STEREO)	(C) 98.0MHz 1kHz, ±40kHz dev. Selector : L or R Pilot : ±6kHz dev. 70dBf (ANT. input)	(B)	AUTO 98.0MHz	IFT (FRONT END : A1)	Minimum distortion (L or R)	
4	TUNING LEVEL	(A) 98.0MHz MONO 1kHz, ±40kHz dev. 29.2dBf (ANT. input)	(B)	MONO 98.0MHz	VR1 (X07)	Adjust VR1 and stop at the point where ED1 (TUNED) goes on.	

SYSTEM CONNECTIONS

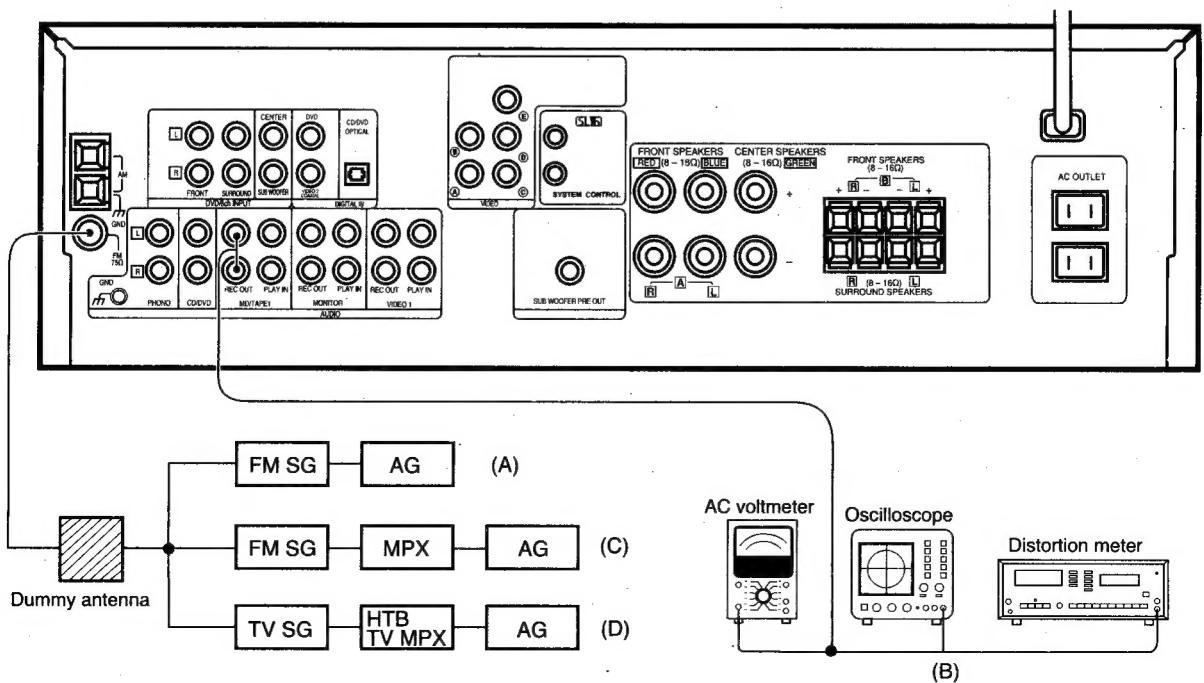


PARTS DESCRIPTIONS

CAPACITORS


CC 45 TH 1H 220 J
1 2 3 4 5 6

- 1 = Type ... ceramic, electrolytic, etc. 4 = Voltage rating
2 = Shape ... round, square, ect. 5 = Value
3 = Temp. coefficient 6 = Tolerance

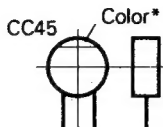

• Capacitor value

010 = 1pF
100 = 10pF
101 = 100pF
102 = 1000pF = 0.001μF
103 = 0.01μF

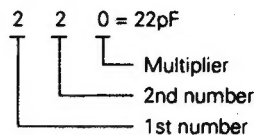

• Temperature coefficient

1st Word	C	L	P	R	S	T	U
Color*	Black	Red	Orange	Yellow	Green	Blue	Violet
ppm/°C	0	-80	-150	-220	-330	-470	-750

2nd Word	G	H	J	K	L
ppm/°C	±30	±60	±120	±250	±500

Example: CC45TH = -470 ± 60ppm/°C

• Tolerance (More than 10pF)

Code	C	D	G	J	K	M	X	Z	P	No code
(%)	±0.25	±0.5	±2	±5	±10	±20	+40 -20	+80 -20	+100 -0	More than 10μF -10 ~ +50 Less than 4.7μF -10 ~ +75

(Less than 10pF)

Code	B	C	D	F	G
(pF)	±0.1	±0.25	±0.5	±1	±2

• Voltage rating

2nd word 1st word	A	B	C	D	E	F	G	H	J	K	V
0	1.0	1.25	1.6	2.0	2.5	3.15	4.0	5.0	6.3	8.0	-
1	10	12.5	16	20	25	31.5	40	50	63	80	35
2	100	125	160	200	250	315	400	500	630	800	-
3	1000	1250	1600	2000	2500	3150	4000	5000	6300	8000	-

• Chip capacitors

(EX) C C 7 3 F S L 1 H 0 0 0 J
1 2 3 4 5 6 7

(Chip) (CH, RH, UJ, SL)

(EX) C K 7 3 F F 1 H 0 0 0 Z
1 2 3 4 5 6 7

(Chip) (B, F)

Refer to the table above.

- 1 = Type
2 = Shape
3 = Dimension
4 = Temp. coefficient
5 = Voltage rating
6 = Value
7 = Tolerance

Dimension (Chip capacitors)

Dimension code	L	W	T
Empty	5.6 ± 0.5	5.0 ± 0.5	Less than 2.0
A	4.5 ± 0.5	3.2 ± 0.4	Less than 2.0
B	4.5 ± 0.5	2.0 ± 0.3	Less than 2.0
C	4.5 ± 0.5	1.25 ± 0.2	Less than 1.25
D	3.2 ± 0.4	2.5 ± 0.3	Less than 1.5
E	3.2 ± 0.2	1.6 ± 0.2	Less than 1.25
F	2.0 ± 0.3	1.25 ± 0.2	Less than 1.25
G	1.6 ± 0.2	0.8 ± 0.2	Less than 1.0

RESISTORS

• Chip resistor (Carbon)

(EX) R K 7 3 E B 2 B 0 0 0 J
1 2 3 4 5 6 7


(Chip) (B, F)

• Carbon resistor (Normal type)

(EX) R D 1 4 B B 2 C 0 0 0 J
1 2 3 4 5 6 7

- 1 = Type 5 = Rating wattage
2 = Shape 6 = Value
3 = Dimension 7 = Tolerance
4 = Temp. coefficient

Dimension

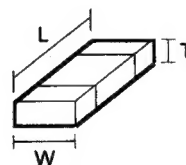

Dimension (Chip resistor)


Dimension code	L	W	T
E	3.2 ± 0.2	1.6 ± 0.2	1.0
F	2.0 ± 0.3	1.25 ± 0.2	1.0
G	1.6 ± 0.2	0.8 ± 0.2	0.5 ± 0.1

Rating wattage


Code	Wattage	Code	Wattage	Code	Wattage
1J	1/16W	2C	1/6W	3A	1W
2A	1/10W	2E	1/4W	3D	2W
2B	1/8W	2H	1/2W		

PC BOARD (Component side view)



X07-3130-10/X07-3140-10 C/3 (J70-1412-11)/(J70-1370-11)

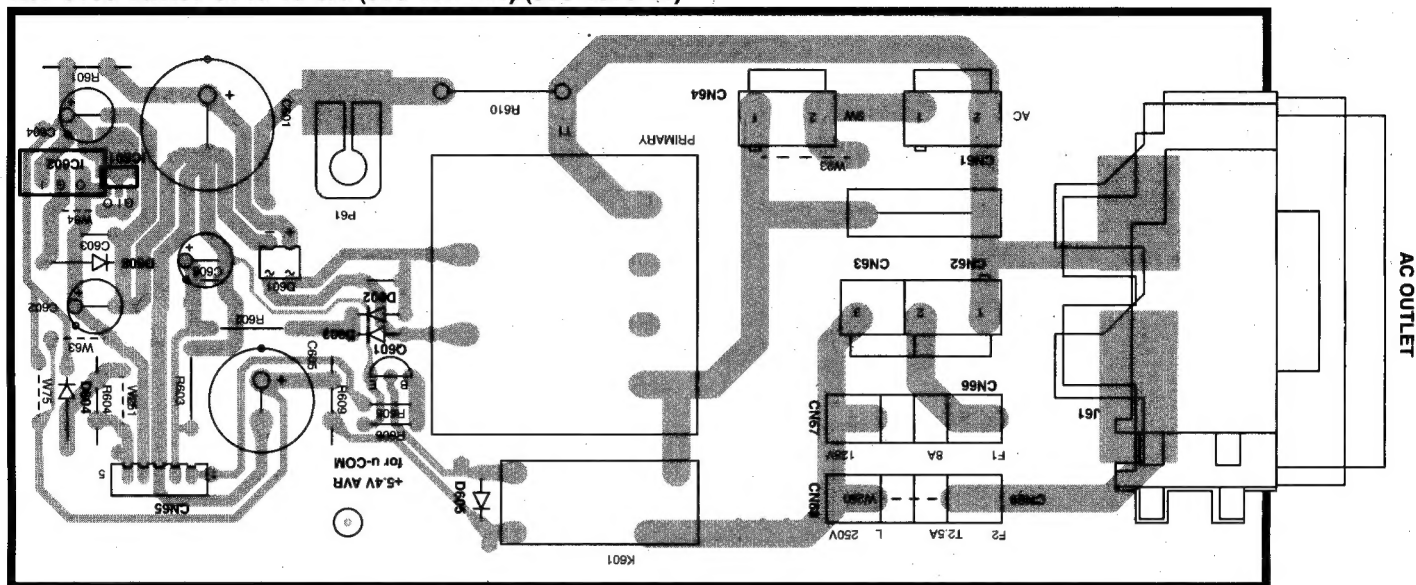


X07 B/3

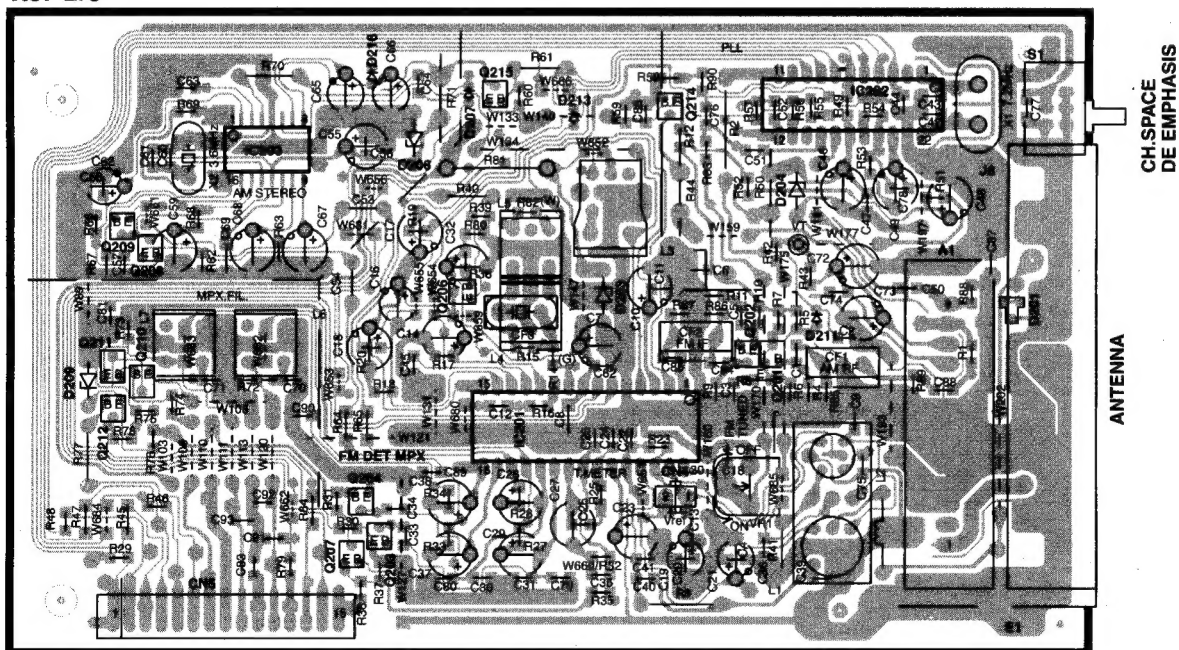


PC BOARD (Component side view)

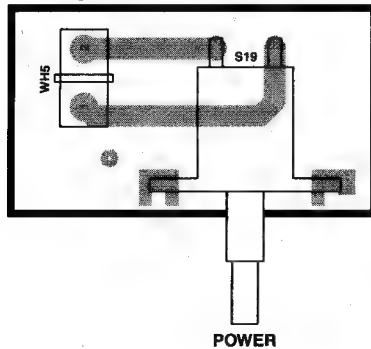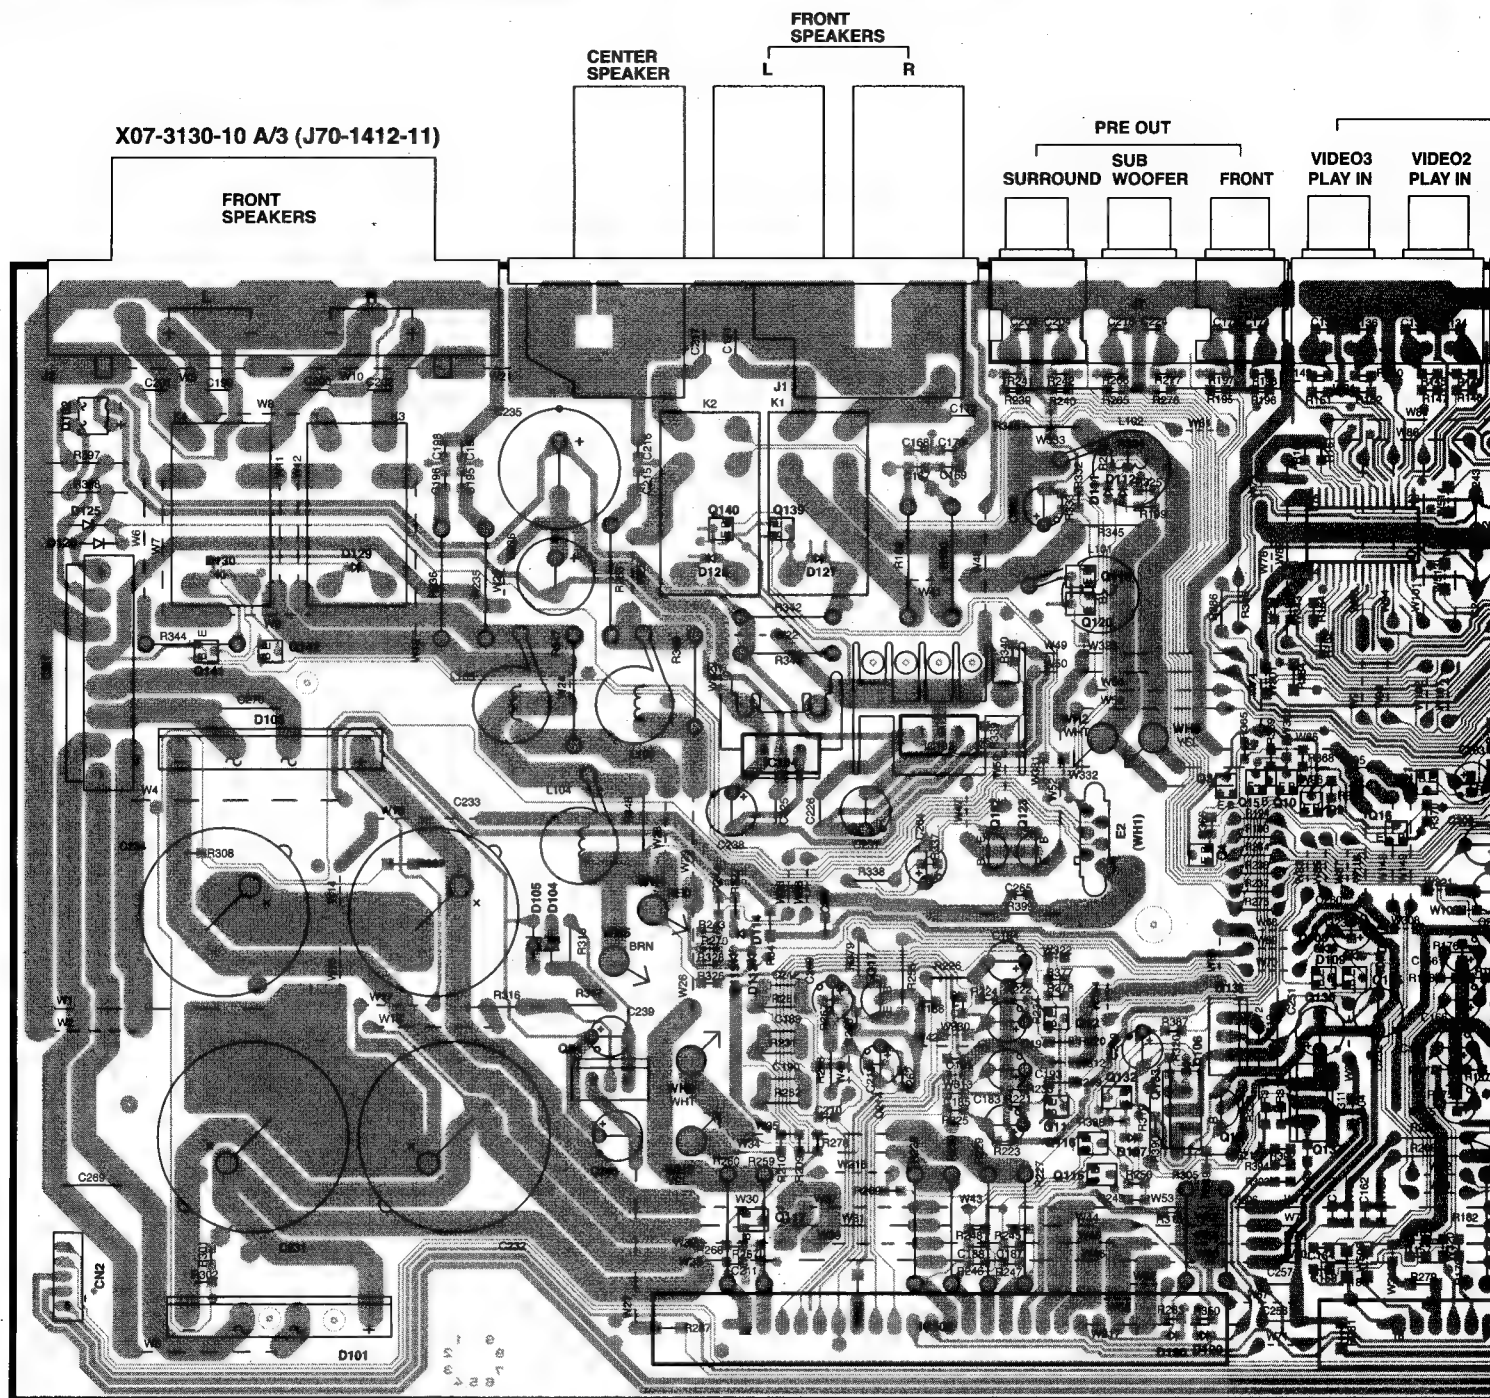


X00-3000-20 (J70-1368-01)

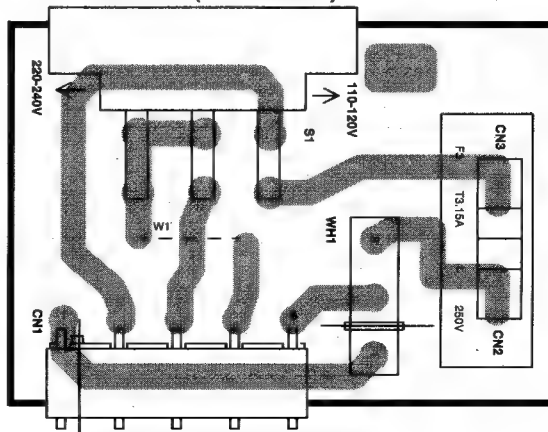


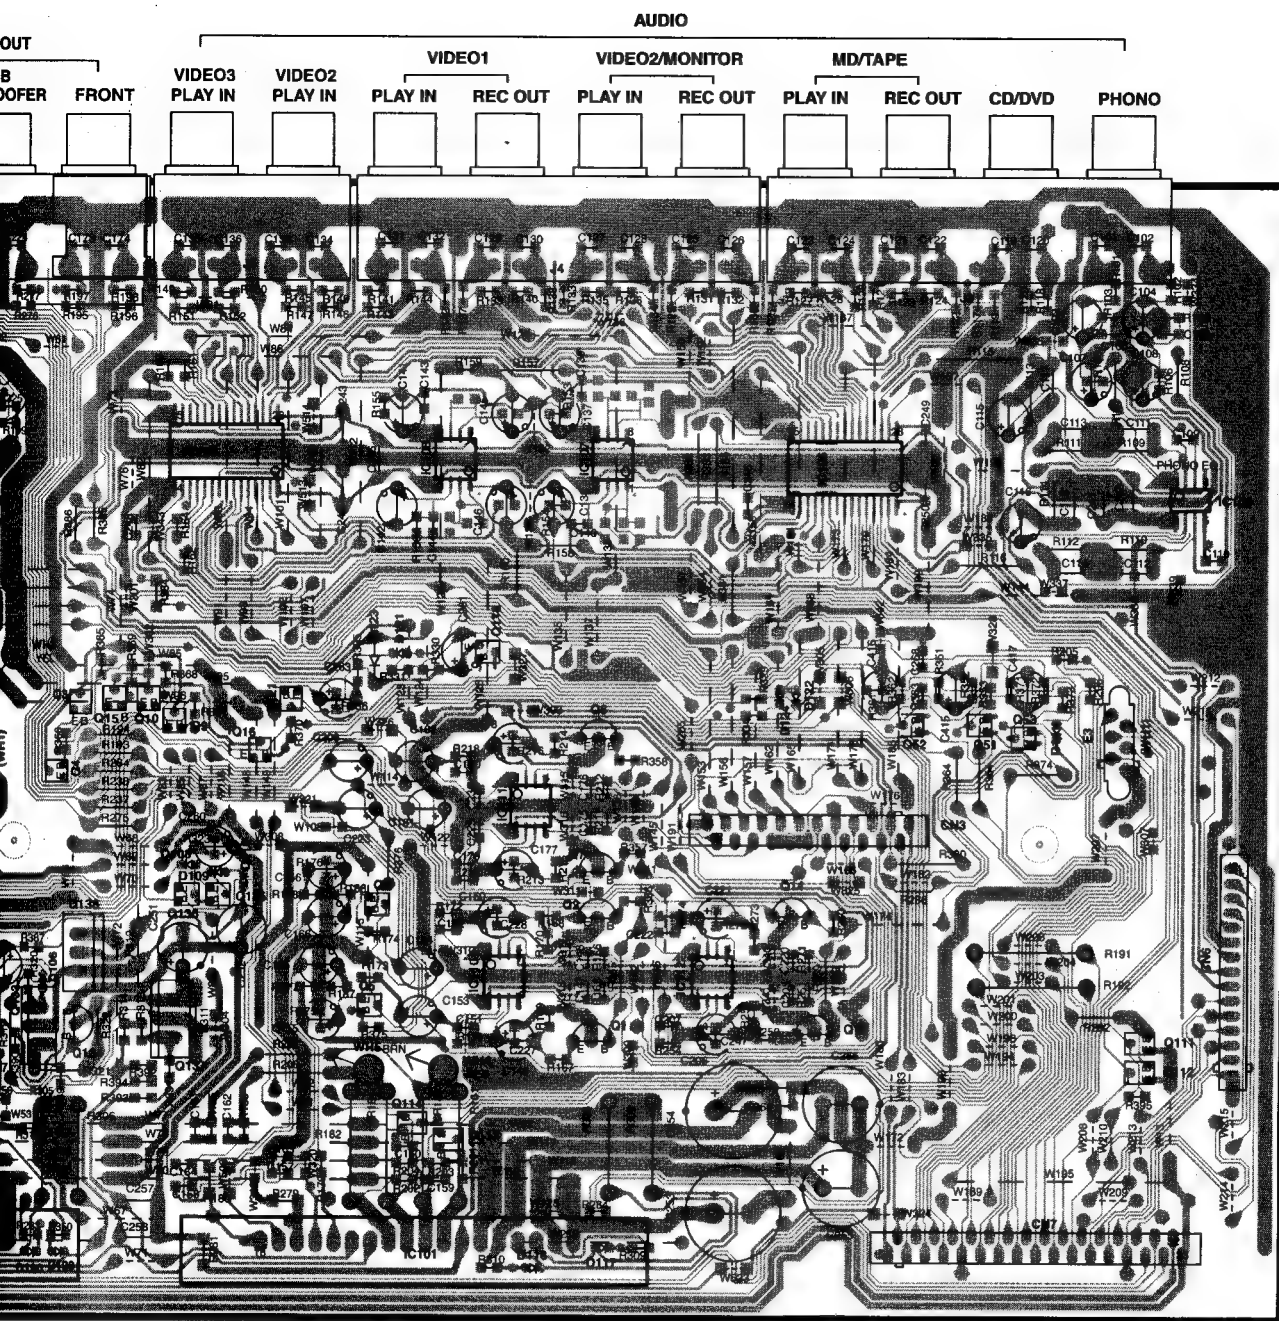


BOARD (Component side view)

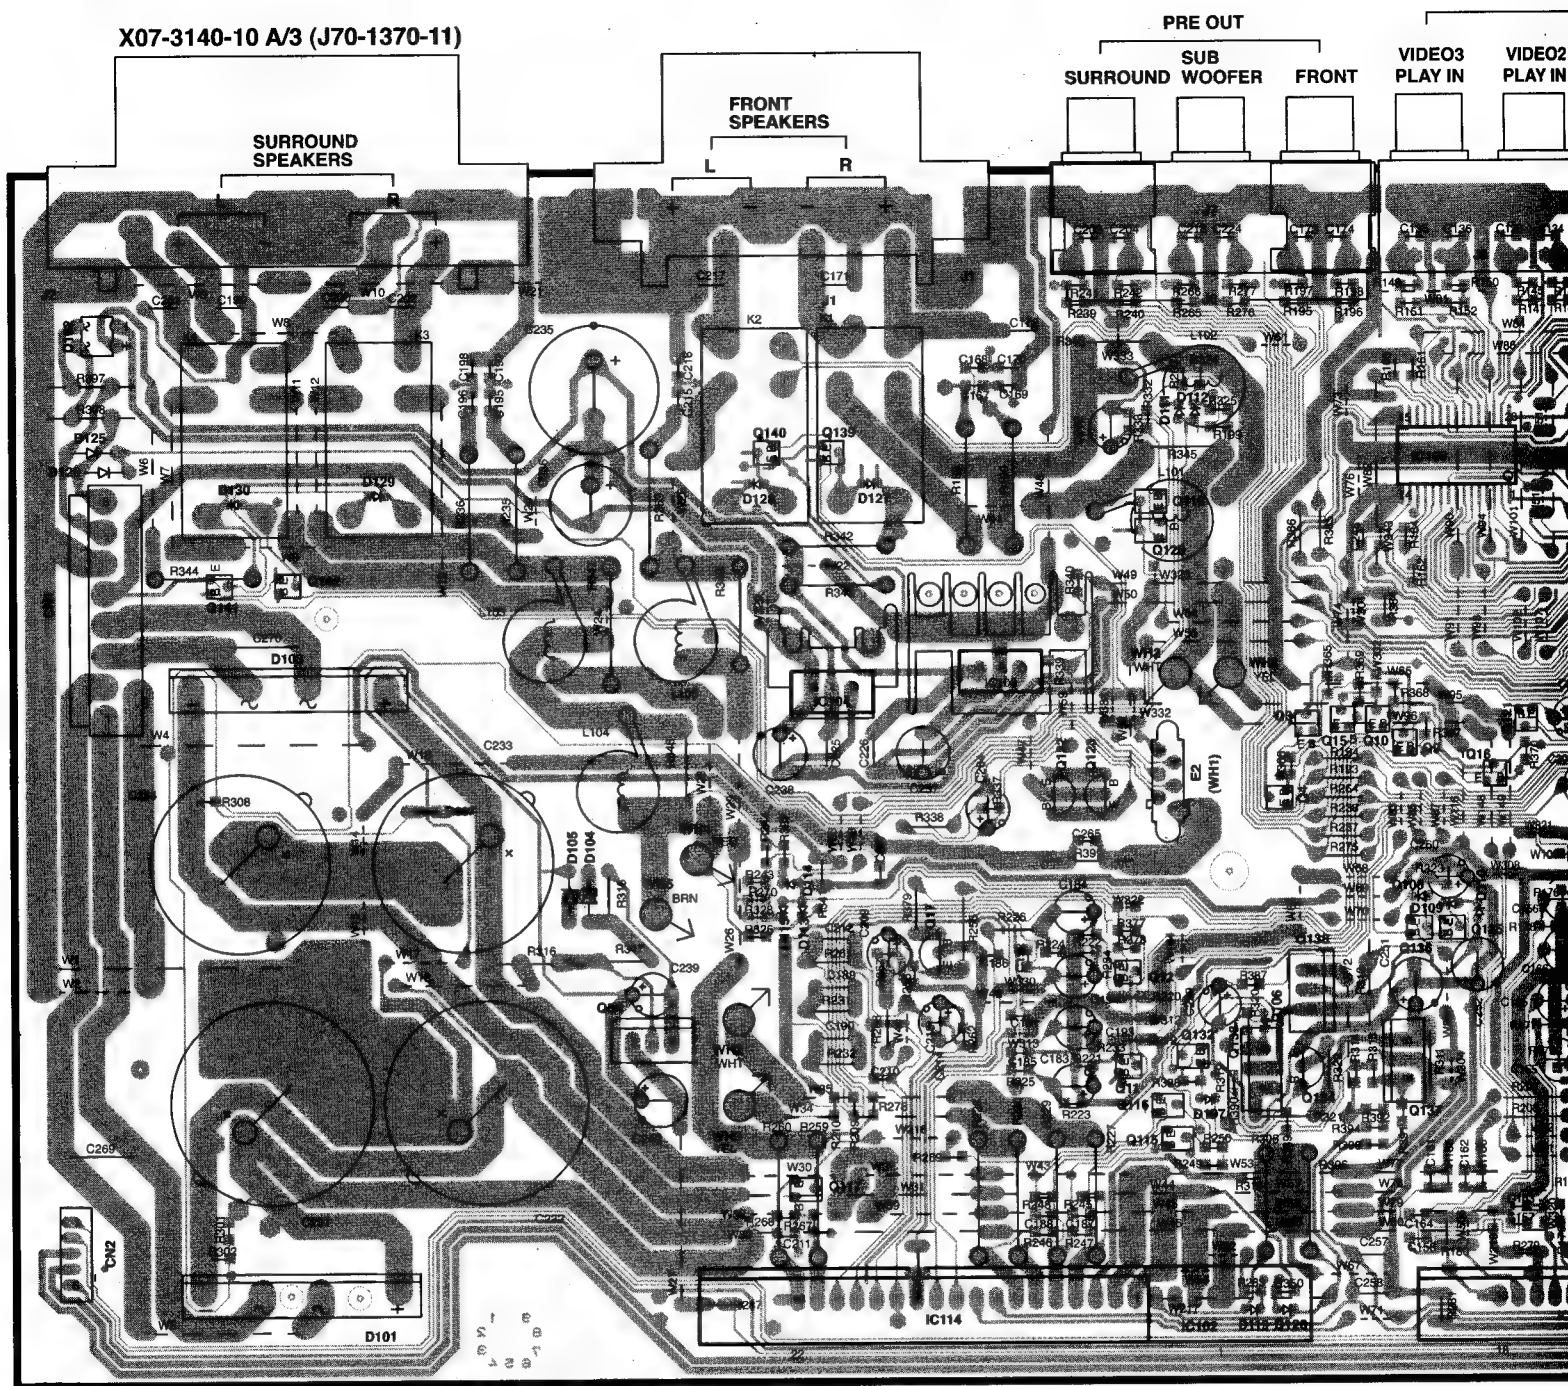


X14 F/6

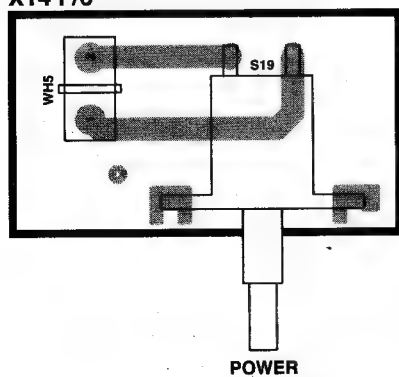


X00-3000-20 (J70-1368-01)

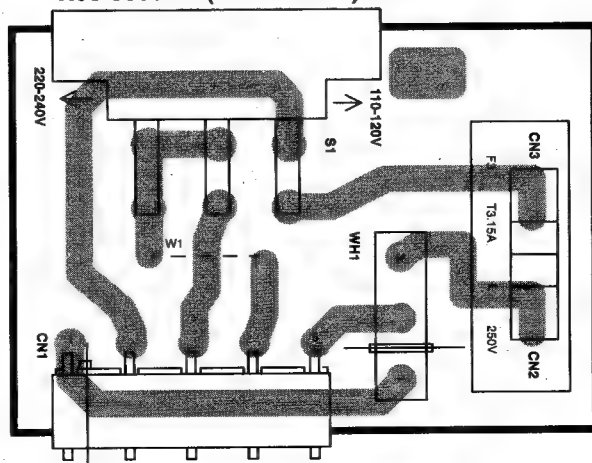


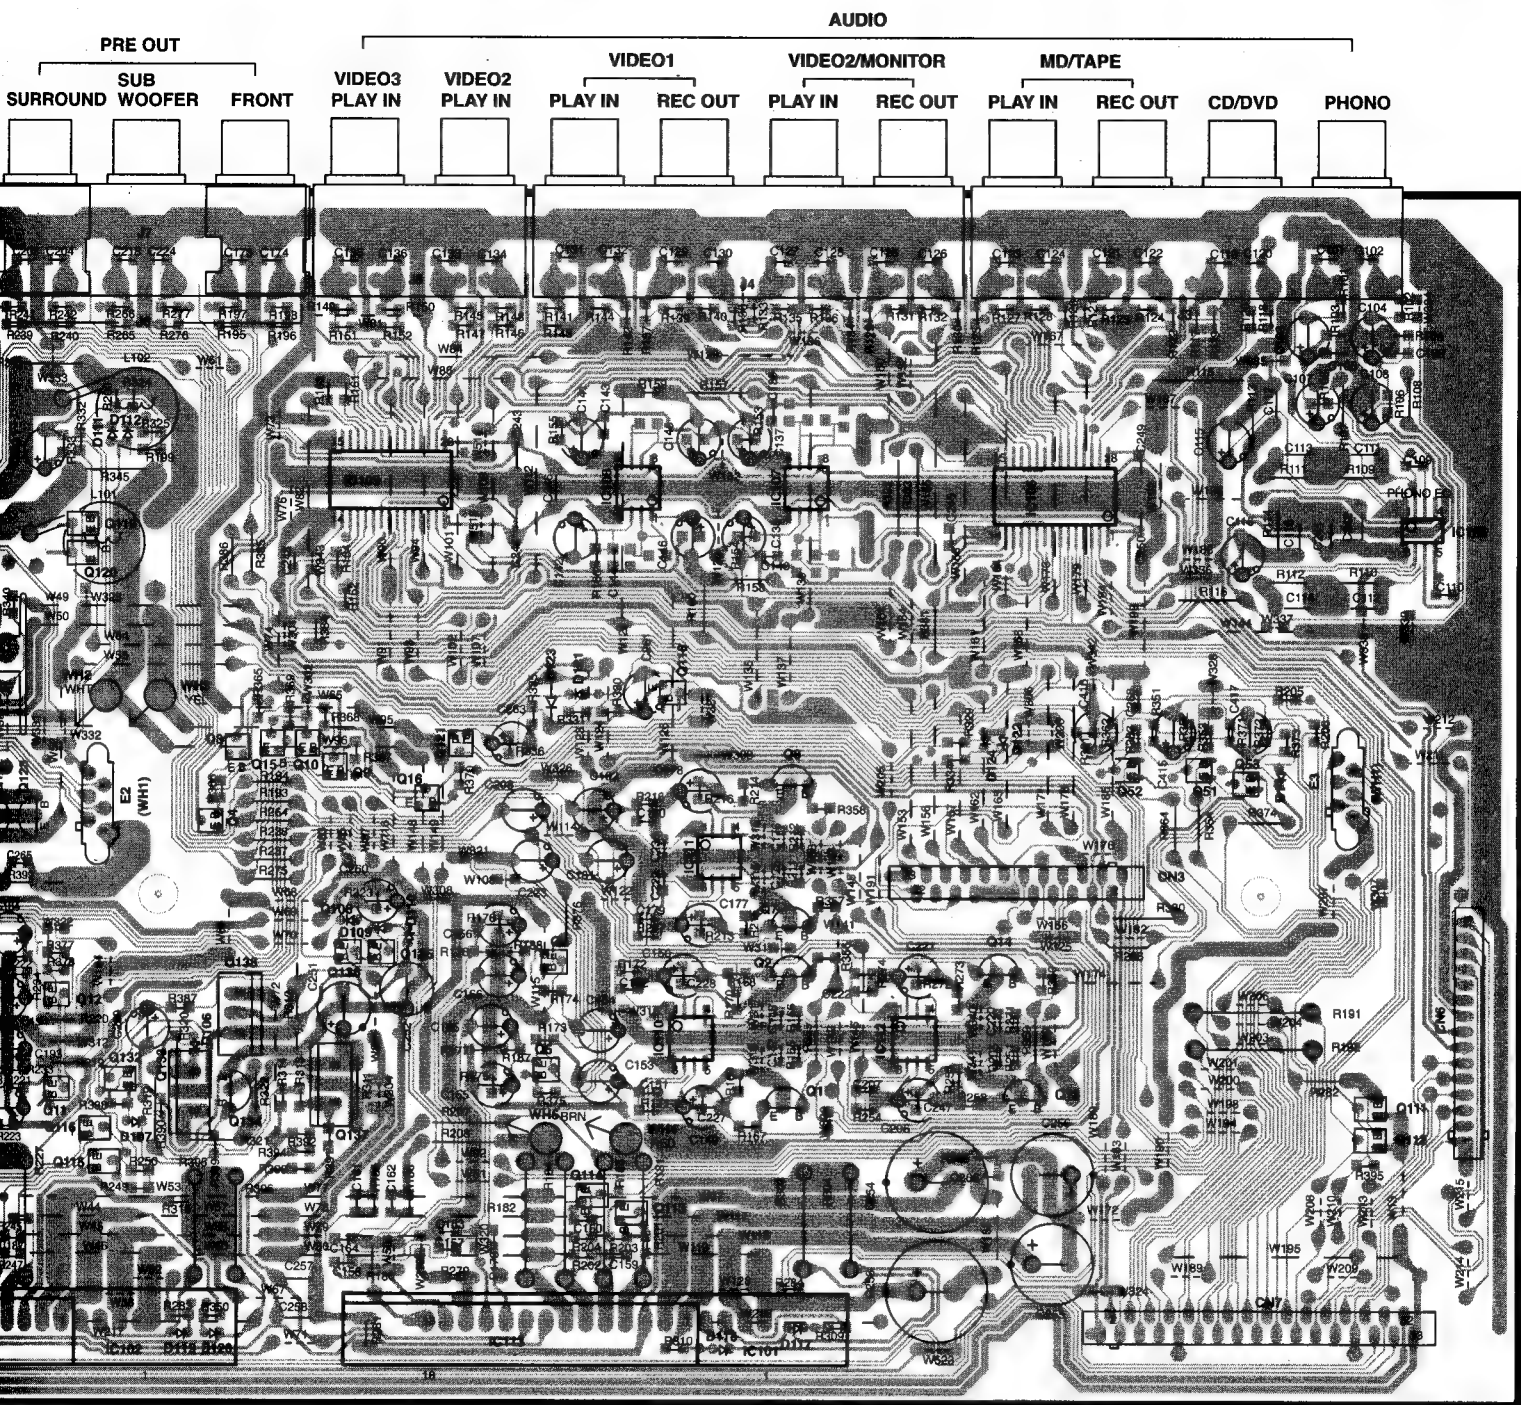


C BOARD (Component side view)

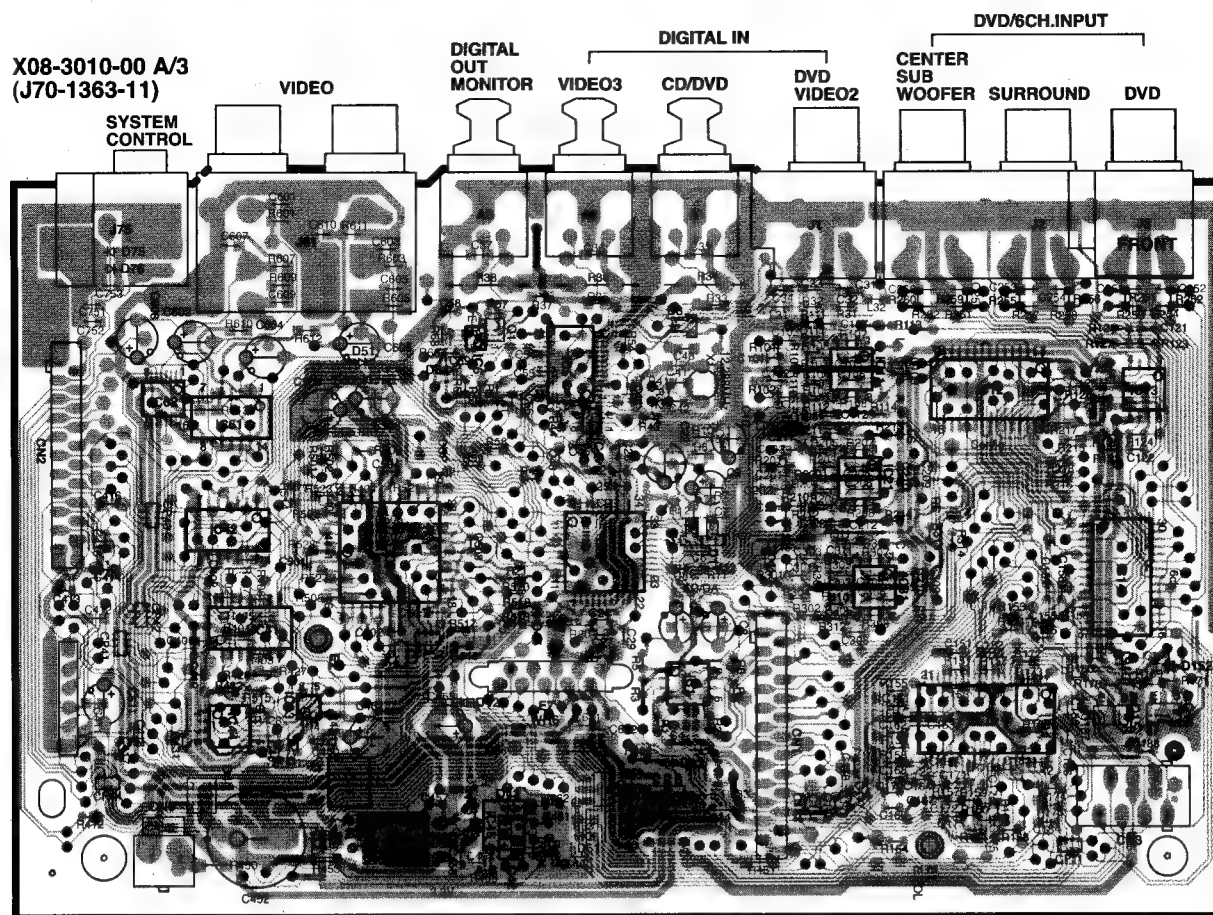


X14 B/6

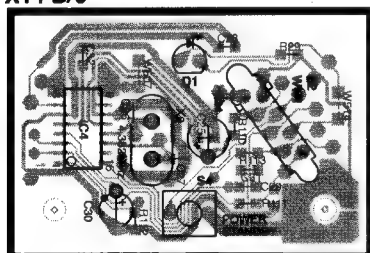


X14 D/6

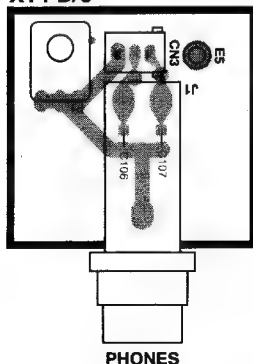


X14-7120-10 A/6 (J70-1409-11)

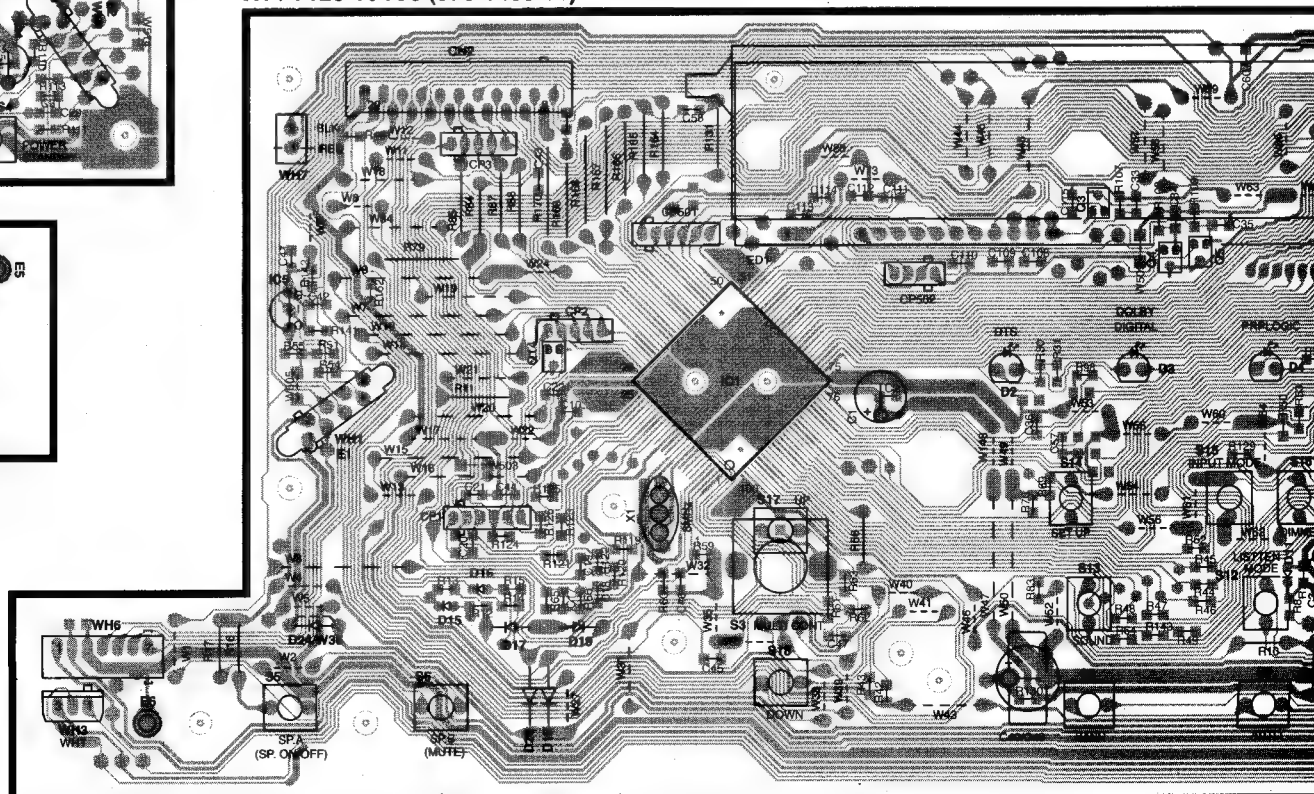



D/6CH.INPUT

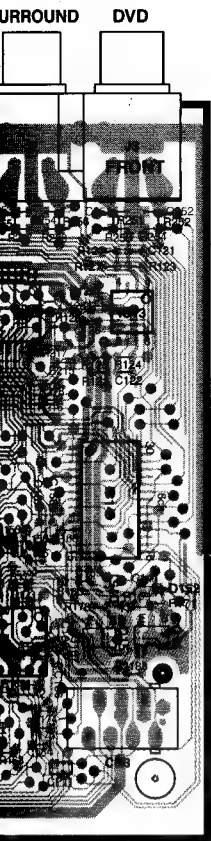


X14 C/6

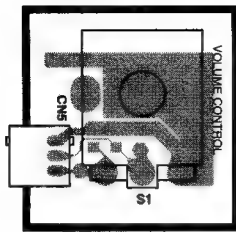


X08 C/3

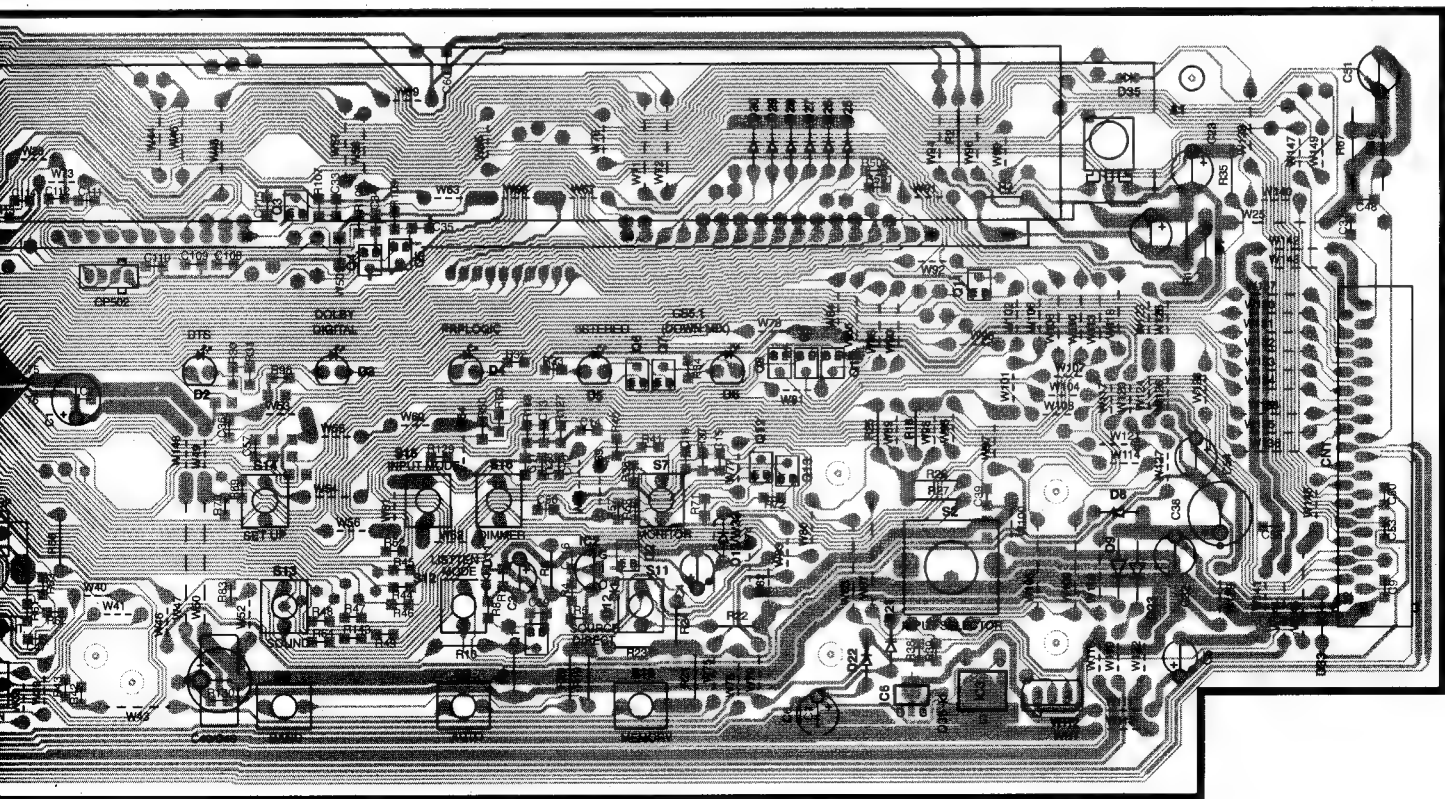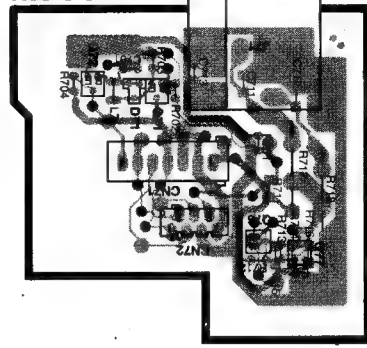


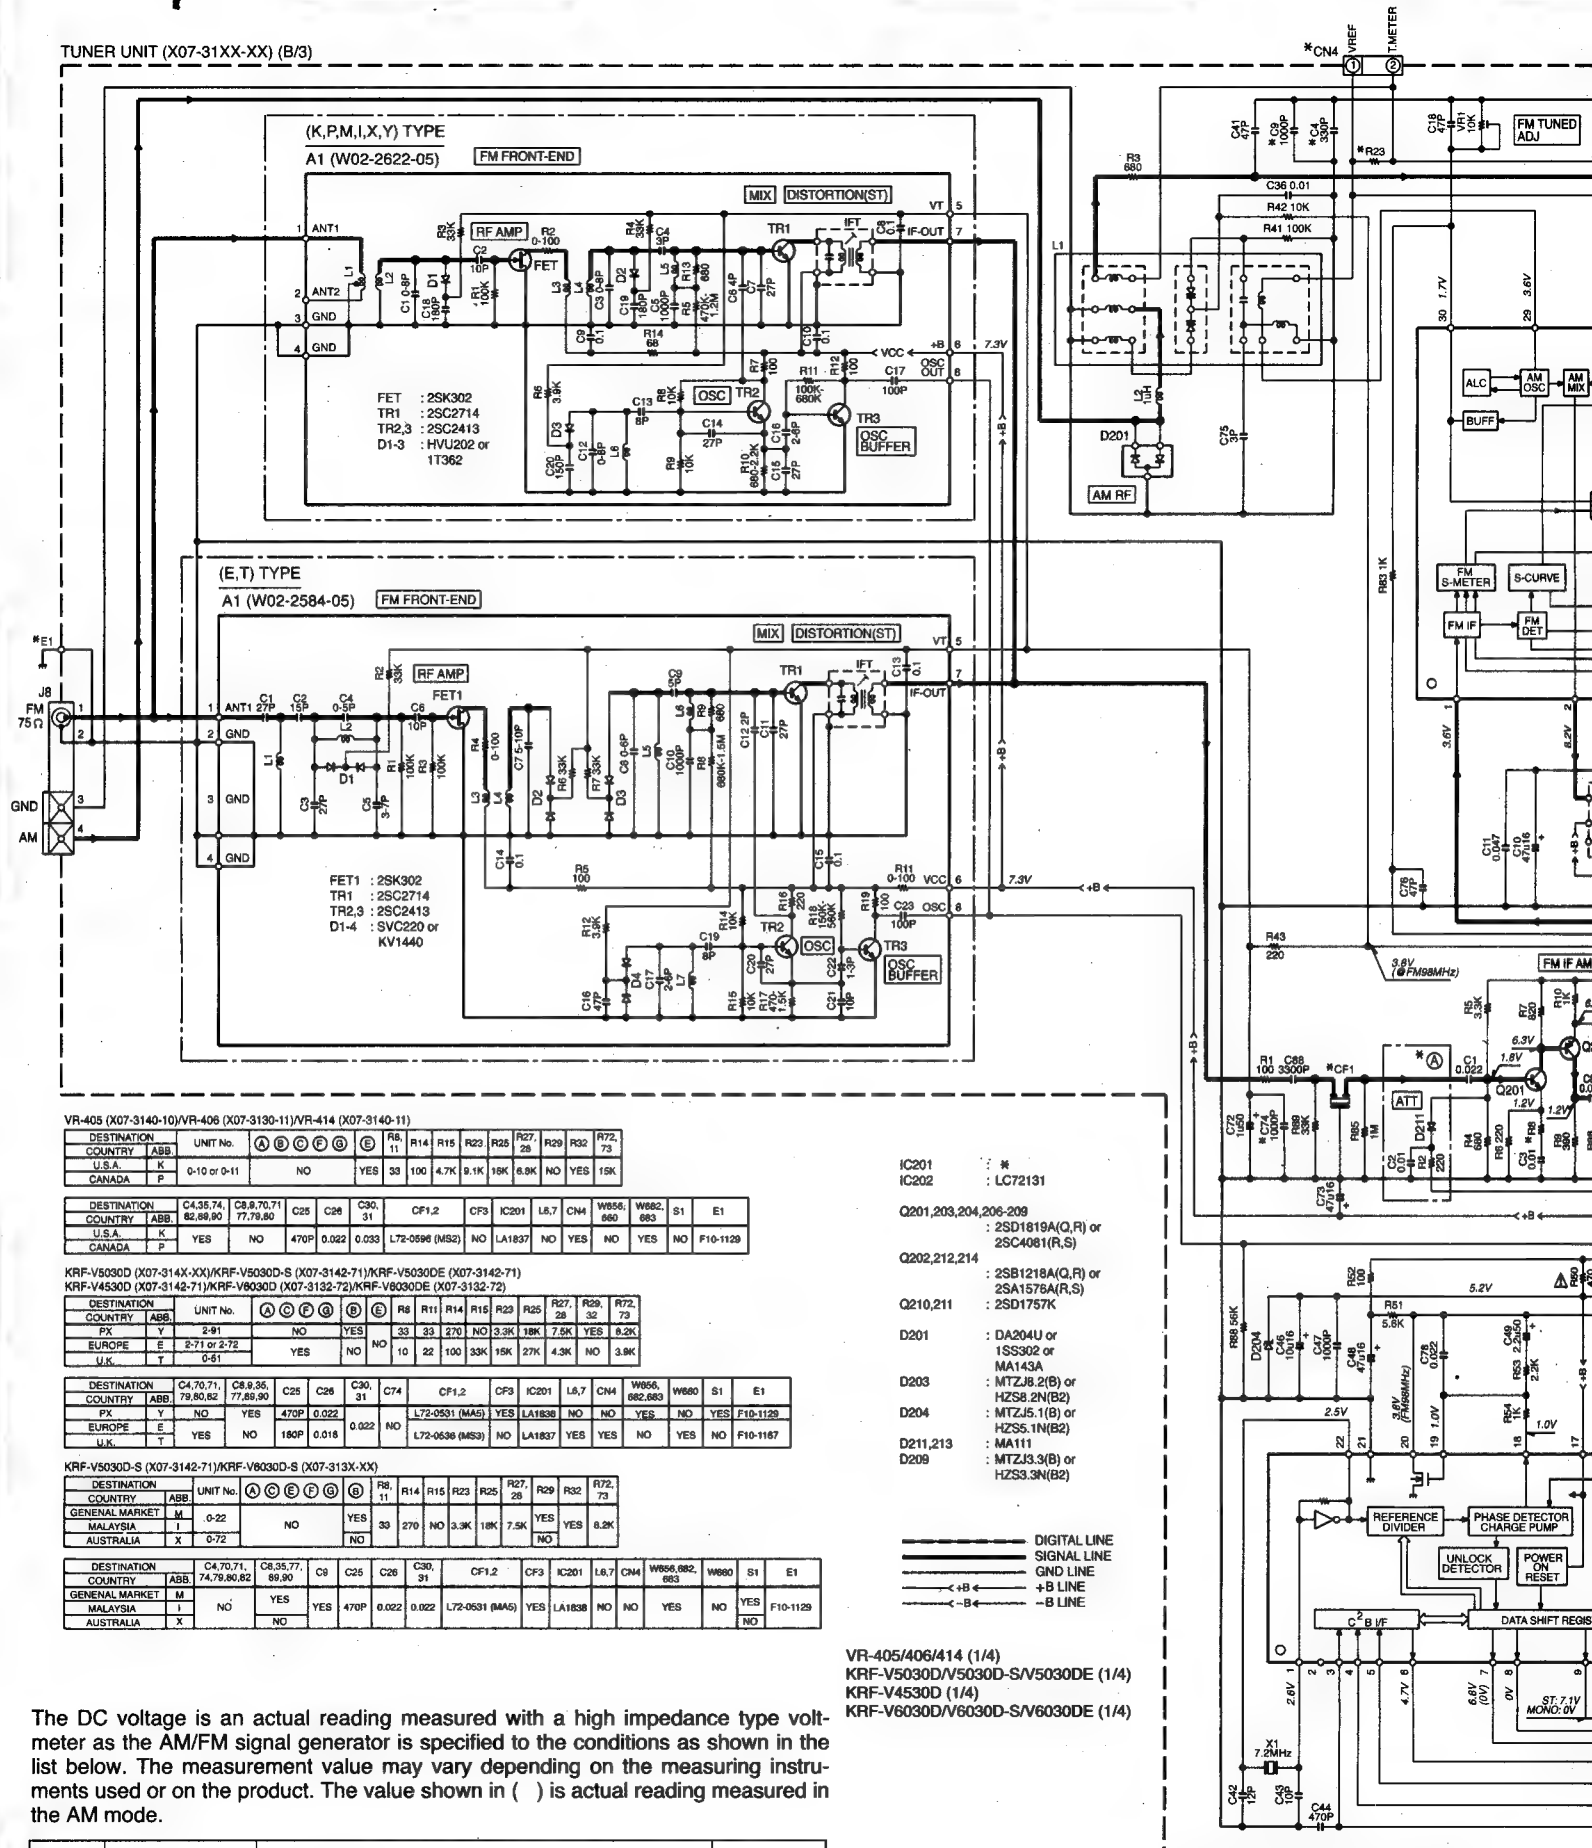



The DC voltage is an actual reading measured with a high impedance type voltmeter as the AM/FM signal generator is specified to the conditions as shown in the list below. The measurement value may vary depending on the measuring instruments used or on the product. The value shown in () is actual reading measured in the AM mode.


MODE	CARRIER	MODULATION		ANT INPUT
		FREQUENCY	DEVIATION	
FM	98MHz	1kHz	STEREO 67.5kHz 7.5kHz(Pilot)	60dB
AM	1000(999)kHz	400Hz	MONO 30% MOD	60dB

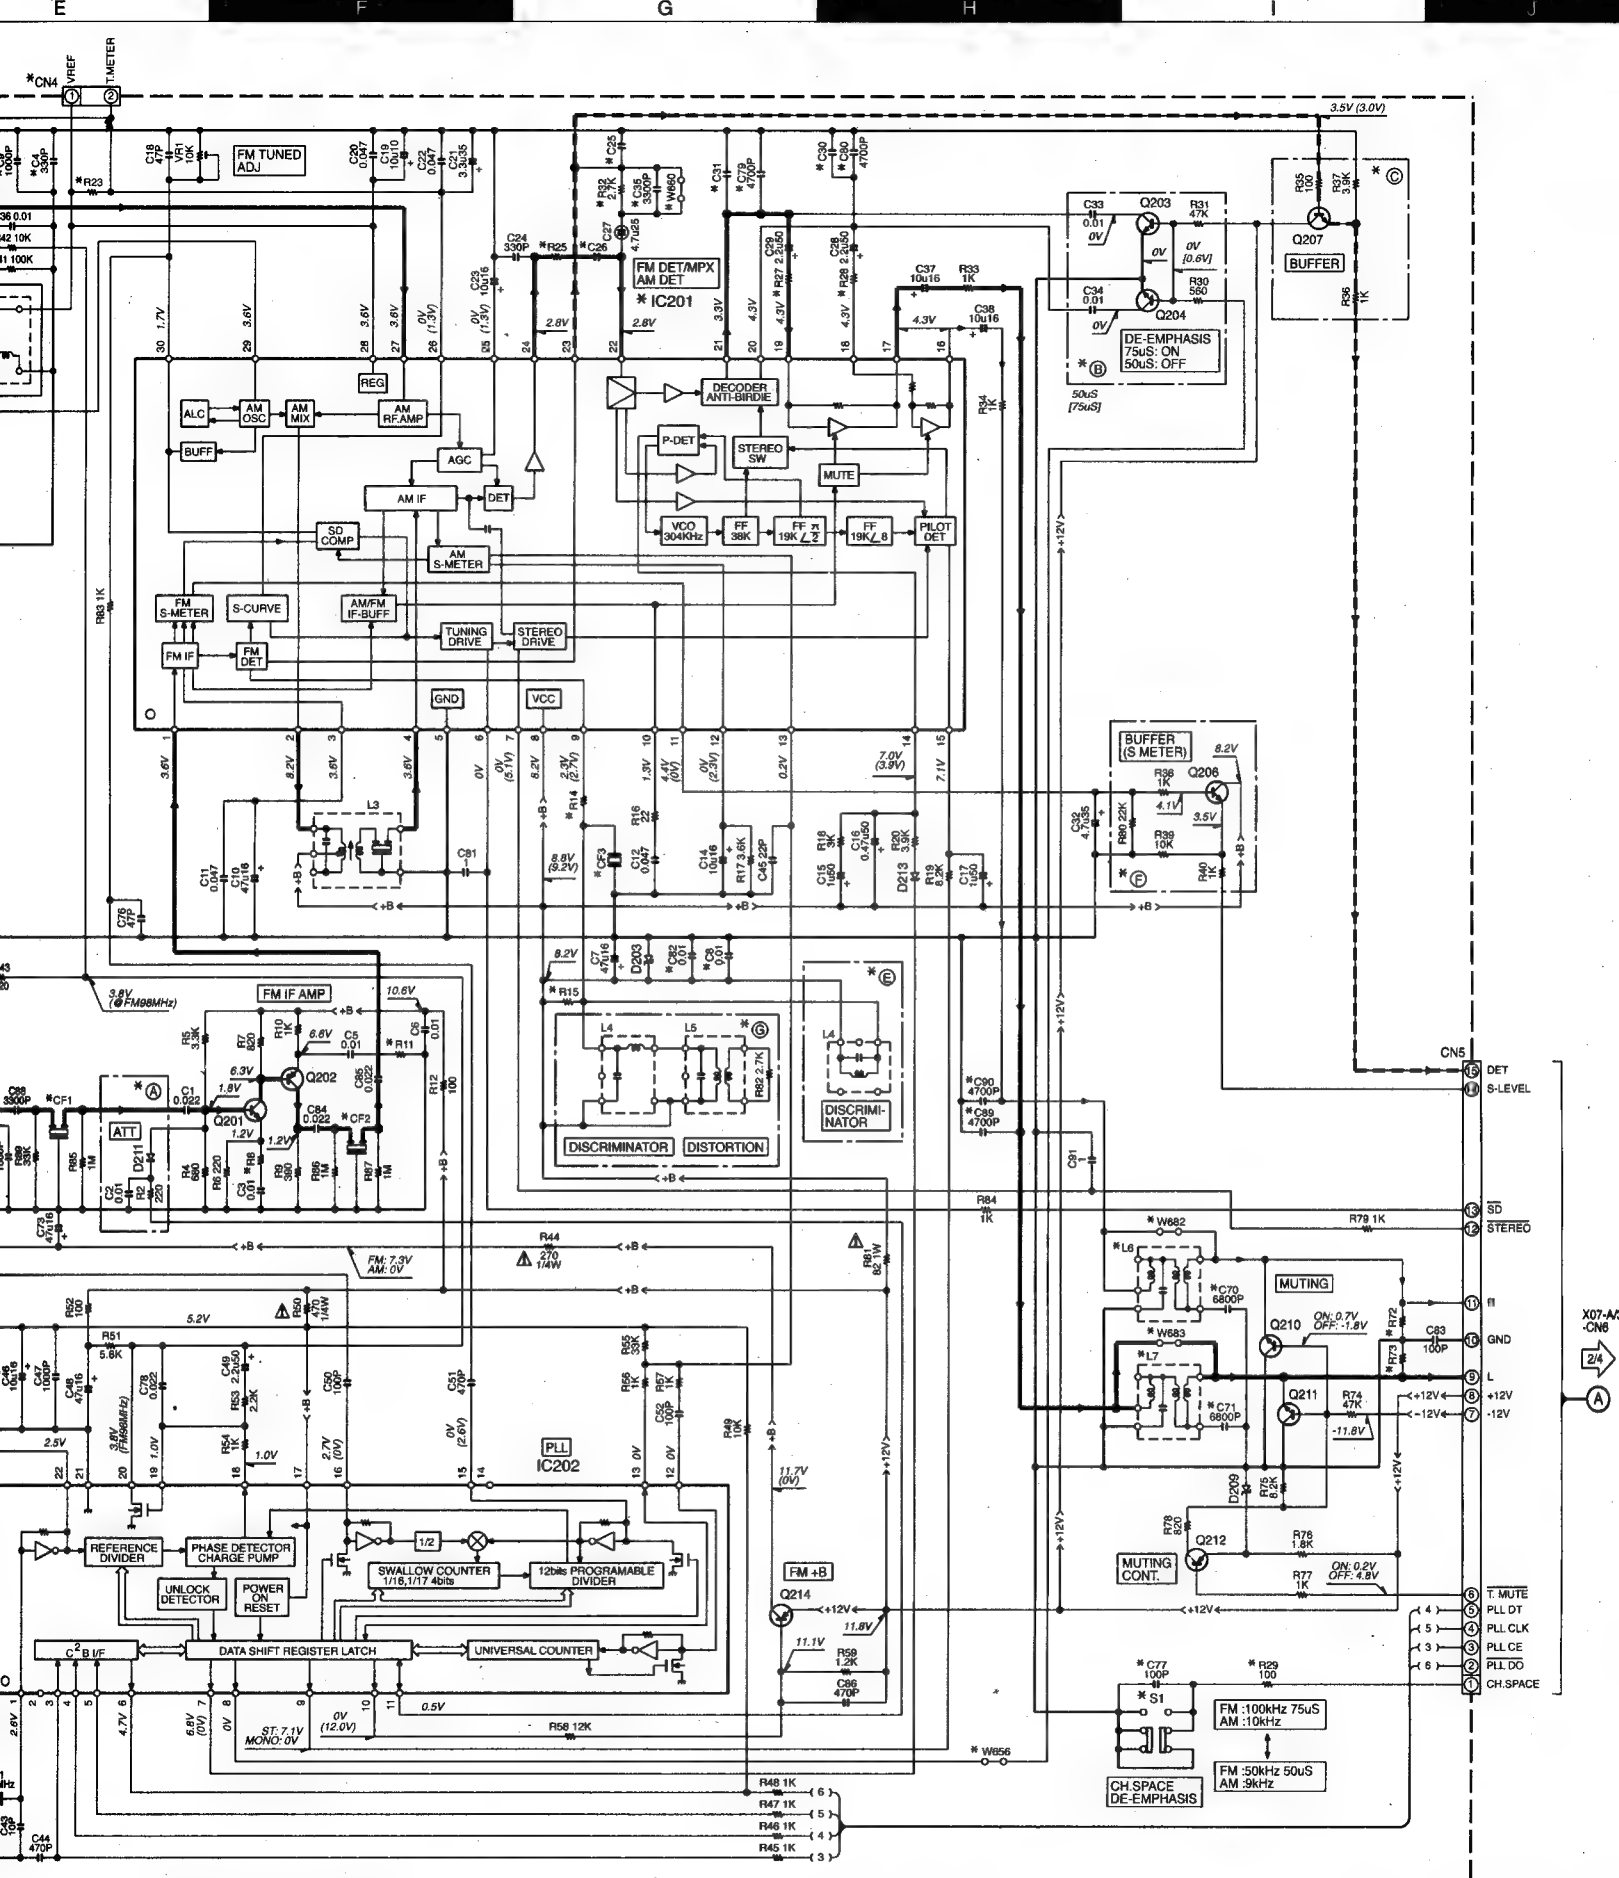

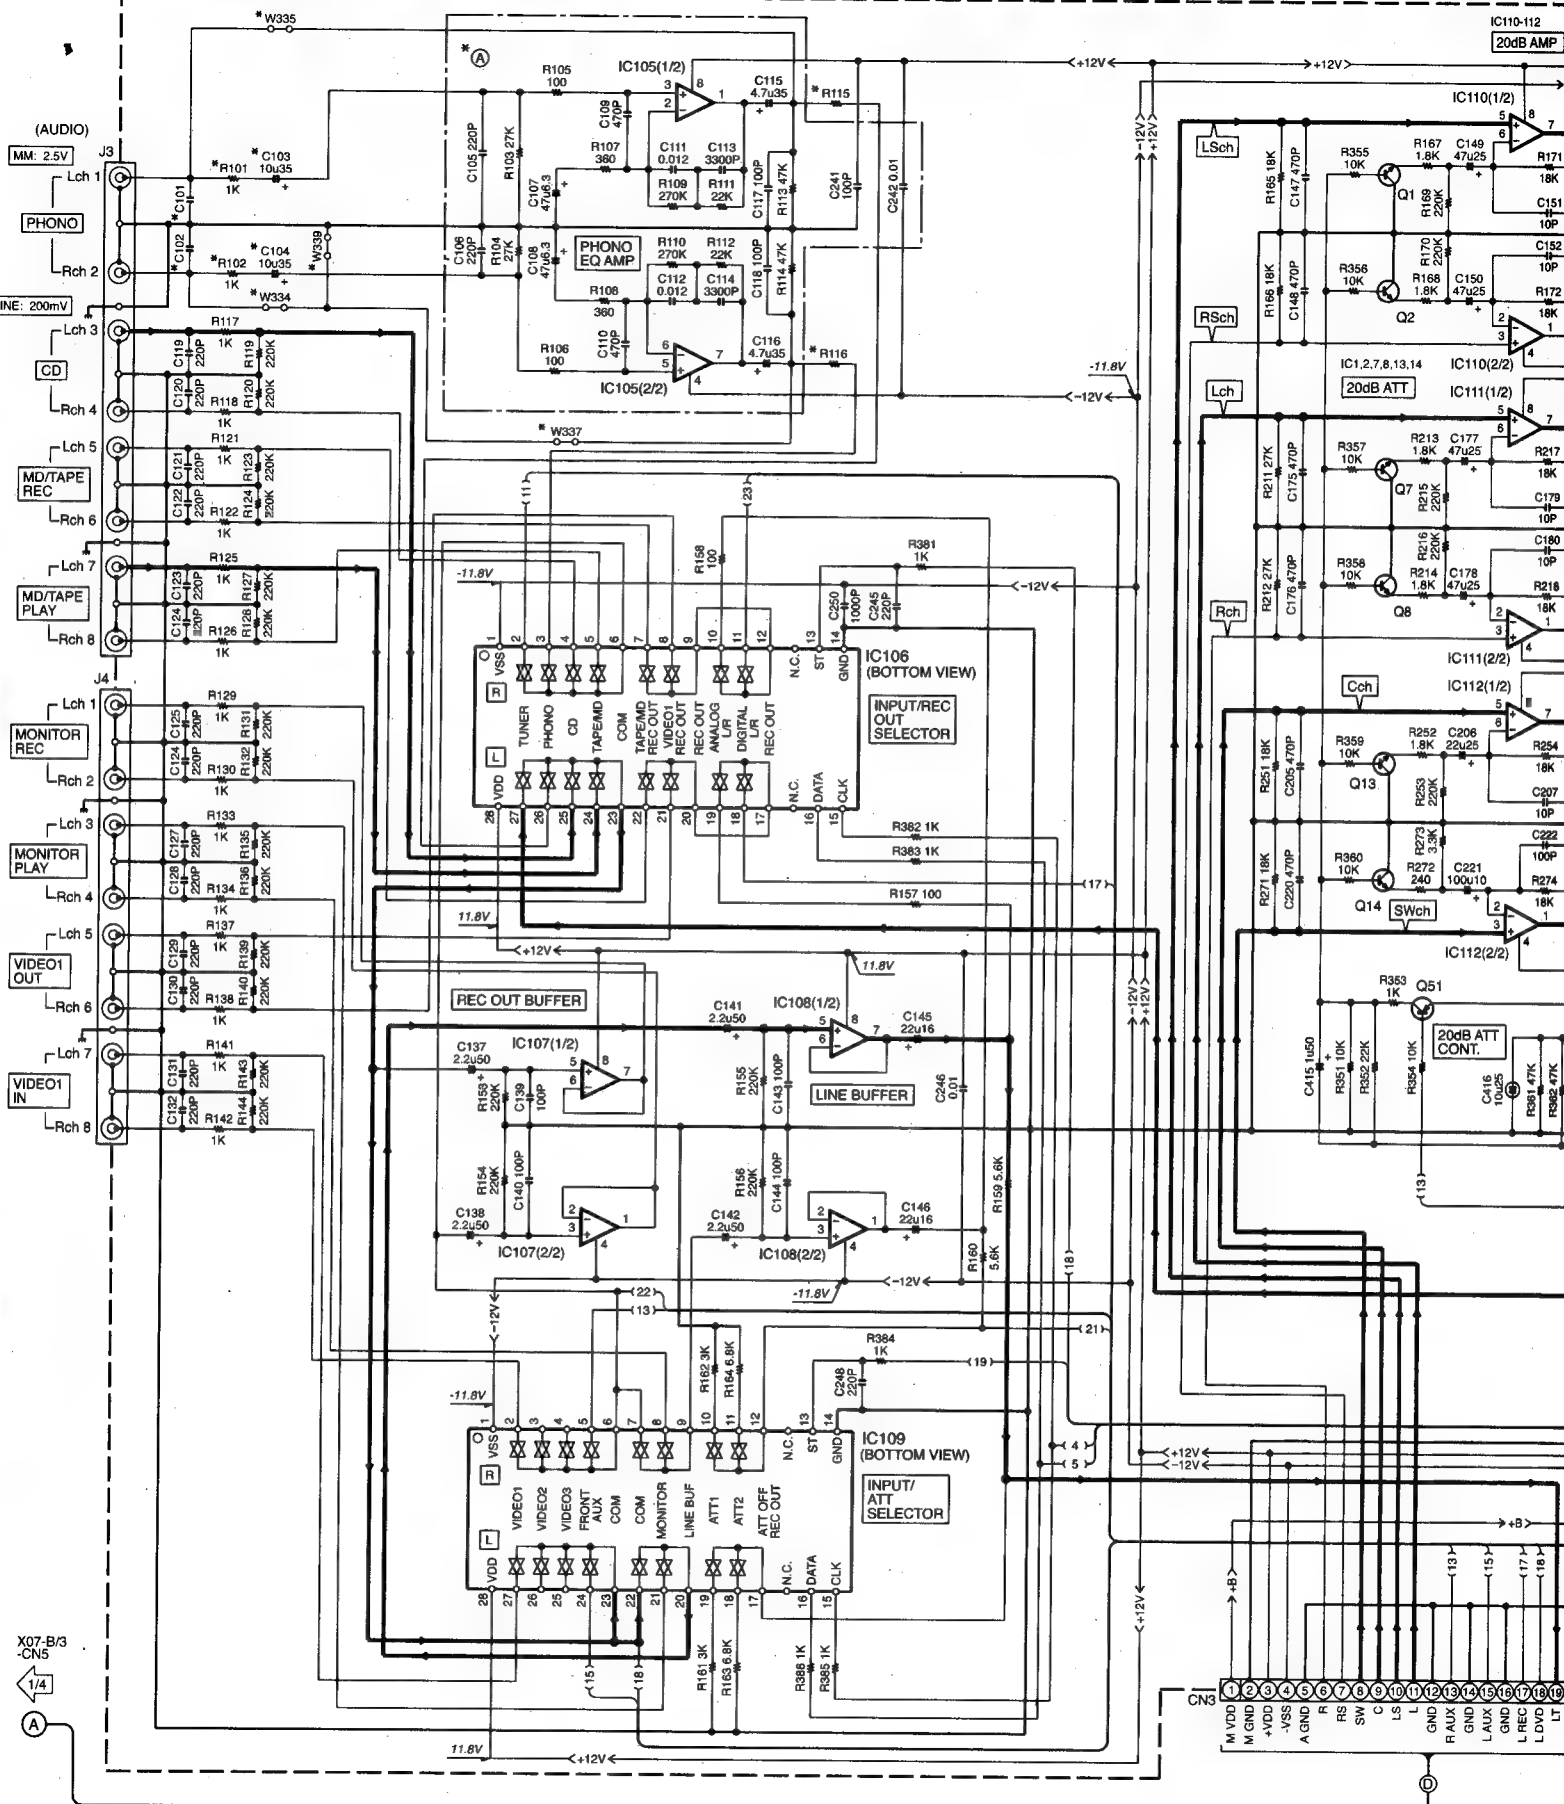

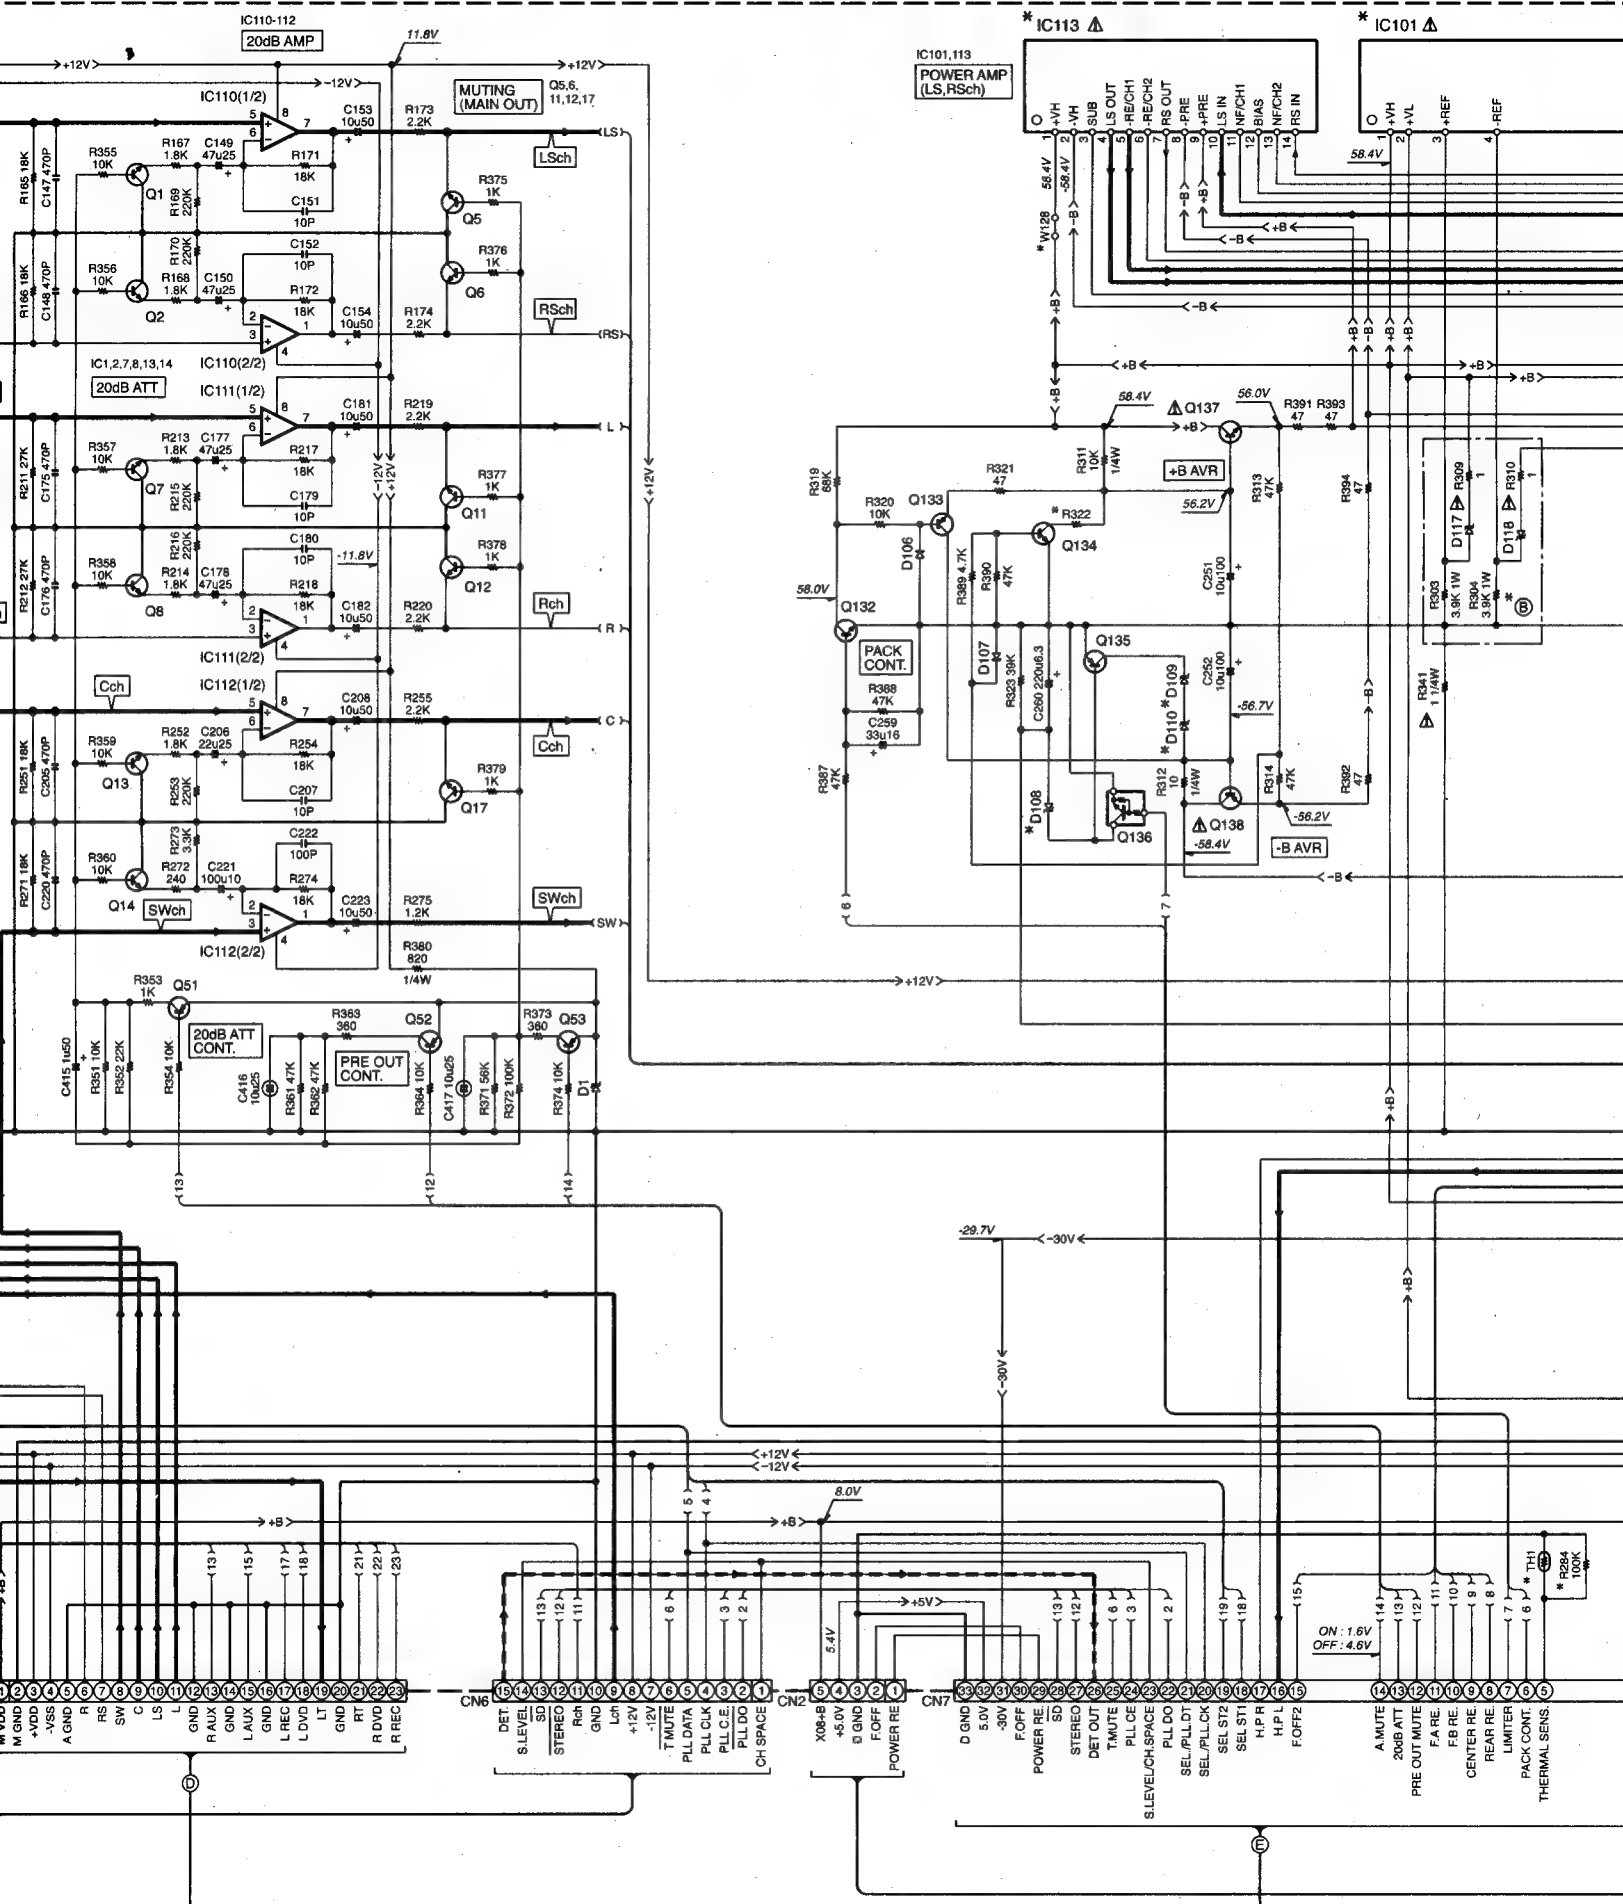

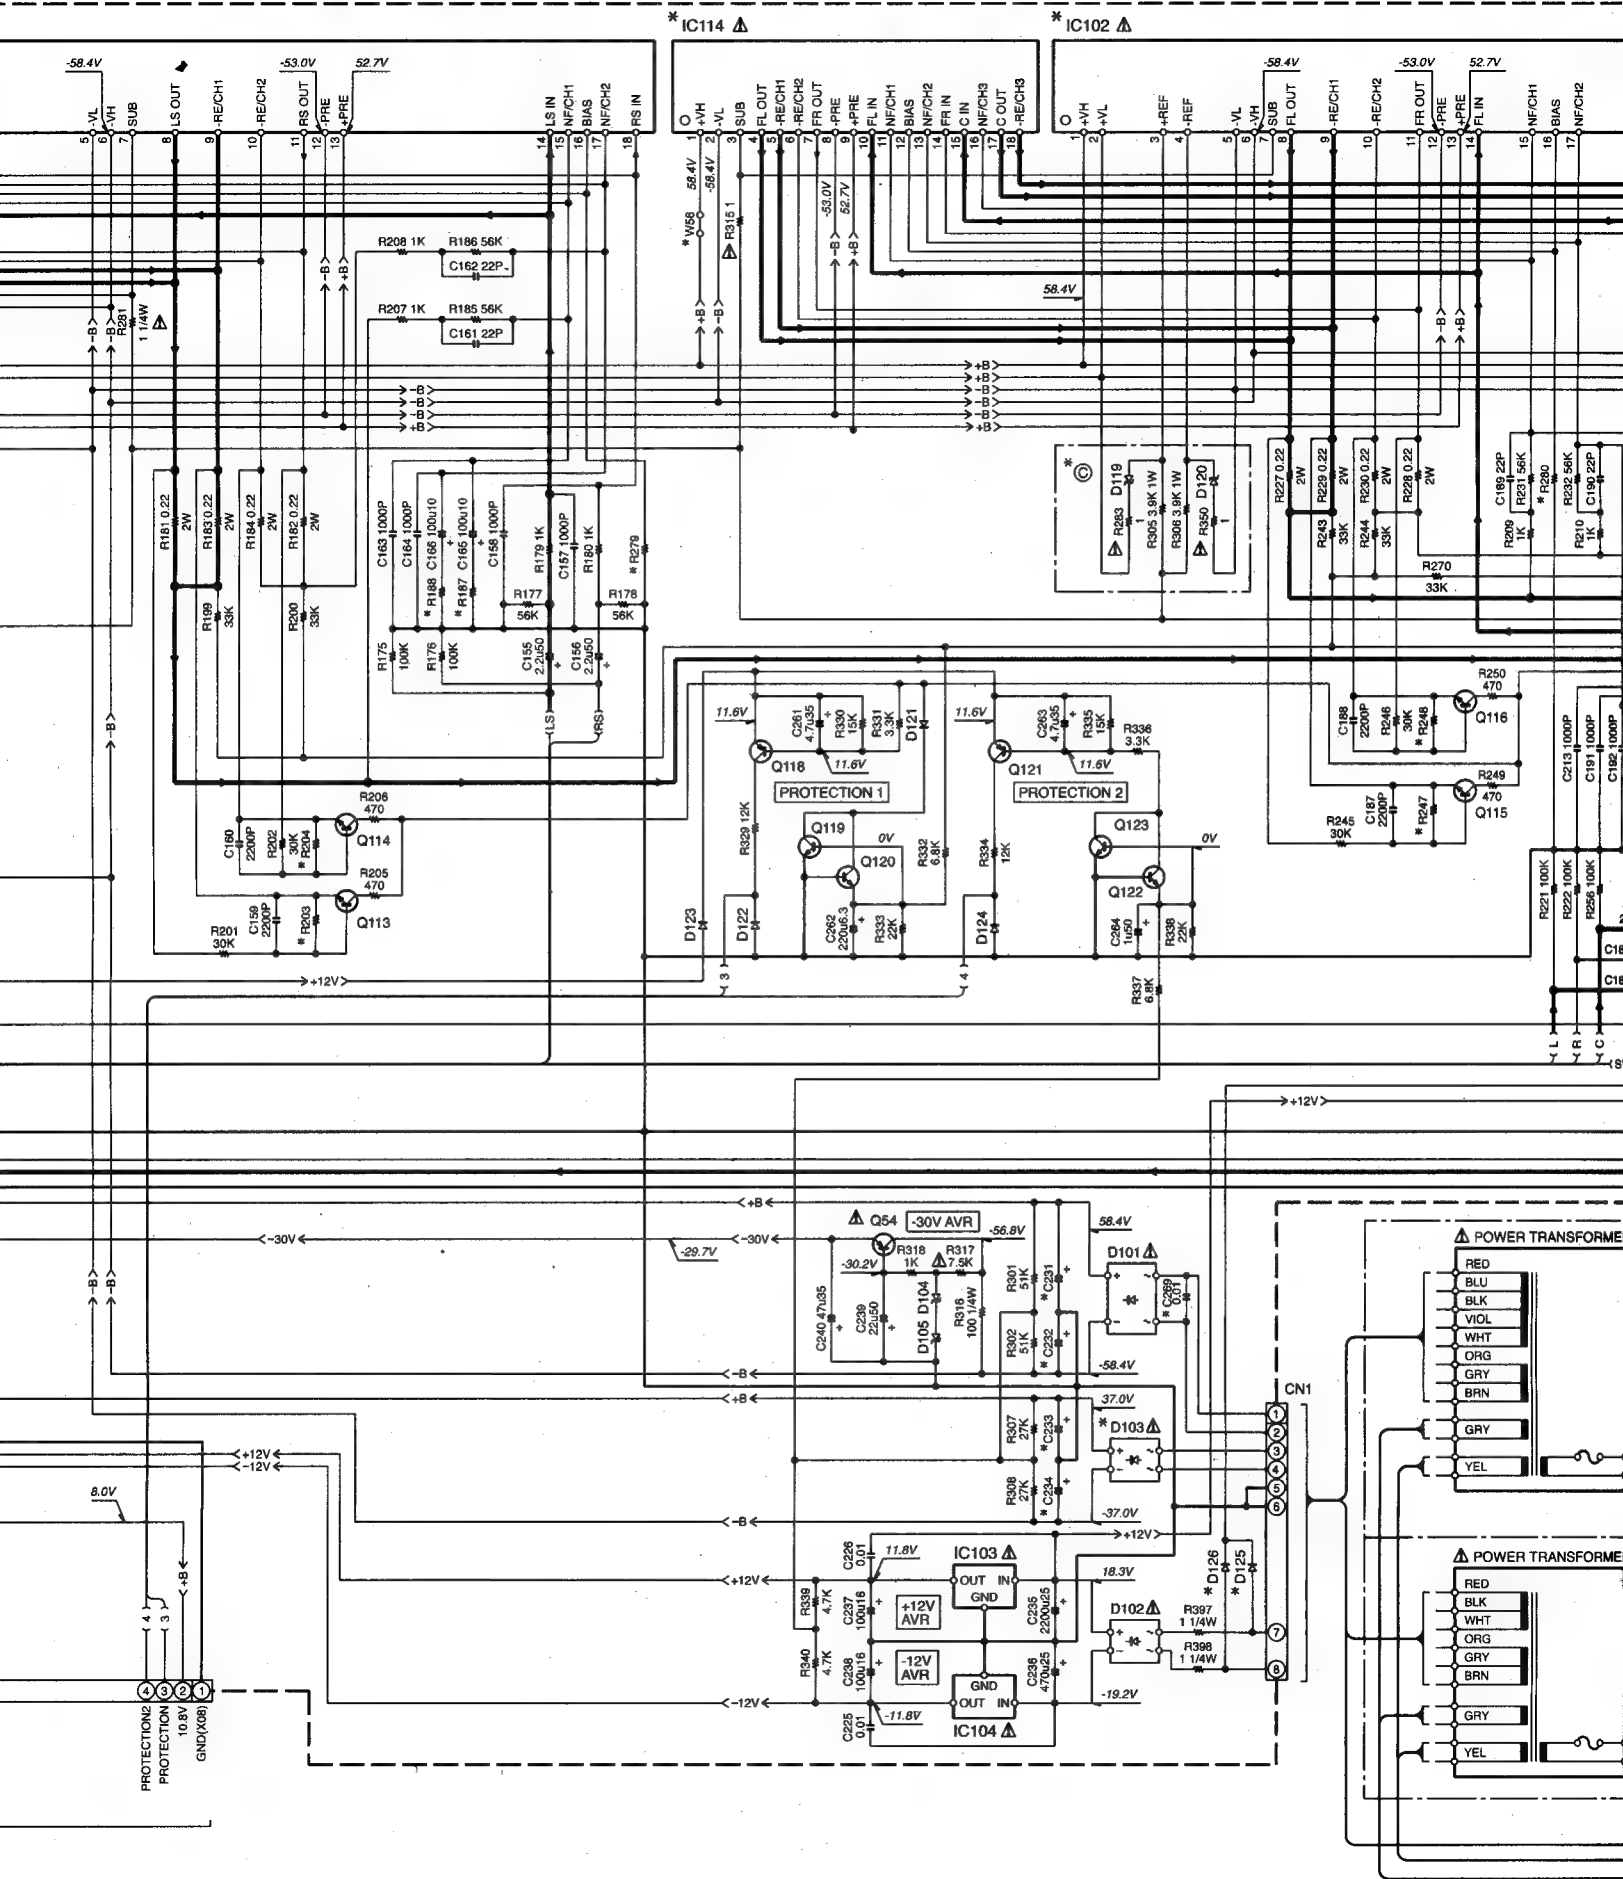

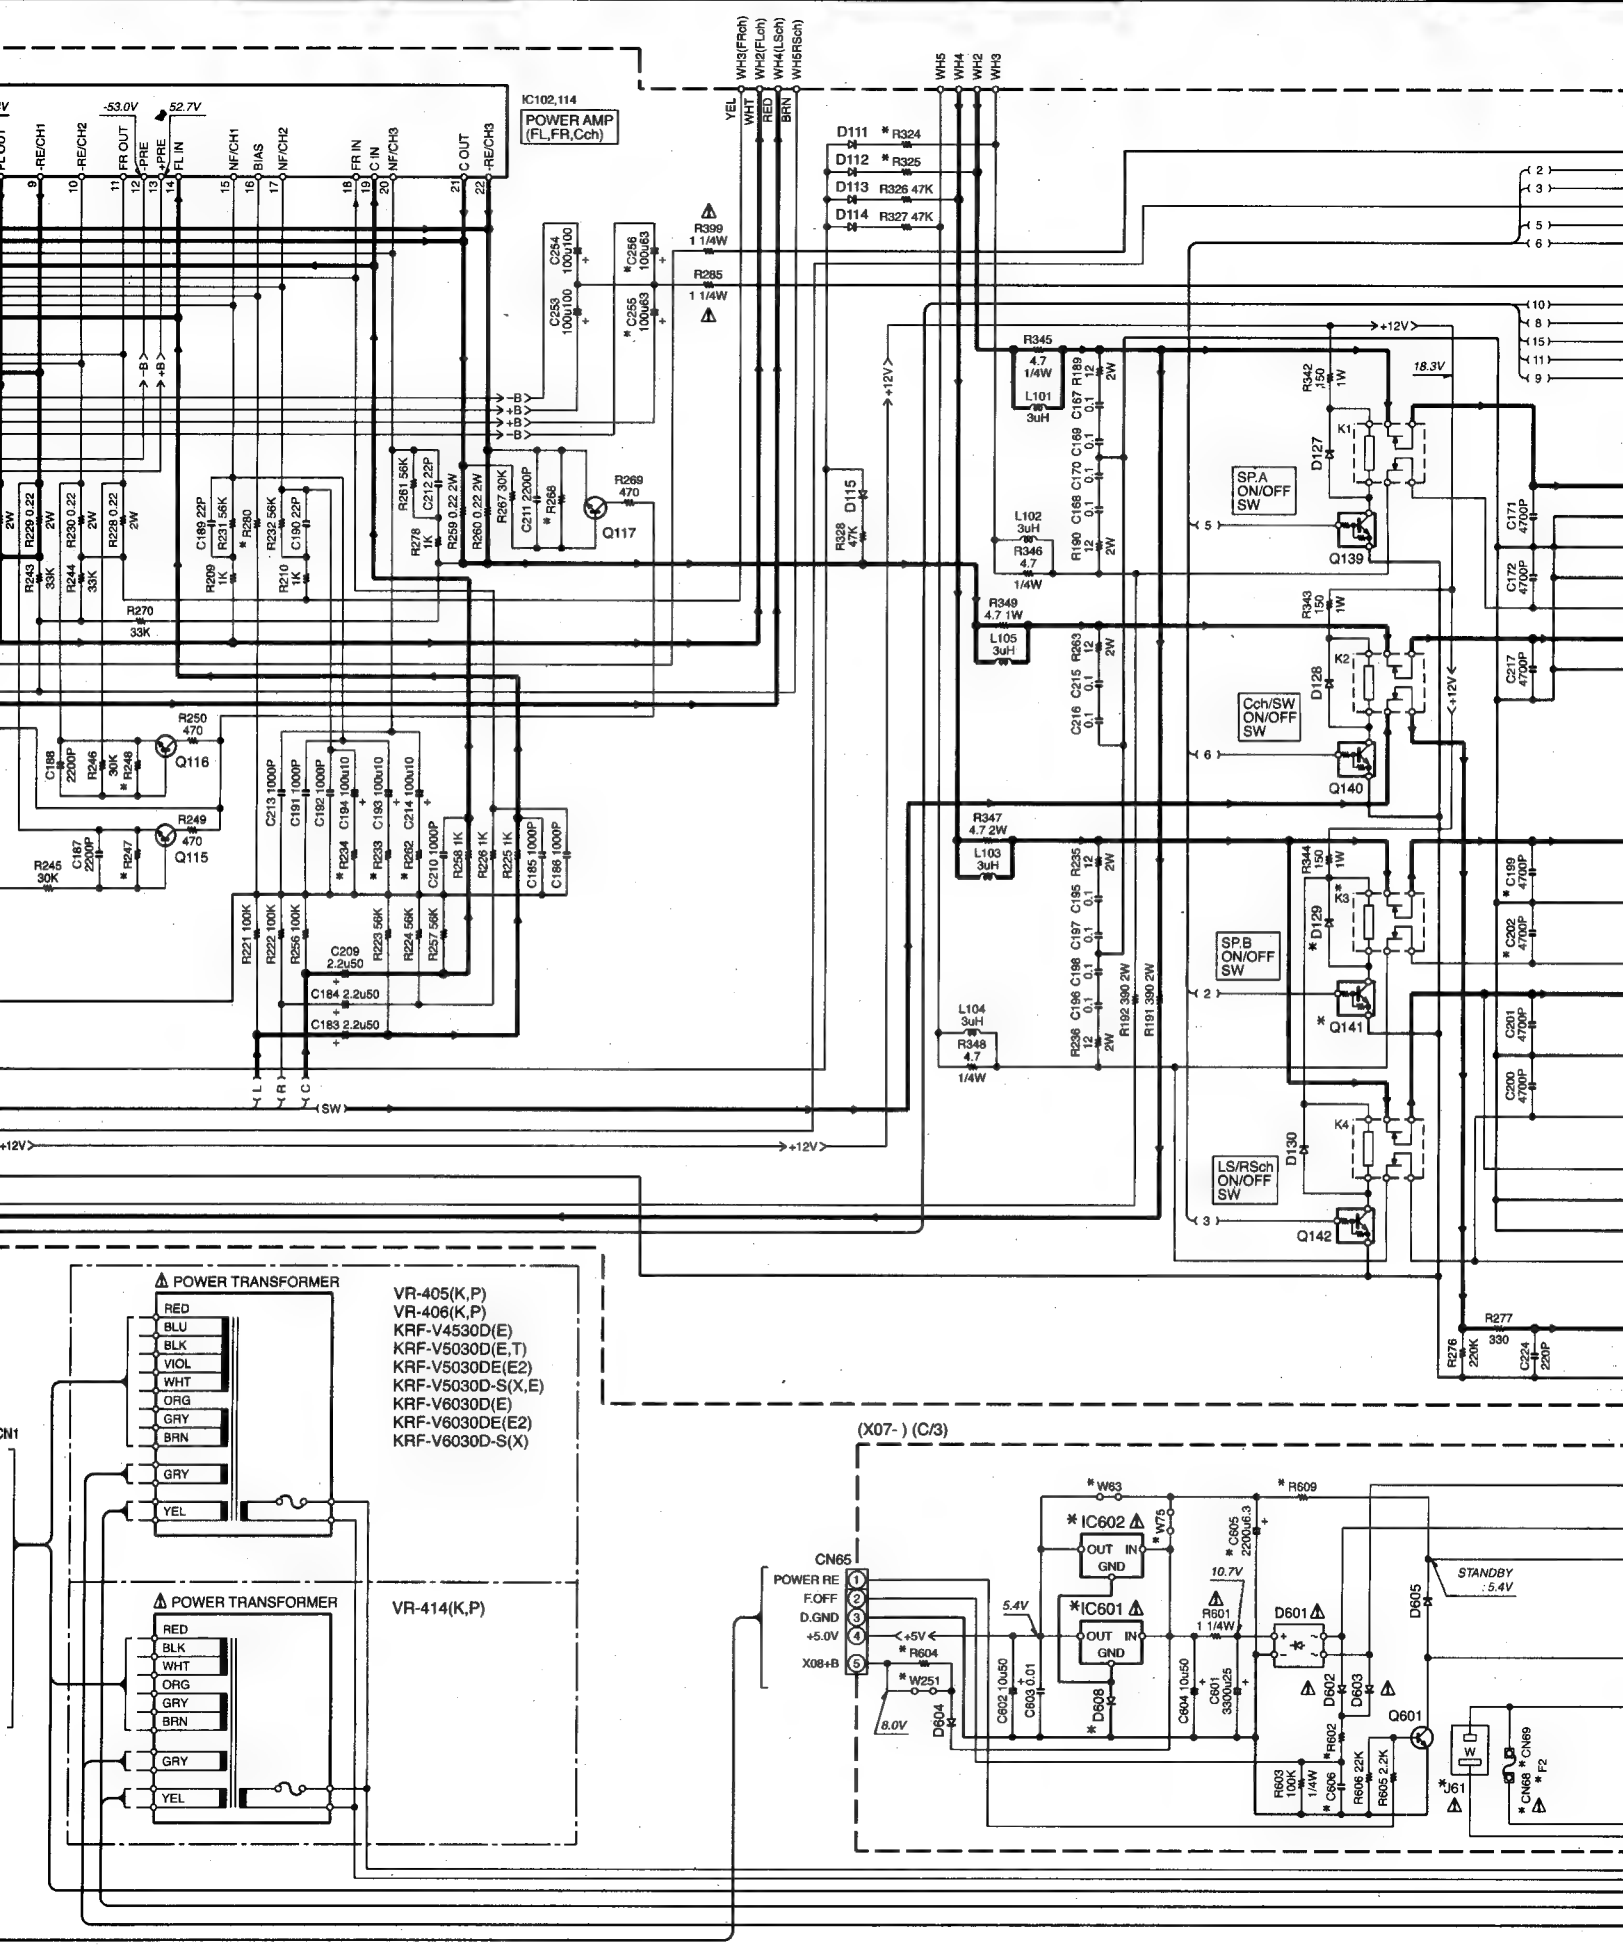

(X07-31XX-XX) (A/3)

(X07-) (A/3)

VR-406 (X07-3130-11)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	C101, 102	C103, 104, 199, 202, 255, 256	C231, 232	C233, 234	C269	D103	D108	D109	D110	D125, 126	D129	IC101	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102, 284
U.S.A.	K		0-11	YES			39P	YES	4700u75	3300u42	NO	D5SBA20F03	UDZ8.2B	UDZ15B	UDZ16B	NO	YES	STK412-020A	STK413-020A	NO	SCREW	8P	YES	YES	YES
CANADA	P																								

KRF-V6030D/V6030DE (X07-3132-72)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	C101, 102	C103, 104, 199, 202, 255, 256	C231, 232	C233, 234	C269	D103	D108	D109	D110	D125, 126	D129	IC101	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102, 284
U.S.A.	K		2-72	YES			39P	YES	4700u63	3300u35	NO	RBV-602LFA	UDZ6.2B	UDZ10B	UDZ13B	NO	YES	STK412-020A	STK413-020A	NO	SCREW	8P	YES	YES	YES
EUROPE	E																								

KRF-V6030D-S (X07-313X-XX)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	C101, 102	C103, 104, 199, 202, 255, 256	C231, 232	C233, 234	C269	D103	D108	D109	D110	D125, 126	D129	IC101	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102, 284
U.S.A.	K		0-22	YES			39P	YES	4700u75	3300u42	NO	RBV-602LFA	UDZ8.2B	UDZ15B	UDZ16B	YES	NO	STK412-020A	STK413-020A	NO	SCREW	8P	YES	YES	YES
EUROPE	E																								

VR-405 (X07-3140-10)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	C101, 102	C103, 104, 199, 202, 255, 256	C231, 232	C233, 234	C255, 256	D103	D108	D109	D110	D125, 126	D129	IC101	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102, 284
U.S.A.	K		0-10	NO	YES		220P	NO	4700u75	3300u42	YES	D5SBA20F03	UDZ6.8B	UDZ16B	UDZ13B	NO	NO	STK412-010A	STK413-010A	NO	LEVER	4P	NO	NO	NO
CANADA	P																								

VR-414 (X07-3140-11)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	C101, 102	C103, 104, 199, 202, 255, 256	C231, 232	C233, 234	C255, 256	D103	D108	D109	D110	D125, 126	D129	IC101	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102, 284
U.S.A.	K		0-11	NO			220P	NO	4700u63	YES	NO	UDZ3.3B	UDZ13B	NO	NO	YES	LEVER	4P	NO	NO	NO	1K	2.7K	15K	10K
CANADA	P																								

KRF-V5030D-S (X07-314X-XX)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	C101, 102	C103, 104, 255, 256	C199, 202, 269	C231, 232	C233, 234	D103	D108	D109	D110	D125, 126	D129	IC101	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102, 284
U.S.A.	K		0-21	YES			39P	YES	NO	4700u75	3300u42	RBV-602LFA	UDZ6.8B	UDZ16B	UDZ13B	YES	NO	STK412-010A	STK413-010A	NO	LEVER	4P	NO	NO	YES
EUROPE	E																								

KRF-V5030D (X07-314X-XX)/KRF-V4530D/V5030DE/V5030D-S (X07-3142-71)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	C101, 102	C103, 104, 255, 256	C199, 202, 269	C231, 232	C233, 234	D103	D108	D109	D110	D125, 126	D129	IC101	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102, 284
U.S.A.	K		2-91	YES			39P	YES	NO	4700u75	3300u42	D5SBA20F03	UDZ6.8B	UDZ16B	UDZ13B	YES	NO	STK412-010A	STK413-010A	NO	LEVER	4P	NO	NO	YES
EUROPE	E																								

(X07-) (C/3)

VR-406 (X07-3130-11)

DESTINATION			UNIT No.	C805	C806	CN62	CN63, 64, 68, 69	D808	F1	F2	IC801	IC802	J61	K801	P61	R802	R804	R809	R810	T1	W23, 75, 250	W63, 251
COUNTRY	ABB.																					
U.S.A.	K		0-11	NO	0.1	YES		1SS133 or HSS104A	F50-0077 8A	NO	YES	NO	E03-0148	S76-0099	YES	30K 1/4W	10 1/4W	27 1/4W	YES	L07-2758 or L07-2761	YES	NO
CANADA	P																					

KRF-V6030D/V6030DE (X07-3132-72)

DESTINATION		ABB.	UNIT No.	C805	C806	CN62,64, 98,99	CN63	D608	F1	F2	IC801	IC602	J61	K601	P61	R602	R604	R609	R610	T1	W23,63, 250,251	W75
COUNTRY																						
EUROPE	E		2-72	NO	0.1	YES	NO	RB721Q	F05-3121 T3.15AL	F05-2525 T2.5AL	NO	YES	E03-0148	S76-0107	NO	150K 1/4W	39 1/4W	150 1/4W	NO	L07-2758 or L07-2761	NO	YES

KRF-V6030D-S (X07-313X-XX)

DESTINATION	COUNTRY	ABB.	UNIT No.	C605	C606	CN62	CN63, 64, 66, 69	D608	F1	F2	IC601	IC602	J61	K601	P61	R602	R604	R609	R610	T1	W23	W63, 251	W75	W250
U.S.A.	K		0-22	YES	0.068	NO	YES	YES	NO	RB721Q	F05-3121 T3.15AL	NO	NO	YES	E03-0148	S76-0107	NO	20K 1/4W	NO	2.2 1/4W	NO	L07-2805	NO	YES
EUROPE	E																							

VR-405 (X07-3140-10)

DESTINATION			UNIT No.	C605	C606	CN62	CN63,64, 66,69	D608	F1	F2	IC601	IC602	J61	K601	P61	R602	R604	R609	R610	T1	W23,75, 250	W63 251
COUNTRY	ABB.																					
U.S.A.	K		0-10	NO	0.1	YES	NO	1SS133 or HSS104A	F50-0077 8A	NO	YES	NO	E03-0148	S76-0099	YES	30K 1/4W	10 1/4W	27 1/4W	YES	L07-2758 or L07-2761	YES	NO
CANADA	P																					

VR-414 (X07-3140-11)


DESTINATION		UNIT No.	C605	C606	CN62	CN63,64, 66,69	D608	F1	F2	IC601	IC602	J61	K601	P61	R602	R604	R609	R610	T1	W23,75, 250	W63 251
COUNTRY	ABB.																				
U.S.A.	K	0-11	NO	0.1	YES	NO	1SS133 or HSS104A	F50-0076 6.3A	NO	YES	NO	E03-0148	S76-0099	YES	30K 1/4W	10 1/4W	27 1/4W	YES	L07-2758 or L07-2761	YES	NO
CANADA	P																				

KRF-V5030D-S (X07-314X-XX)

DESTINATION	COUNTRY	ABB.	UNIT No.	C605	C606	CN62	CN63, 64, 66, 69	D608	F1	F2	IC601	IC602	J61	K601	P61	R602	R604	R609	R610	T1	W23	W63, 251	W75	W250
U.S.A.	K		0-21	YES	0.068	NO	YES	YES	NO	RB721Q	F05-2525 T2.5AL	NO	NO	YES	E03-0148	S76-0099	NO	20K 1/4W	NO	2.2 1/4W	NO	L07-2805	NO	YES
EUROPE	E																							

KRF-V5030DV4530D/V5030DE/V5030D-S (X07-314X-XX)

DESTINATION	COUNTRY	ABB.	UNIT No.	C605	C606	CN62	CN63, 64, 66, 69	D608	F1	F2	IC601	IC602	J61	K601	P61	R602	R604	R609	R610	T1	W23	W63, 251	W75	W250
U.S.A.	K		2-91	YES	0.068	NO	YES	YES	NO	RB721Q	F05-2525 T2.5AL	NO	NO	YES	E03-0148	S76-0099	NO	20K 1/4W	NO	2.2 1/4W	NO	L07-2805	NO	YES
EUROPE	E																							

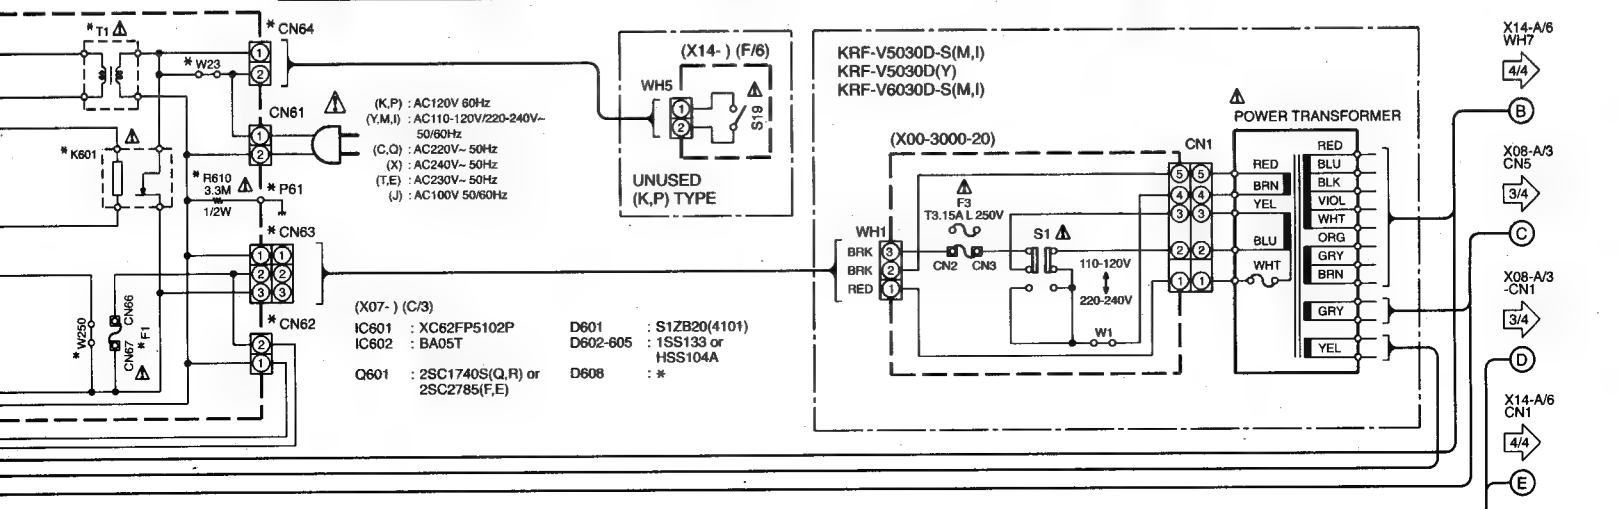

	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102, 284	R115, 116	R187, 188, 233, 234, 262	R203, 204, 247, 248, 268	R279, 280	R322	R324, 325	TH1	W56, 128, 334, 335, 337	W339
020A	STK413-020A	NO	SCREW	8P	YES	YES	YES	100	1.8K	9.1K	33K	18K	75K	NO	NO	YES

	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102	R115, 116	R187, 188, 233, 234, 262	R203, 204, 247, 248, 268	R279, 280	R284	R322	R324, 325	TH1	W56, 128, 334, 335, 337	W339
020A	STK413-020A	NO	SCREW	8P	YES	YES	YES	100	2.4K	9.1K	33K	NO	18K	75K	YES	NO	YES

	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102	R115, 116	R187, 188, 233, 234, 262	R203, 204, 247, 248, 268	R279, 280	R284	R322	R324, 325	TH1	W56, 128, 334, 335, 337	W339
020A	STK413-020A	NO	SCREW	8P	YES	YES	YES	100	1.8K	9.1K	33K	NO	18K	75K	YES	NO	YES

	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102	R115, 116	R187, 188, 233, 234, 262	R203, 204, 247, 248, 268	R279, 280	R284	R322	R324, 325	TH1	W56, 128, 334, 335, 337	W339
10A	STK413-010A	NO	LEVER	4P	NO	NO	NO	1K	2.2K	11K	33K	YES	10K	75K	NO	YES	NO

K3	Q141	R101, 102	R115, 116	R187, 188, 233, 234, 262	R203, 204, 247, 248, 268	R279, 280, 322	R284	R324, 325	TH1	W56, 128, 334, 335, 337	W339
NO	NO	NO	1K	2.7K	15K	10K	YES	200K	NO	YES	NO

	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102	R115, 116	R187, 188, 233, 234, 262	R203, 204, 247, 248, 268	R279, 280	R284	R322	R324, 325	TH1	W56, 128, 334, 335, 337	W339
0A	STK413-010A	NO	LEVER	4P	NO	NO	YES	100	2.2K	11K	33K	NO	10K	75K	YES	YES	NO

	IC102	IC113, 114	J1	J2	K3	Q141	R101, 102	R115, 116	R187, 188, 233, 234, 262	R203, 204, 247, 248, 268	R279, 280	R284	R322	R324, 325	TH1	W56, 128, 334, 335, 337	W339
0A	STK413-010A	NO	LEVER	4P	NO	NO	YES	100	2.2K	11K	33K	NO	10K	75K	YES	YES	NO

W3, 75, 250, 251	W83, 251
YES	NO


T1	W23, 63, 250, 251	W75
L07-2758 or L07-2761	NO	YES

R610	T1	W23	W83, 251	W75	W250
NO	L07-2805	NO	YES	NO	YES
NO	L07-2758 or L07-2761	NO	NO	YES	YES

W3, 75, 250, 251	W83, 251
YES	NO

R602	R604	R609	R610	T1	W23	W83, 251	W75	W250
2.2 1/4W	NO	L07-2805	NO	YES	NO	YES	NO	YES
1.80 1/4W	NO	L07-2758 or L07-2761	NO	NO	YES	YES	NO	YES

R602	R604	R609	R610	T1	W23	W83, 251	W75	W250
2.2 1/4W	NO	L07-2805	NO	YES	NO	YES	NO	YES
1.80 1/4W	NO	L07-2758 or L07-2761	NO	NO	YES	YES	NO	YES

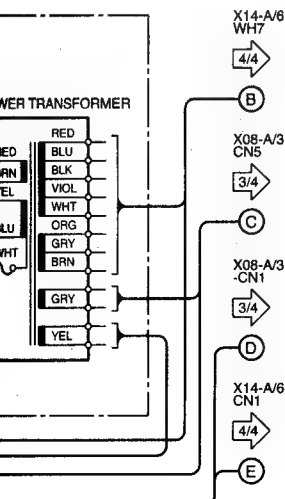


(X07-) (A/3)

IC101	:	*
IC102	:	*
IC103	:	KIA7812API
IC104	:	KIA7912PI
IC105	:	NJM4580ED
IC106, 109	:	NJU7313AM
IC107, 108, 110-12	:	NJM4565M
IC113	:	STK442-090
IC114	:	STK443-090
Q1, 2, 7, 8, 13, 14	:	2SC2785(F,E) or 2SC1740S(Q,R)
Q5, 6, 11, 12	:	2SD2351
Q17	:	2SC2878(B)
Q51-53, 118, 121, 135	:	2SA1576A(R,S) or 2SB1218A(Q,R)
Q54, 138	:	2SB1640
Q113-117, 119, 120, 132	:	2SC3906K
Q122, 123, 134	:	2SC1845(F,E)
Q133	:	2SB1566
Q136	:	UN5219
Q137	:	2SD2395
Q139-142	:	DTC123JUA
D1	:	UD23.3B
D101	:	D5SBA20F03
D102	:	S1ZB20(4101)
D103	:	*
D104	:	MTZJ16(B) or HZS16N(B2)
D105	:	MTZJ15(B) or HZS15N(B2)
D106, 107, 111-115, 121, 127-130	:	MA111
D108	:	*
D109	:	*
D110	:	*
D117-120	:	UD215B
D122, 124	:	UD23.9B
D123, 125, 126	:	1SS133 or HSS104A

VR-405/406/414 (2/4)
 KRF-V5030D/V5030D-S/V5030DE (2/4)
 KRF-V4530D (2/4)
 KRF-V6030D/V6030D-S/V6030DE (2/4)

MA142WA
 MA142WK
 UN5212

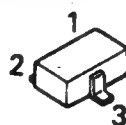


CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Δ indicates safety critical components. For continued protection against risk of fire, replace only with same type and rating fuse(s). To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.


The DC voltage is an actual reading measured with a high impedance type voltmeter with a cassette loaded at playback mode. The measurement value may vary depending on the measuring instruments used or on the product. Bias circuit DC voltage is measured while in the record mode.

DOLBY and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Noise reduction circuit made under license from Dolby Laboratories Licensing Corporation.


2SC1845
 2SC2878




2SC2785

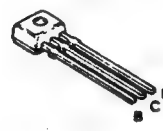


2SC1740S

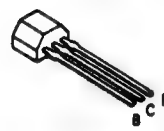


UN5219
 2SA1576A
 2SB1218A
 2SD1819A



2SB1132
 2SB1308




2SD1963

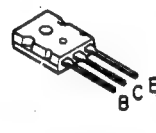


2SD1664




2SC4081
 2SD1757K




DTA124EUA
 DTC123JUA
 DTC124EUA




NJM4565M
 NJM4565MD
 NJM4580ED




DAN202U

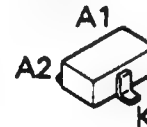


DAP202U
 DA204U




1SS301




TC74HCT7007AF




NJM2279M





KRF-V4530D/V5030D/V6030D/VR-405/406/414

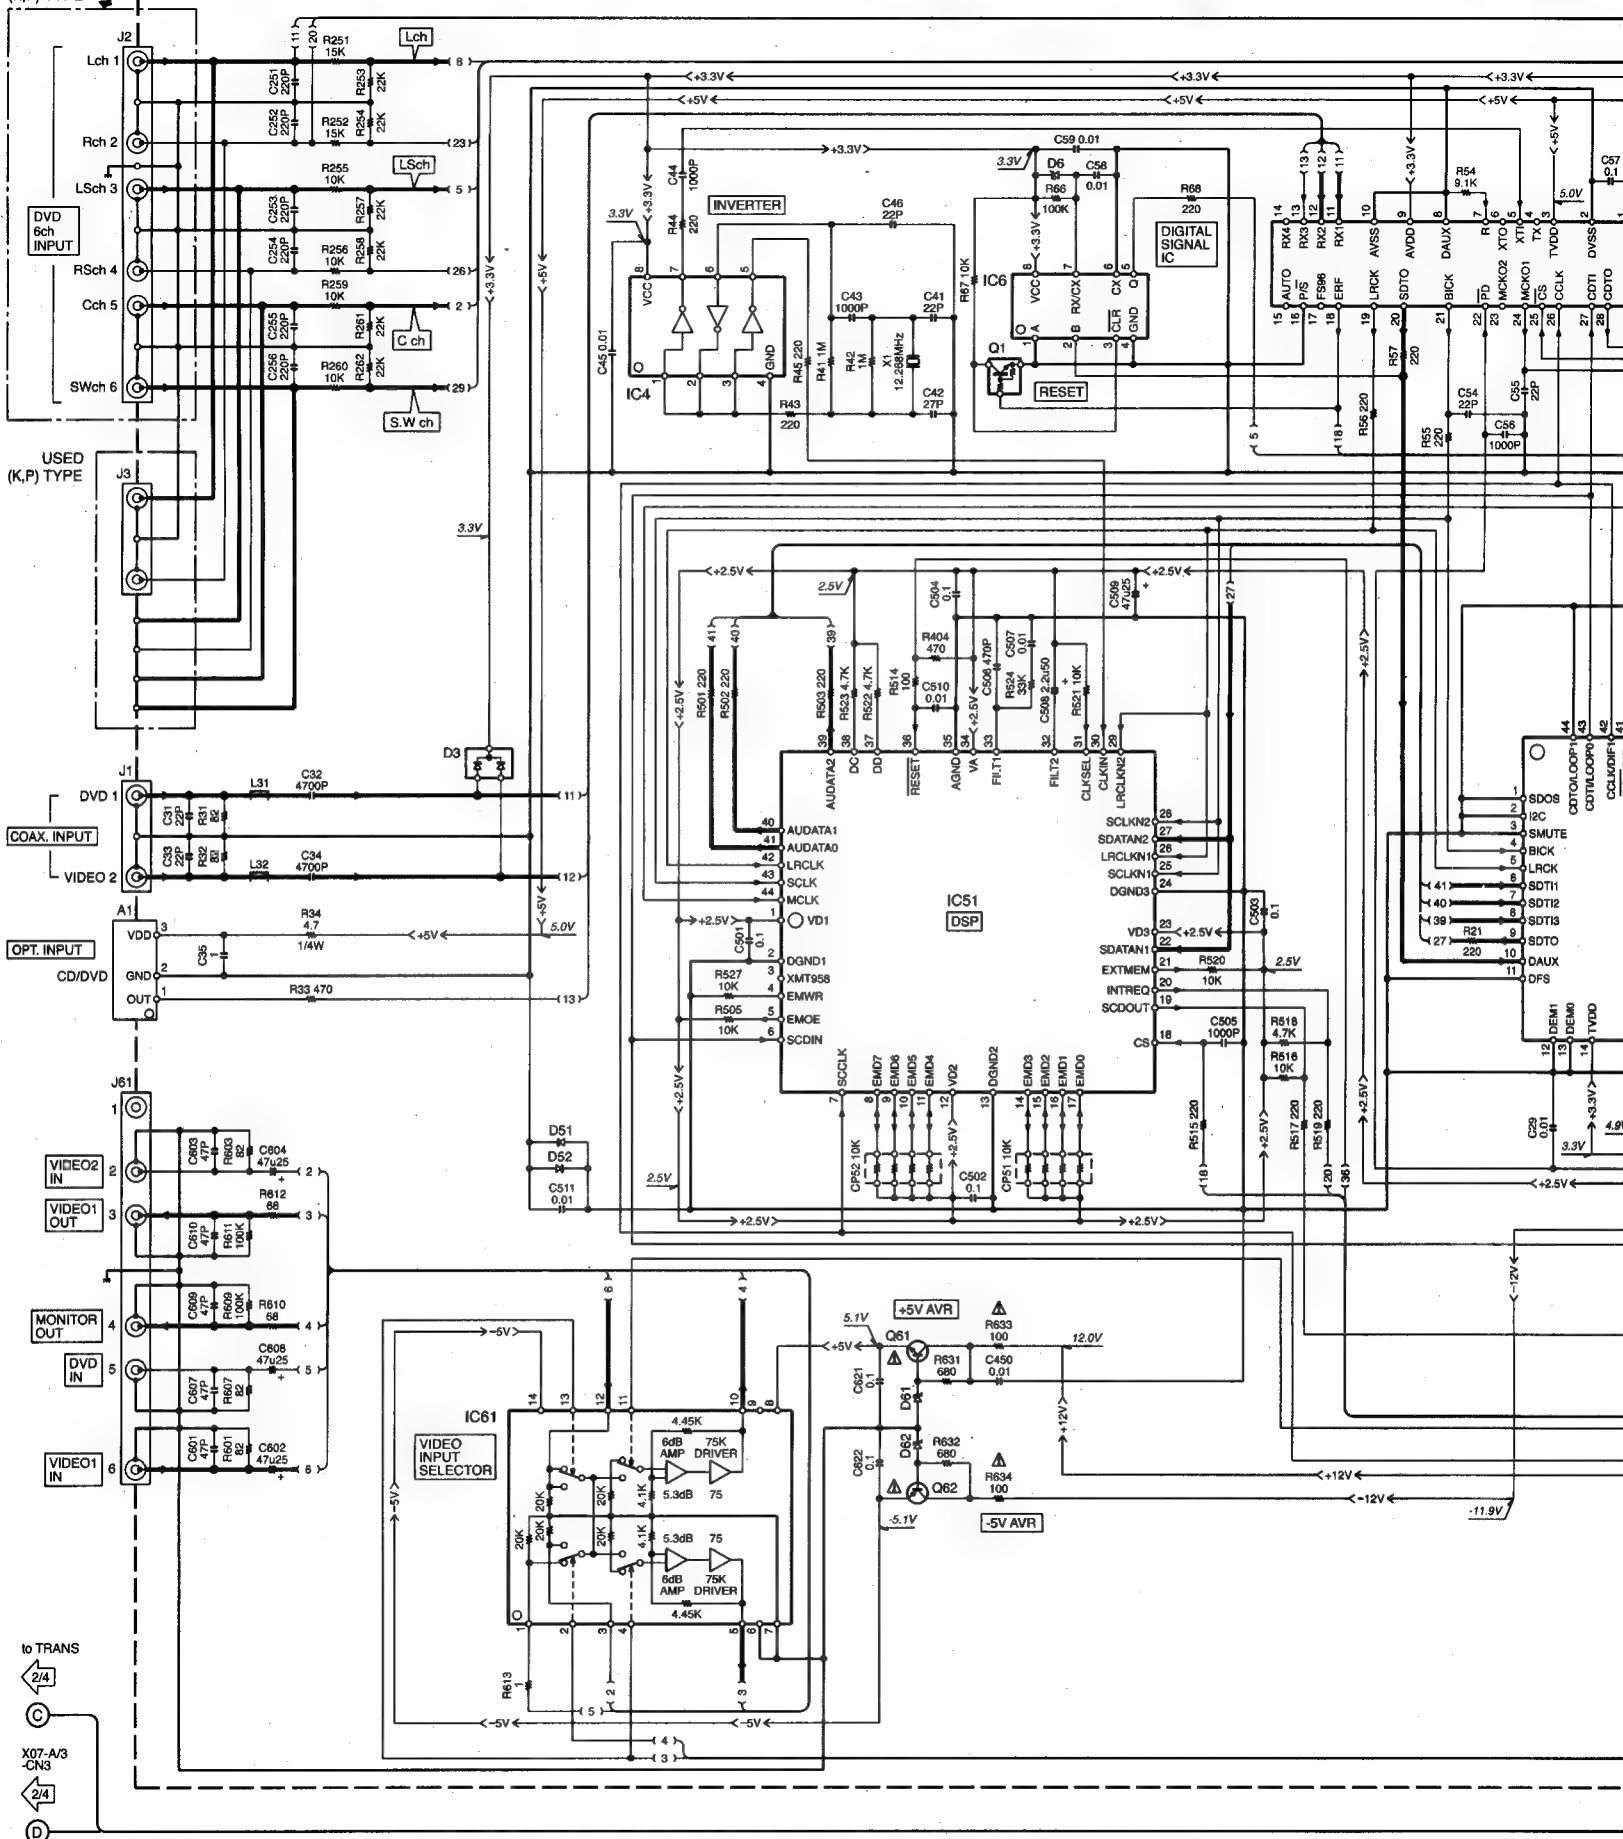EXCEPT USED
(K,P) TYPE


DOLBY and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Noise reduction circuit made under license from Dolby Laboratories Licensing Corporation.



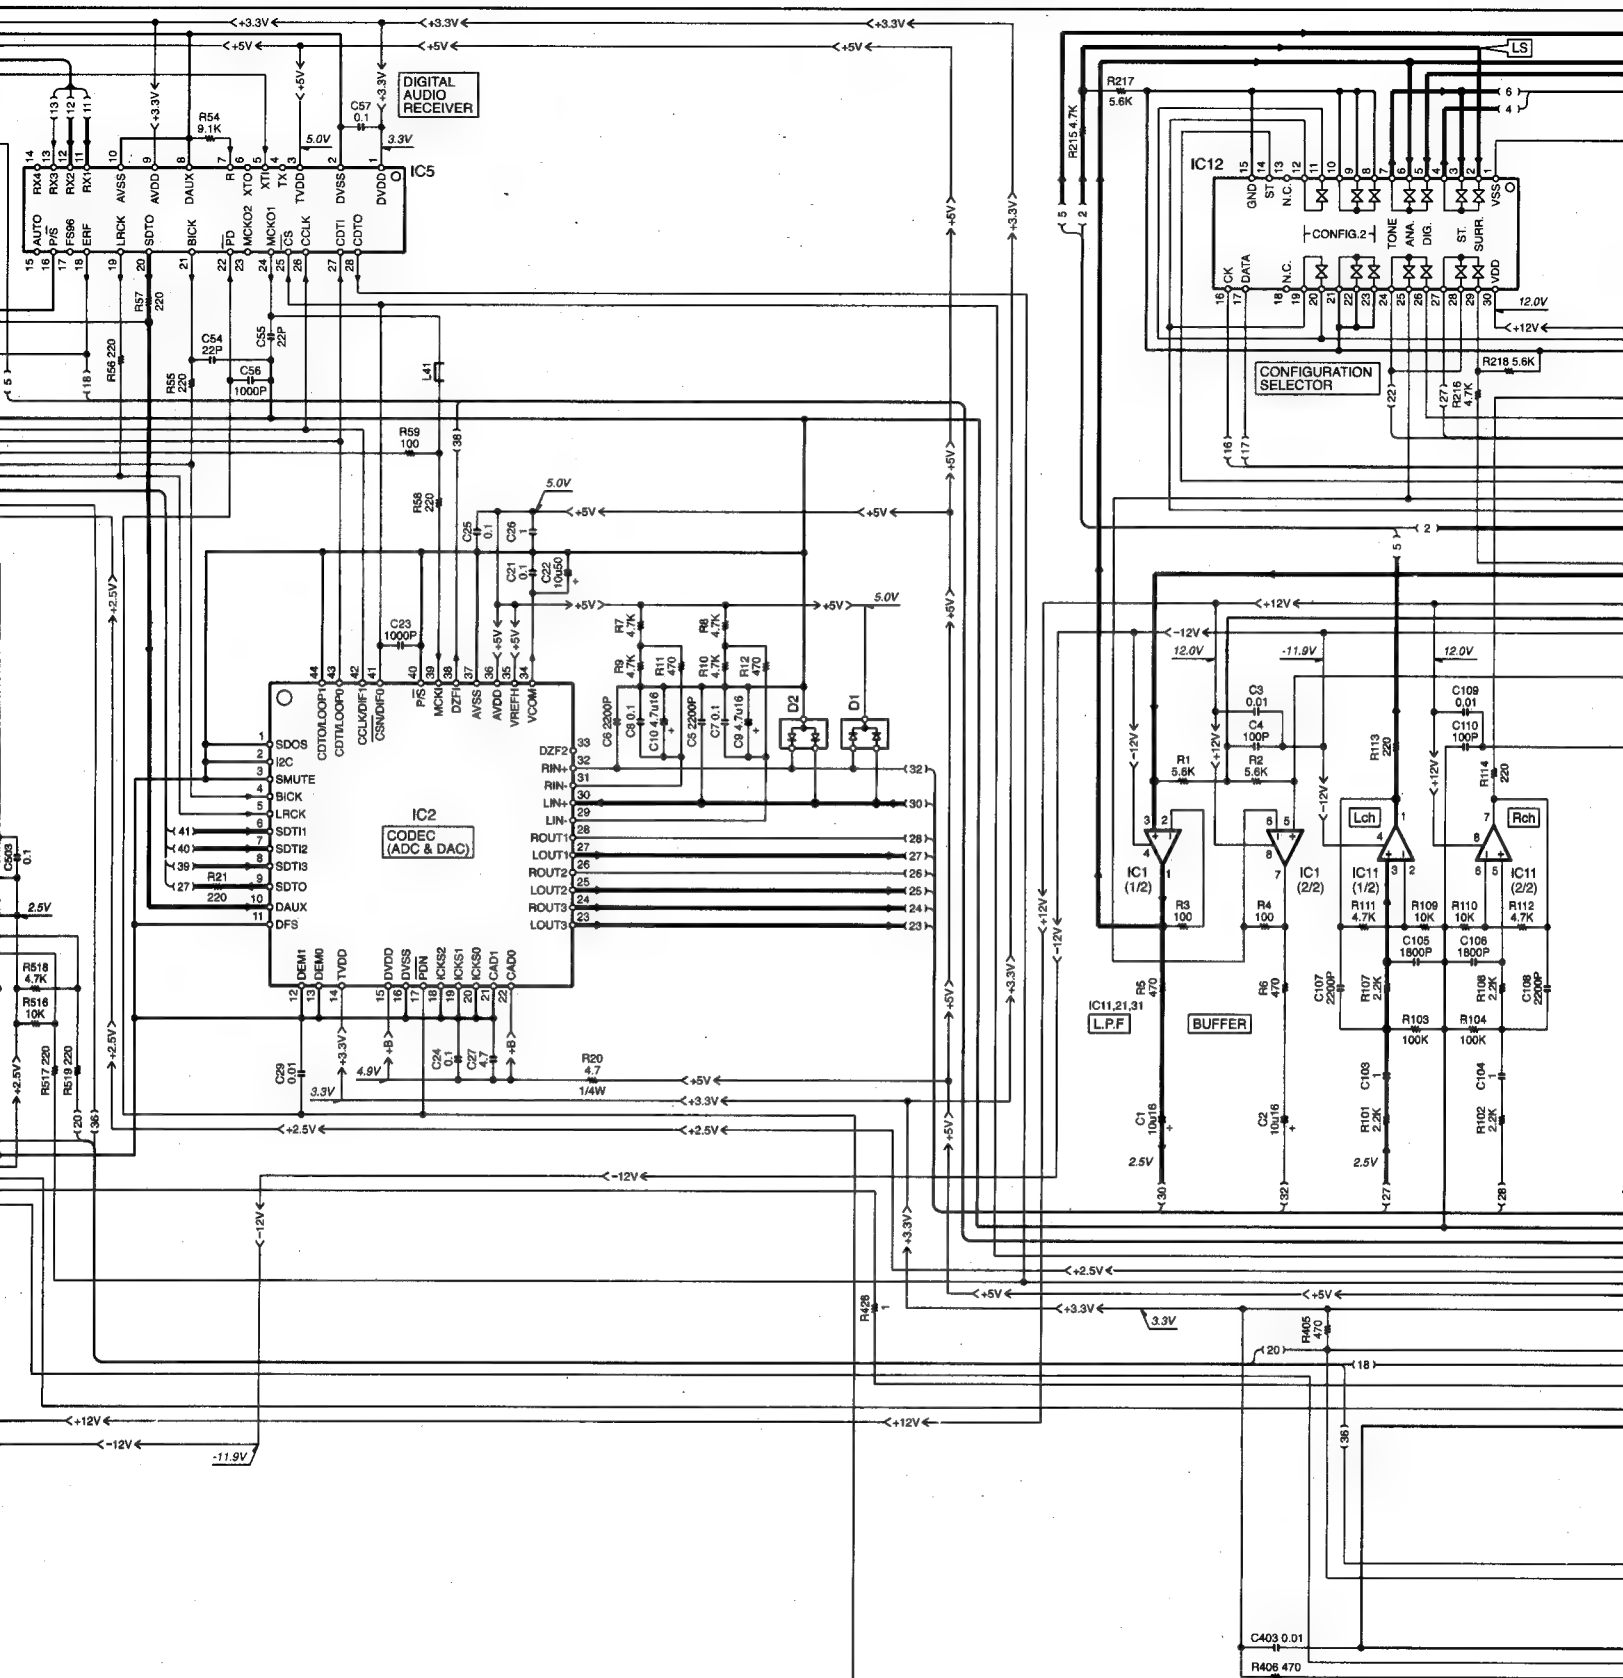


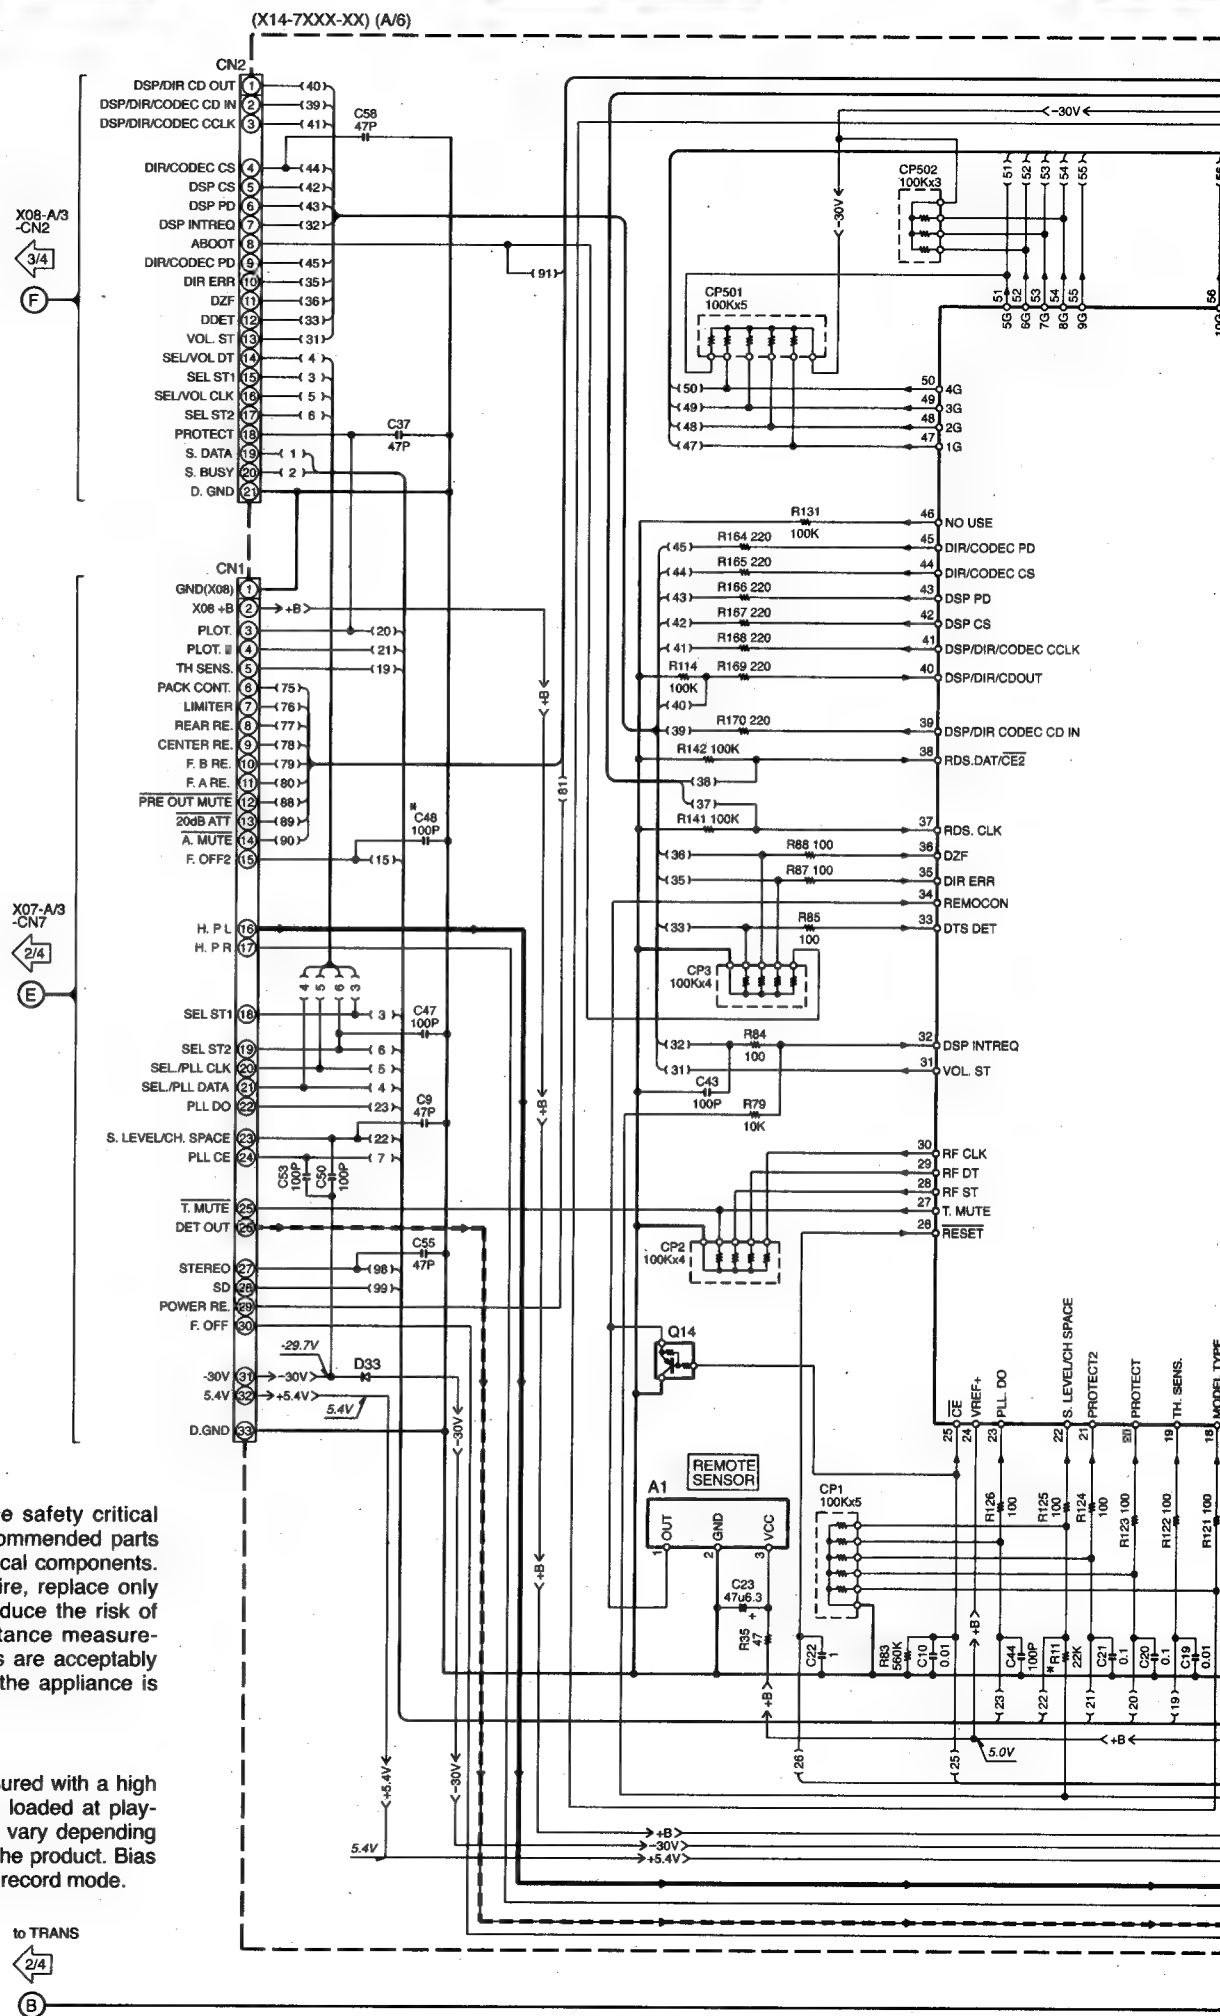

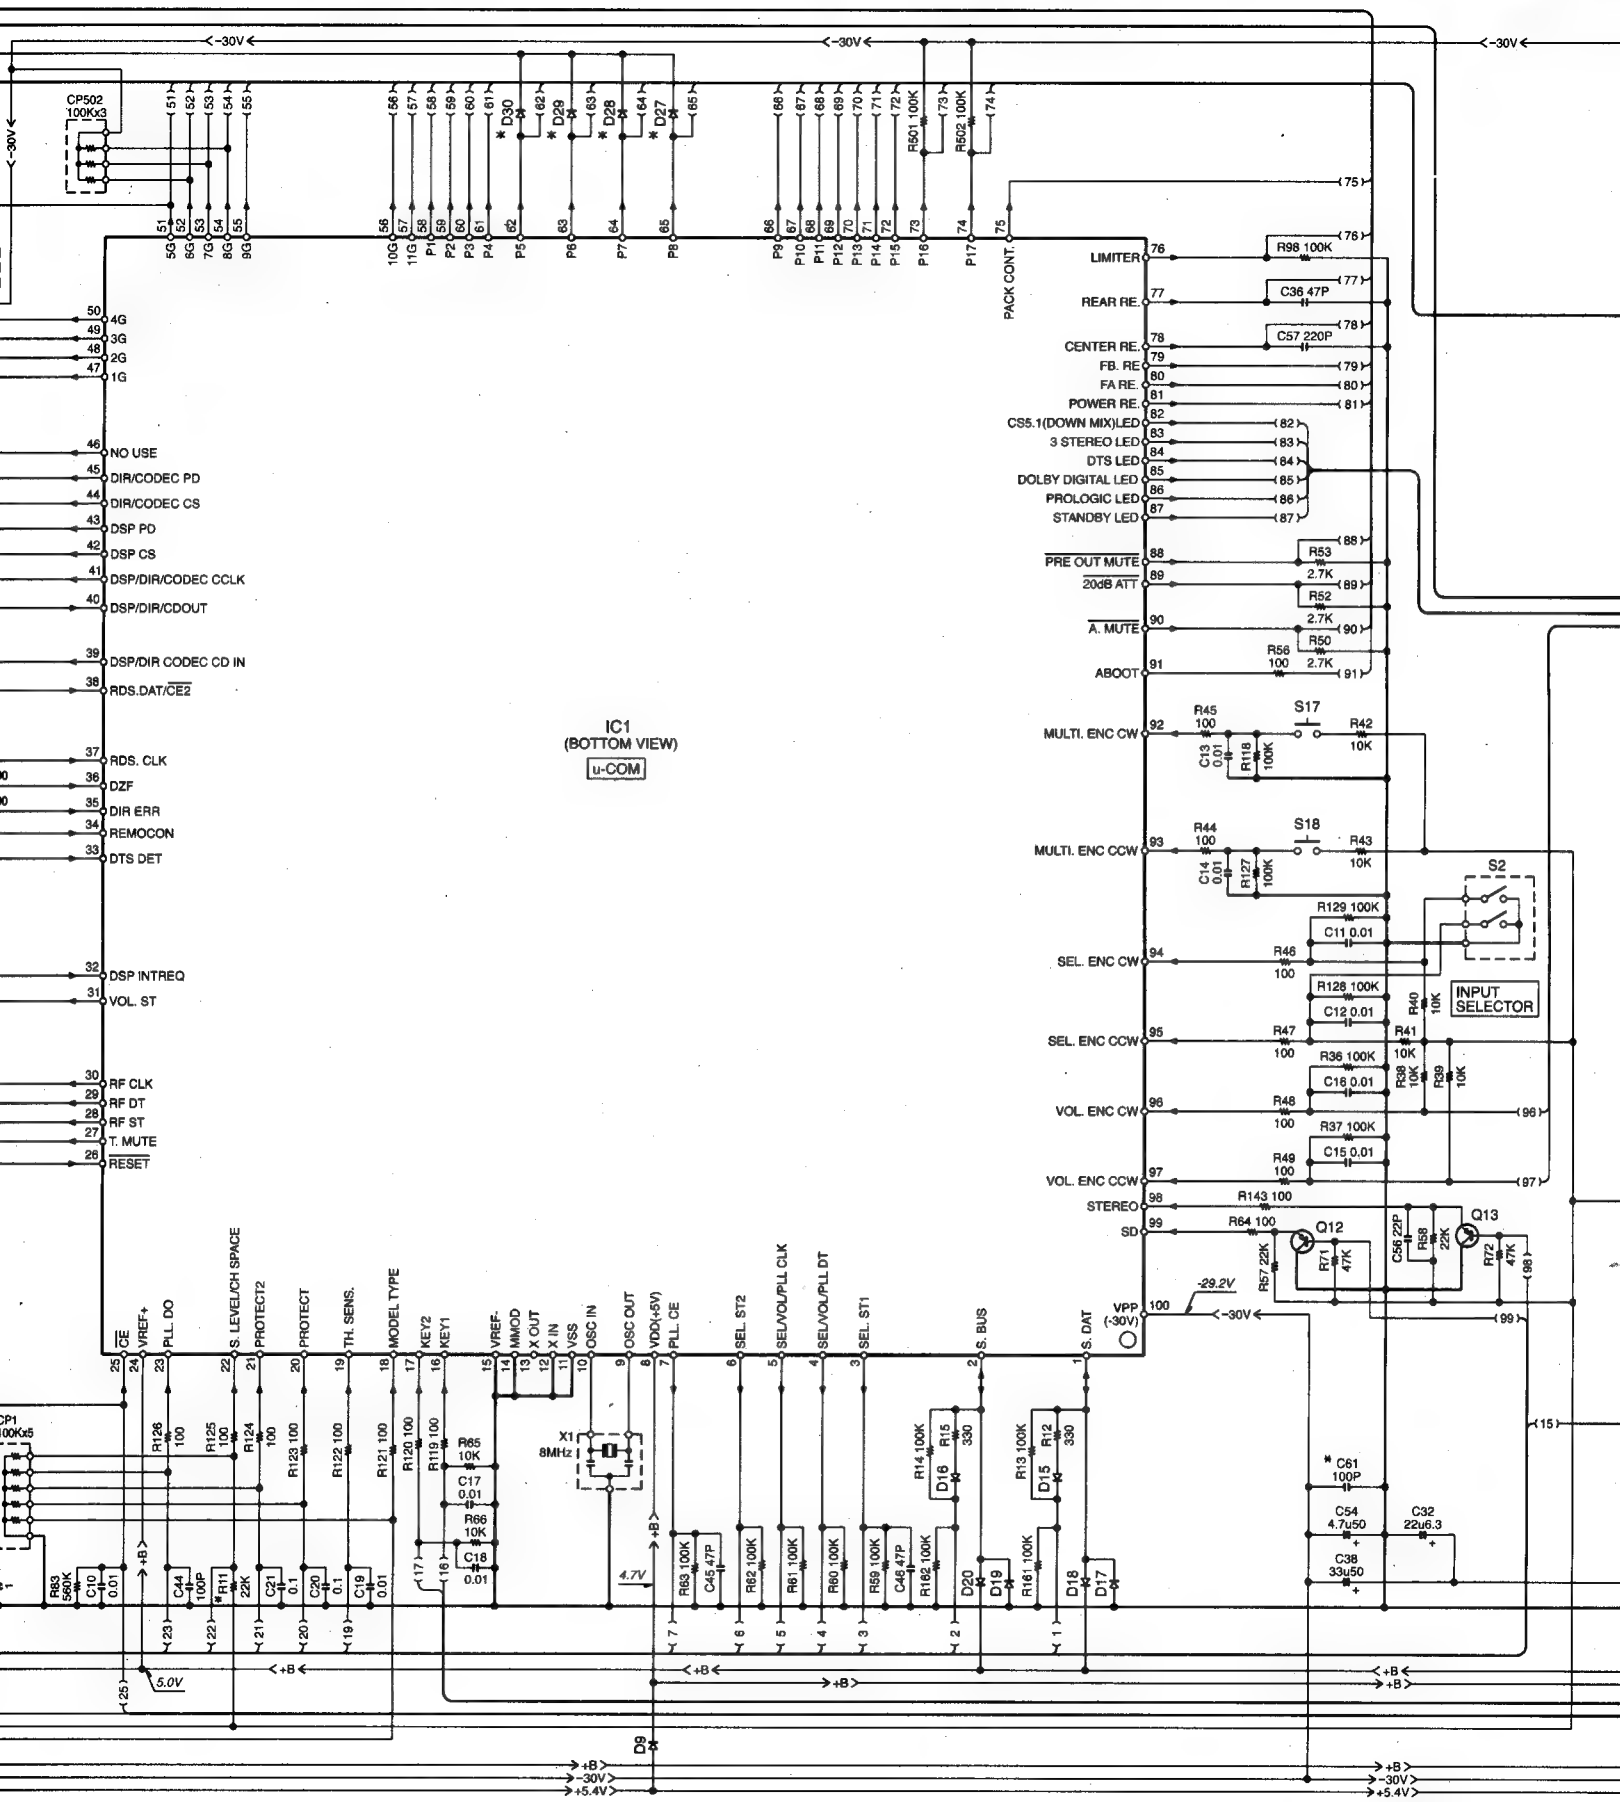


(X14-7XXX-XX) (A/6)

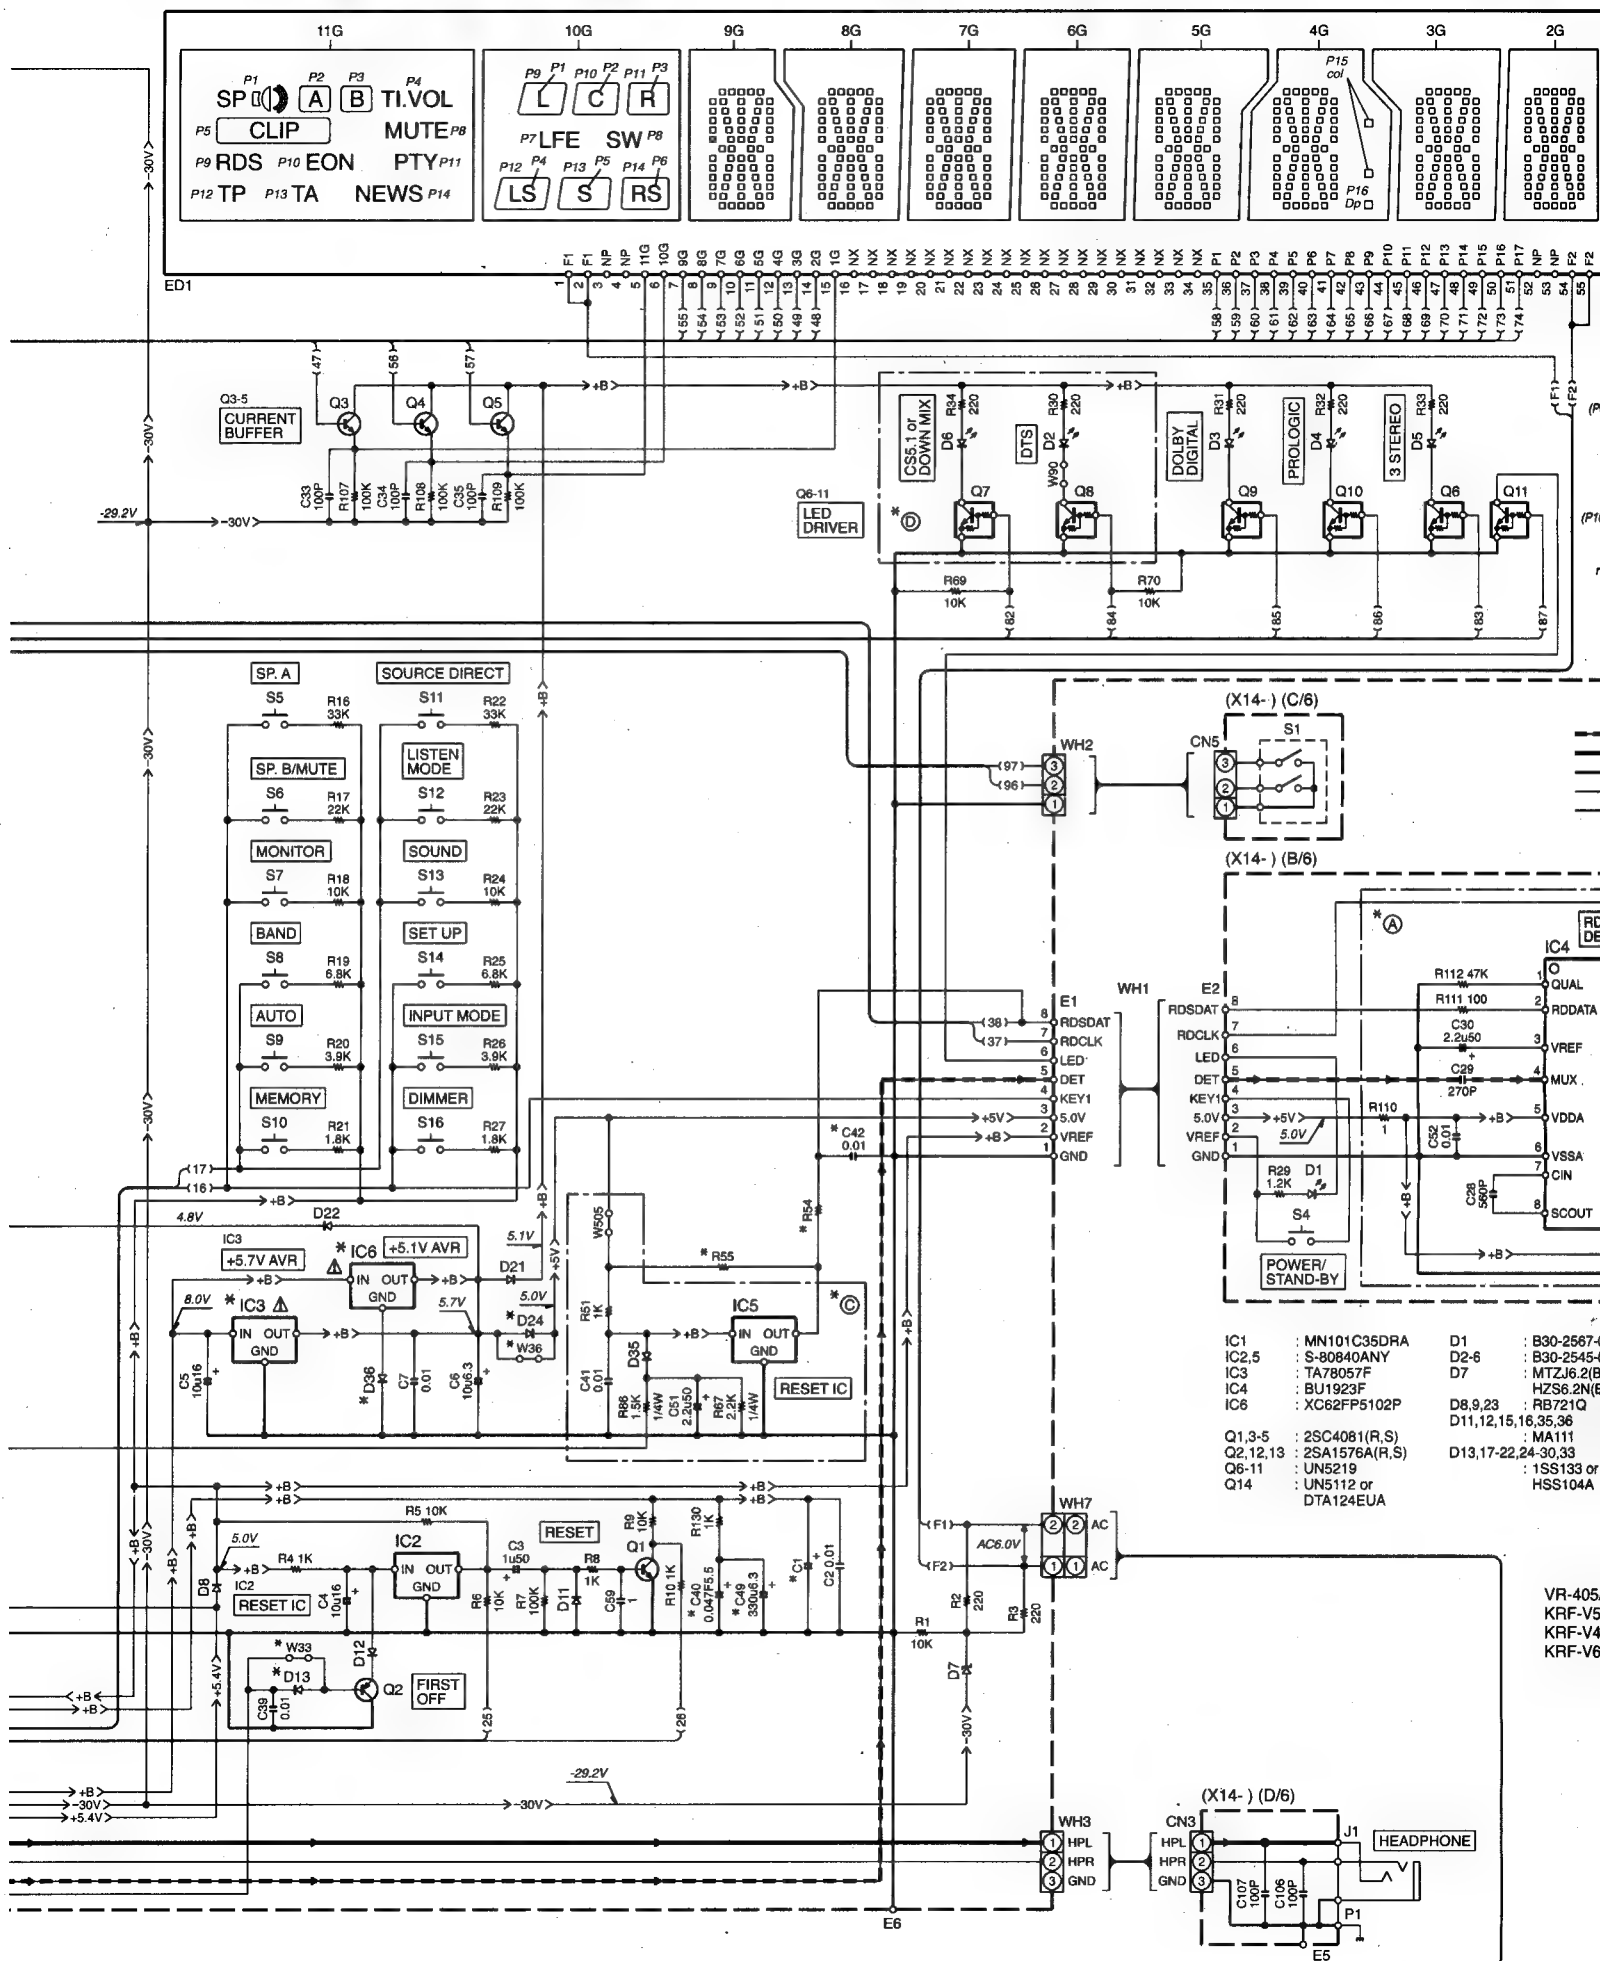

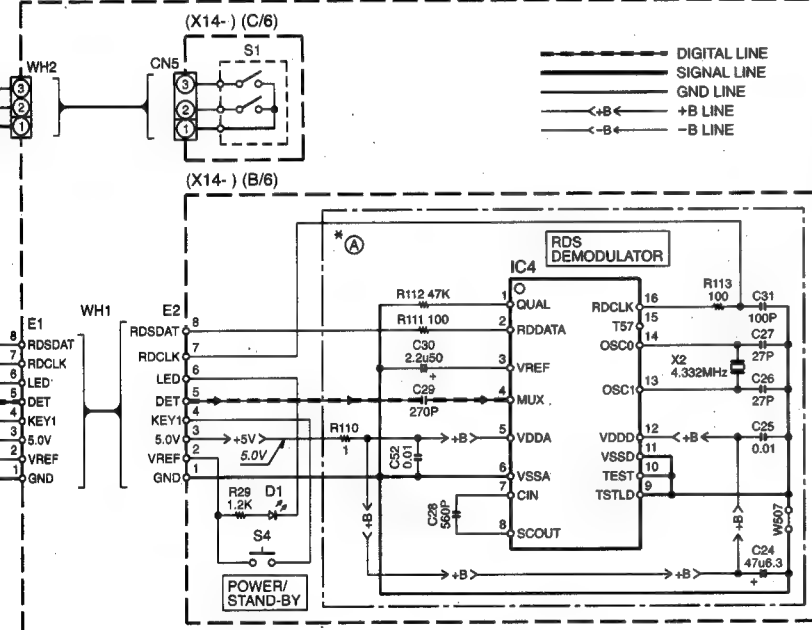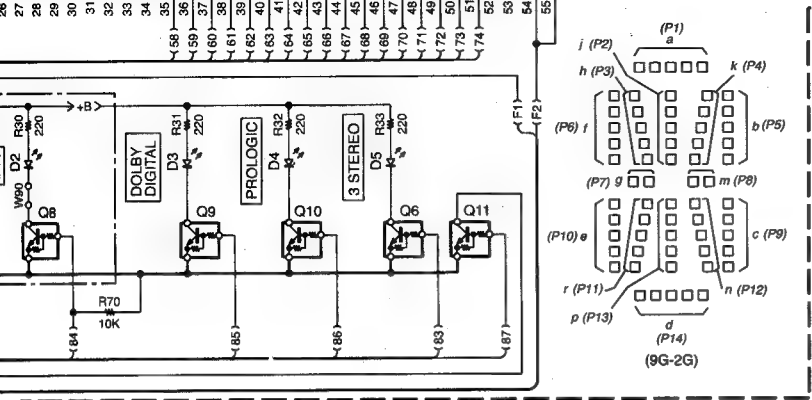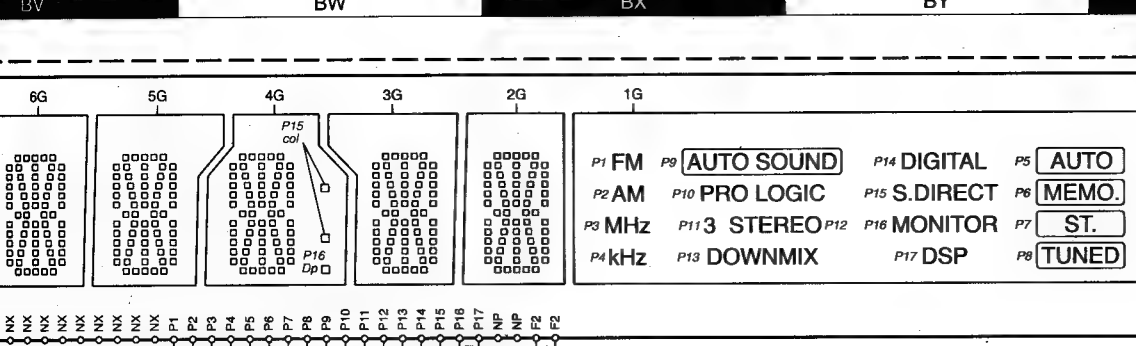

- IC1 : MN101C35DRA
IC2,5 : S-80840ANY
IC3 : TA78057F
IC4 : BU1923F
IC6 : XC62FP5102P
- D1 : B30-2567-05
D2-6 : B30-2545-05
D7 : MTZJ6.2(B) or HZS6.2N(B2)
D8,9,23 : RB721Q
D11,12,15,16,35,36 : MA111
D13,17-22,24-30,33 : 1SS133 or HSS104A
- A1 : W02-2625-05
ED1 : SVA-11MS22
- Q1,3-5 : 2SC4081(R,S)
Q2,12,13 : 2SA1576A(R,S)
Q6-11 : UN5219
Q14 : UN5112 or DTA124EUA

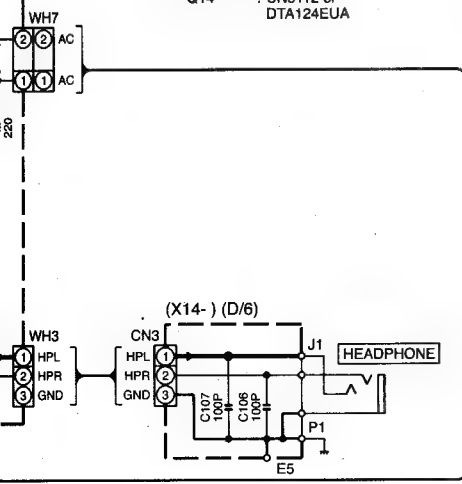

VR-405/406/414 (4/4)
KRF-V5030D/V5030D-S/V5030DE (4/4)
KRF-V4530D (4/4)
KRF-V6030D/V6030D-S/V6030DE (4/4)

VR-406 (X14-7120-10)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	D	C1	C40,41,42,48,51,61	C49
U.S.A.	K		0-10					330u6.3	NO	YES
CANADA	P									

DESTINATION	COUNTRY	ABB.	D13, 27	D24, 28-30,35,36	IC3	IC5, 6	R11,51, 67,68	R54, 55	R69, 70	W33,36, 505
U.S.A.	K		YES	NO	YES	NO	NO	NO	YES	NO
CANADA	P									

KRF-V6030D (X14-7122-71) : KRF-V6030DE (X14-7122-71)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	D	C1	C40, 41, 48, 51	C49
EUROPE	E		2-71	YES	NO			100u10	YES	NO

DESTINATION	COUNTRY	ABB.	D13,29, 35,36	D24,27, 28,30	IC3	IC5, 6	R11,51, 67,68	R54, 55	R69, 70	W33	W36, 505
EUROPE	E		NO	YES	YES	NO	NO	NO	YES	YES	NO

KRF-V6030D-S (X14-712X-XX)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	D	C1	C40, 42	C41, 48, 51	C49
GENERAL MARKET	M		0-21					100u10	YES	NO	NO
MALAYSIA	I										
AUSTRALIA	X		0-71								

DESTINATION	COUNTRY	ABB.	D13, 30	D24	D27, 28	D29	D35, 36	IC3	IC5, 6	R11,51, 67,68	R54, 55	R69, 70	W33, 505	W36
GENERAL MARKET	M		NO	NO	YES	NO	YES	NO	YES	YES	10K	YES	YES	YES
MALAYSIA	I													
AUSTRALIA	X		YES	YES	YES	NO	YES	NO	NO	NO	4.7K	YES	YES	NO

VR-405/414 (X14-7120-11)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	D	C1	C40,41,42, 48,51,61	C49
U.S.A.	K		0-11					330u6.3	NO	YES
CANADA	P									

DESTINATION	COUNTRY	ABB.	D13	D24	D28	D29	D30	D35, 36	IC3	IC5, 6	R11,51, 67,68	R54, 55	R69, 70	W33, 505
U.S.A.	K		YES	NO	YES	NO	YES	NO	NO	NO	NO	YES	YES	NO
CANADA	P													

KRF-V5030D-S (X14-712X-XX) : KRF-V4530D, KRF-V5030D (X14-712X-XX)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	D	C1	C40	C41,48, 51	C42	C49	C61
GENERAL MARKET	M		0-22	NO	NO	YES		100u10	YES	YES	YES	NO	NO
MALAYSIA	I												
AUSTRALIA	X		0-72										
EUROPE	E		2-72	YES									


DESTINATION	COUNTRY	ABB.	D13, 27	D24	D28	D29	D30	D35, 36	IC3	IC5, 6	R11,51, 67,68	R54, 55	R69, 70	W33	W36	W505
GENERAL MARKET	M		NO	NO	YES	NO	NO	YES	NO	YES	YES	10K	YES	YES	YES	YES
MALAYSIA	I															
AUSTRALIA	X		NO	YES	YES	NO	YES	NO	YES	NO	NO	4.7K	YES	YES	NO	NO
EUROPE	E		YES													

KRF-V5030D (X14-712X-XX)

DESTINATION	COUNTRY	ABB.	UNIT No.	A	B	C	D	C1	C40	C41,42, 48,51	C49	C61
PX	Y		0-22	NO	NO	YES		100u10	YES	YES	NO	NO
U.K.	T		2-72	YES								

DESTINATION	COUNTRY	ABB.	D13, 27-29	D24	D28	D35, 36	IC3	IC5, 6	R11,51, 67,68	R30, 34	R54, 55	R69, 70	W33	W36	W505
PX	Y		NO	NO	YES	YES	NO	YES	YES	NO	10K	YES	YES	YES	NO
U.K.	T		NO	YES	YES	NO	YES	NO	NO	NO	NO	NO	YES	YES	NO

KRF-V4530D/V5030D/V6030D/V

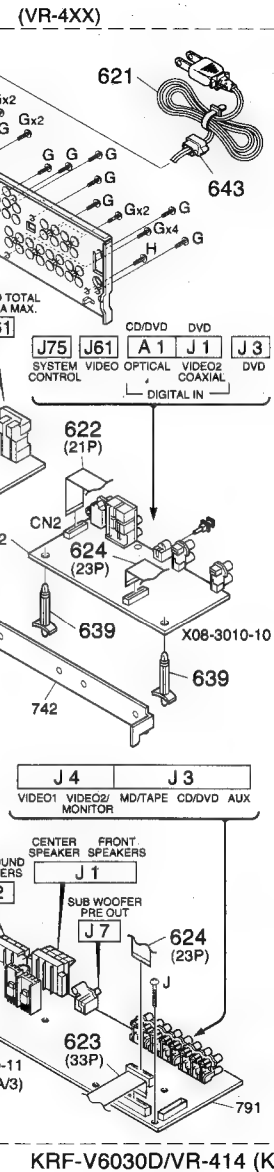

KRF-V4530D/V5030D/V6030D/NR-405/406/414

* New Parts

Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

①

Ref. No	Address	New Parts	Parts No.	Description	Destination	Remarks
KRF-V6030D/VR-406 (Y05-4020-10)						
601	1A	*	A01-3733-01	METALLIC CABINET	KPE	
601	1A	*	A01-3734-01	METALLIC CABINET	MIX	
602	1A	*	A09-1178-08	BATTERY COVER		
604	2B	*	A46-0309-04	REAR COVER		
605	2A	*	A60-1740-11	PANEL	KP	
605	2A	*	A60-1757-11	PANEL	MIX	
605	2A	*	A60-1758-11	PANEL	E	
606	1A	*	A70-1330-05	REMOTE CONTROL(RC-R0609)	KPMIX	
606	1A	*	A70-1331-05	REMOTE CONTROL(RC-R0610)	E	
610	2A	*	B07-2477-02	ESCUTCHEON	KPE	
610	2A	*	B07-2478-02	ESCUTCHEON	MIX	
611	2A	*	B10-3549-02	FRONT GLASS	KP	
611	2A	*	B10-3550-02	FRONT GLASS	MIX	
611	2A	*	B10-3551-02	FRONT GLASS	E	
612	2A	*	B12-0384-04	INDICATOR		
613	2A	*	B12-0385-04	INDICATOR		
614	2A	*	B43-0314-04	KENWOOD BADGE		
			B46-0096-53	WARRANTY CARD	X	
			B46-0310-03	WARRANTY CARD	E	
			B46-0328-03	WARRANTY CARD	K	
			B46-0346-00	QUESTIONNAIRE CARD	K	
			B46-0347-03	WARRANTY CARD	P	
			B58-0964-13	CAUTION CARD (UL)	K	
			B58-0965-13	CAUTION CARD (PL)	X	
			B58-0966-13	CAUTION CARD (PL)	MIE6	
			B58-0967-03	CAUTION CARD (PL)	P	
			B58-1607-03	CAUTION CARD	E7	
		*	B60-4598-00	INSTRUCTION MANUAL(EN)	KPMIX	
		*	B60-4599-00	INSTRUCTION MANUAL(FR)	P	
		*	B60-4600-00	INSTRUCTION MANUAL(TC)	MI	
		*	B60-4602-00	INSTRUCTION MANUAL(EN)	E7	
		*	B60-4603-00	INSTRUCTION MANUAL(ES)	ME6	
		*	B60-4604-00	INSTRUCTION MANUAL(FR/GE)	E6	
		*	B60-4605-00	INSTRUCTION MANUAL(IT/NE)	E6	
		*	B60-4606-00	INSTRUCTION MANUAL(RU/PL)	E7	
		*	B60-4607-00	INSTRUCTION MANUAL(CZ/HU)	E7	
		*	B60-4617-00	INSTRUCTION MANUAL(EN(R))	KPMIX	
		*	B60-4618-00	INSTRUCTION MANUAL(FR(R))	P	
		*	B60-4619-00	INSTRUCTION MANUAL(ES(R))	M	
		*	B60-4620-00	INSTRUCTION MANUAL(TC(R))	MI	
		*	B60-4622-00	INSTRUCTION MANUAL(5-L(R))	E6	
		*	B60-4623-00	INSTRUCTION MANUAL(5-L(R))	E7	
△ 620	1A	*	E03-0115-05	AC PLUG ADAPTER	MI	
△ 621	1B	*	E30-2717-05	AC POWER CORD	X	
△ 621	1B	*	E30-2941-05	AC POWER CORD	KP	
△ 621	1B	*	E30-2942-05	AC POWER CORD	MIE	
622	1A,1B	*	E35-2455-05	FLAT CABLE (21P)		
623	2B	*	E35-2456-05	FLAT CABLE (33P)		
624	1B,2B	*	E35-2480-05	FLAT CABLE (23P)		
		*	G10-0536-04	NON-WOVEN FABRIC		
			G11-2416-04	CUSHION		

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas △ indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

②

Ref. No	Address	New Parts	Parts No.	Description	Destination	Remarks
		*	H10-7628-02	POLYSTYRENE FOAMED FIXTURE		
		*	H10-7629-02	POLYSTYRENE FOAMED FIXTURE		
		*	H25-0232-04	PROTECTION BAG (235X350X0.03)		
		*	H25-0391-04	PROTECTION BAG		
		*	H50-3607-04	ITEM CARTON CASE	KP	
		*	H50-3608-04	ITEM CARTON CASE	E6	
		*	H50-3609-04	ITEM CARTON CASE	X	
		*	H50-3610-04	ITEM CARTON CASE	MI	
		*	H50-3651-04	ITEM CARTON CASE	E7	
635	2C	*	J02-1013-05	FOOT		
636	2B	*	J02-1464-03	FOOT	KP	
637	2B	*	J19-2808-05	HOLDER		
638	2B	*	J19-3752-14	UNIT HOLDER		
639	1B	*	J19-5919-05	UNIT HOLDER		
△ 643	1B	*	J42-0083-05	POWER CORD BUSHING		
		*	J61-0307-05	WIRE BAND		
650	2A	*	K27-2384-04	KNOB (BUTTON)	E	
650	2A	*	K27-2385-04	KNOB (BUTTON)	MIX	
651	2B	*	K29-7675-12	KNOB	KPE	
651	2B	*	K29-7676-12	KNOB	MIX	
652	2A	*	K29-7678-04	KNOB	KPE	
652	2A	*	K29-7679-04	KNOB	MIX	
653	2A	*	K29-7681-14	KNOB	KPE	
653	2A	*	K29-7682-14	KNOB	MIX	
654	2A	*	K29-7684-03	KNOB	KPE	
654	2A	*	K29-7685-03	KNOB	MIX	
655	2A	*	K29-7687-03	KNOB	KPE	
655	2A	*	K29-7688-03	KNOB	MIX	
△ 670	1B	*	L07-2787-05	POWER TRANSFORMER	KP	
△ 670	1B	*	L07-2788-05	POWER TRANSFORMER	MI	
△ 670	1B	*	L07-2789-05	POWER TRANSFORMER	X	
△ 670	1B	*	L07-2790-05	POWER TRANSFORMER	E	
680	1A	*	T90-0836-05	LEAD WIRE ANTENNA		
681	1A	*	T90-0852-05	LOOP ANTENNA		
KRF-V5030D/KRF-V4530D/VR-405/VR-414 (Y05-4050-10)						
601	1A	*	A01-3733-01	METALLIC CABINET	E1E2E4	
601	1A	*	A01-3733-01	METALLIC CABINET	KPYT	
601	1A	*	A01-3734-01	METALLIC CABINET	E3	
601	1A	*	A01-3734-01	METALLIC CABINET	MIX	
602	1A	*	A09-1178-08	BATTERY COVER		
604	2B	*	A46-0309-04	REAR COVER		
605	2A	*	A60-1759-01	PANEL	KP	
605	2A	*	A60-1760-11	PANEL	MIXE3	
605	2A	*	A60-1761-11	PANEL	E1E2E4	
605	2A	*	A60-1761-11	PANEL	YT	
606	1A	*	A70-1328-05	REMOTE CONTROL(RC-R0509)	KPYMIX	
606	1A	*	A70-1329-05	REMOTE CONTROL(RC-R0510)	ET	
610	2A	*	B07-2477-02	ESCUTCHEON	E1E2E4	
610	2A	*	B07-2477-02	ESCUTCHEON	KPYT	
610	2A	*	B07-2478-02	ESCUTCHEON	MIXE3	
611	2A	*	B10-3552-02	FRONT GLASS	K5P5	
611	2A	*	B10-3553-02	FRONT GLASS	YMIX	

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas △ indicates safety critical components.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
611	2A	*	B10-3574-02	FRONT GLASS	E1E2E3	
611	2A	*	B10-3574-02	FRONT GLASS	T	
611	2A	*	B10-3575-02	FRONT GLASS	K4P4	
611	2A	*	B10-3605-02	FRONT GLASS	E4	
612	2A	*	B12-0384-04	INDICATOR		
613	2A	*	B12-0385-04	INDICATOR		
614	2A	*	B43-0314-04	KENWOOD BADGE		
		*	B46-0096-53	WARRANTY CARD	X	
		*	B46-0310-03	WARRANTY CARD	ET	
		*	B46-0328-03	WARRANTY CARD	KY	
		*	B46-0346-00	QUESTIONNAIRE CARD	K	
		*	B46-0347-03	WARRANTY CARD	P	
		*	B58-0513-04	CAUTION CARD (PRESET220-240)	Y	
		*	B58-0945-03	CAUTION CARD	T	
		*	B58-0964-13	CAUTION CARD (UL)	KY	
		*	B58-0965-13	CAUTION CARD (PL)	XT	
		*	B58-0966-13	CAUTION CARD (PL)	E1E3E4	
		*	B58-0966-13	CAUTION CARD (PL)	MI	
		*	B58-0967-03	CAUTION CARD (L)	P	
		*	B58-1607-03	CAUTION CARD	E2	
		*	B59-1104-00	SERVICE DIRECTORY	Y	
		*	B60-4598-00	INSTRUCTION MANUAL(EN)	KPYMIX	
		*	B60-4599-00	INSTRUCTION MANUAL(FR)	P	
		*	B60-4600-00	INSTRUCTION MANUAL(TC)	MI	
		*	B60-4602-00	INSTRUCTION MANUAL(EN)	TIE2	
		*	B60-4603-00	INSTRUCTION MANUAL(ES)	E1E3E4	
		*	B60-4603-00	INSTRUCTION MANUAL(ES)	M	
		*	B60-4604-00	INSTRUCTION MANUAL(FR/GE)	E1E3E4	
		*	B60-4605-00	INSTRUCTION MANUAL(IT/NE)	E1E3E4	
		*	B60-4606-00	INSTRUCTION MANUAL(RU/PL)	E2	
		*	B60-4607-00	INSTRUCTION MANUAL(CZ/HU)	E2	
△ 620	1A	*	E03-0115-05	AC PLUG ADAPTER	MI	
△ 621	1C	*	E30-2605-05	AC POWER CORD	Y	
△ 621	1C	*	E30-2717-05	AC POWER CORD	X	
△ 621	1C	*	E30-2721-05	AC POWER CORD	T	
△ 621	1C	*	E30-2941-05	AC POWER CORD	KP	
△ 621	1C	*	E30-2942-05	AC POWER CORD	MIE	
622	1A,1C	*	E35-2455-05	FLAT CABLE (21P)		
623	2B,2C	*	E35-2456-05	FLAT CABLE (33P)		
624	1C,2C	*	E35-2480-05	FLAT CABLE (23P)		
		*	G10-0536-04	NON-WOVEN FABRIC		
		*	G11-2416-04	CUSHION		
		*	H10-7628-02	POLYSTYRENE FOAMED FIXTURE		
		*	H10-7629-02	POLYSTYRENE FOAMED FIXTURE		
		*	H25-0232-04	PROTECTION BAG (235X350X0.03)		
		*	H25-0232-04	PROTECTION BAG (235X350X0.03)		
		*	H25-0391-04	PROTECTION BAG	E	
		*	H25-0651-04	PROTECTION BAG	KPYMIX	
		*	H50-3611-04	ITEM CARTON CASE	T	
		*	H50-3612-04	ITEM CARTON CASE	K5P5	
		*	H50-3613-04	ITEM CARTON CASE	YE1T	
		*	H50-3614-04	ITEM CARTON CASE	XE13	
		*	H50-3615-04	ITEM CARTON CASE	MI	
		*	H50-3615-04	ITEM CARTON CASE	K4P4	

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas △ indicates safety critical components

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
		*	H50-3661-04	ITEM CARTON CASE	E2	
		*	H50-3734-04	ITEM CARTON CASE	E4	
635	2C	*	J02-1013-05	FOOT	KP	
636	2B	*	J02-1464-03	FOOT		
637	2B	*	J19-2808-05	HOLDER		
638	2B	*	J19-3752-14	UNIT HOLDER		
639	2C	*	J19-5919-05	UNIT HOLDER		
△ 643	1C	*	J42-0083-05	POWER CORD BUSHING		
		*	J61-0307-05	WIRE BAND		
650	2A	*	K27-2384-04	KNOB (BUTTON)	E1E2E4	
650	2A	*	K27-2384-04	KNOB (BUTTON)	YT	
650	2A	*	K27-2385-04	KNOB (BUTTON)	MIXE3	
651	2B	*	K29-7675-12	KNOB	E1E2E4	
651	2B	*	K29-7675-12	KNOB	KPYT	
651	2B	*	K29-7676-12	KNOB	MIXE3	
652	2A	*	K29-7678-04	KNOB	E1E2E4	
652	2A	*	K29-7678-04	KNOB	KPYT	
652	2A	*	K29-7679-04	KNOB	MIXE3	
653	2A	*	K29-7681-14	KNOB	E1E2E4	
653	2A	*	K29-7682-14	KNOB	KPYT	
654	2A	*	K29-7684-03	KNOB	MIXE3	
654	2A	*	K29-7684-03	KNOB	E1E2E4	
654	2A	*	K29-7685-03	KNOB	KPYT	
655	2A	*	K29-7687-03	KNOB	MIXE3	
655	2A	*	K29-7687-03	KNOB	E1E2E4	
655	2A	*	K29-7688-03	KNOB	KPYT	
△ 670	1C	*	L07-2794-05	POWER TRANSFORMER	K5P5	
△ 670	1C	*	L07-2795-05	POWER TRANSFORMER	YMI	
△ 670	1C	*	L07-2796-05	POWER TRANSFORMER	X	
△ 670	1C	*	L07-2797-05	POWER TRANSFORMER	E	
△ 670	1C	*	L07-2800-05	POWER TRANSFORMER	K4P4	
680	1A	*	T90-0836-05	LEAD WIRE ANTENNA		
681	1A	*	T90-0852-05	LOOP ANTENNA		
POWER SUPPLY (X00-3000-20) Y,M,I type only						
CN1			E40-8386-05	PIN ASSY		
△ F3			F05-3121-05	FUSE (SEMKO) (250V T3.15AL)		
CN2,3			J13-0075-05	FUSE CLIP		
△ S1			S62-0001-05	SLIDE SWITCH		
POWER AMP (X07-3130-11, X07-3140-10)						
C1			CK73FB1H223K	CHIP C	0.022UF	K
C2			CK73FB1H103K	CHIP C	0.010UF	K
C3			CK73FB1H103K	CHIP C	0.010UF	K
C4			CC73FCH1H331J	CHIP C	330PF	J
C5,6			CK73FB1H103K	CHIP C	0.010UF	K
C7			CE04LW1C470M	ELECTRO	47UF	16WV
C8			CK73EB1H103K	CHIP C	0.010UF	K
C9			CC73FCH1H102J	CHIP C	1000PF	J
C10			CE04LW1C470M	ELECTRO	47UF	16WV
C11,12			CK73FB1H473K	CHIP C	0.047UF	K

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas △ indicates safety critical components

KRF-V4530D/N5030D/N6030D/MR-405/406/414
PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

5

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C14			CE04LW1C100M	ELECTRO 10UF 16WV		
C15			CE04LW1H010M	ELECTRO 1.0UF 50WV		
C16			CE04RW1HR47M	ELECTRO 0.47UF 50WV		
C17			CE04LW1H010M	ELECTRO 1.0UF 50WV		
C18			CC73FCH1H470J	CHIP C 47PF J		
C19			CE04RW1A100M	ELECTRO 10UF 10WV		
C20			CK73FB1H473K	CHIP C 0.047UF K		
C21			CE04RW1V3R3M	ELECTRO 3.3UF 35WV		
C22			CK73FB1H473K	CHIP C 0.047UF K		
C23			CE04LW1C100M	ELECTRO 10UF 16WV		
C24			CK73FB1H331K	CHIP C 330PF K		
C25			CC73FCH1H181J	CHIP C 180PF J	ET	
C25			CC73FCH1H471J	CHIP C 470PF J	KPYMIX	
C26			CK73FB1H183K	CHIP C 0.018UF K	ET	
C26			CK73FB1H223K	CHIP C 0.022UF K	KPYMIX	
C27			CE04HW1E4R7M	NP-ELEC 4.7UF 25WV		
C28, 29			CE04LW1H2R2M	ELECTRO 2.2UF 50WV		
C30, 31			CK73FB1H223K	CHIP C 0.022UF K	YMIXET	
C30, 31			CK73FB1H333K	CHIP C 0.033UF K	KP	
C32			CE04LW1V4R7M	ELECTRO 4.7UF 35WV		
C33, 34			CK73FB1H103K	CHIP C 0.010UF K	YMI	
C35			CK73FB1H332K	CHIP C 3300PF K	KPYMIX	
C36			CK73FB1H103K	CHIP C 0.010UF K		
C37, 38			CE04LW1C100M	ELECTRO 10UF 16WV		
C41			CC73FCH1H470J	CHIP C 47PF J		
C42			CC73FCH1H120J	CHIP C 12PF J		
C43			CC73FCH1H100D	CHIP C 10PF D		
C44			CK73FB1H471K	CHIP C 470PF K		
C45			CC73FCH1H220J	CHIP C 22PF J		
C46			CE04LW1C100M	ELECTRO 10UF 16WV		
C47			CK73FB1H102K	CHIP C 1000PF K		
C48			CE04LW1C470M	ELECTRO 47UF 16WV		
C49			CE04LW1H2R2M	ELECTRO 2.2UF 50WV		
C50			CC73FCH1H101J	CHIP C 100PF J		
C51			CK73FB1H471K	CHIP C 470PF K		
C52			CC73FCH1H101J	CHIP C 100PF J		
C70, 71			CK73FB1H682K	CHIP C 6800PF K	ET	
C72			CE04LW1H010M	ELECTRO 1.0UF 50WV		
C73			CE04LW1C470M	ELECTRO 47UF 16WV		
C74			CK73FB1H102K	CHIP C 1000PF K	KP	
C75			CC73FCH1H030C	CHIP C 3.0PF C		
C76			CC73FCH1H470J	CHIP C 47PF J		
C77			CC73FCH1H101J	CHIP C 100PF J	YMI	
C78			CK73FB1H223K	CHIP C 0.022UF K		
C79, 80			CK73FB1H472K	CHIP C 4700PF K	ET	
C81			CK73FF1C105Z	CHIP C 1.0UF Z		
C82			CK73FB1H103K	CHIP C 0.010UF K	KPET	
C83			CC73FCH1H101J	CHIP C 100PF J		
C84, 85			CK73FB1H223K	CHIP C 0.022UF K		
C86			CK73FB1H471K	CHIP C 470PF K		
C88			CK73FB1H332K	CHIP C 3300PF K		
C89, 90			CK73FB1H472K	CHIP C 4700PF K	KPYMIX	
C91			CK73FF1C105Z	CHIP C 1.0UF Z		
C101, 102			CC73FCH1H221J	CHIP C 220PF J	KP	45
C101, 102			CC73FCH1H390J	CHIP C 39PF J		6

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia

Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)

Y: AAFES(Europe)

X: Australia Q: Russia

H: Korea

M: Other Areas

Δ indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

6

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C101,102			CC73FCH1H390J	CHIP C 39PF J	ETXMIY	5
C103,104		*	CE04RW1V100M	ELECTRO 10UF 35WV		6
C103,104		*	CE04RW1V100M	ELECTRO 10UF 35WV	ETXMIY	5
C105,106			CC73FCH1H221J	CHIP C 220PF J		6
C105,106			CC73FCH1H221J	CHIP C 220PF J	ETXMIY	5
C107,108			CE04RW0J470M	ELECTRO 47UF 6.3WV		6
C107,108			CE04RW0J470M	ELECTRO 47UF 6.3WV	ETXMIY	5
C109,110			CC73FCH1H471J	CHIP C 470PF J		6
C109,110			CC73FCH1H471J	CHIP C 470PF J	ETXMIY	5
C111,112			CQ93FMG1H123J	MYLAR 0.012UF J		6
C111,112			CQ93FMG1H123J	MYLAR 0.012UF J	ETXMIY	5
C113,114			CK45FB1H332K	CERAMIC 3300PF K		6
C113,114			CK45FB1H332K	CERAMIC 3300PF K	ETXMIY	5
C115,116			CE04LW1V4R7M	ELECTRO 4.7UF 35WV		6
C115,116			CE04LW1V4R7M	ELECTRO 4.7UF 35WV	ETXMIY	5
C117,118			CC45FCH1H101J	CERAMIC 100PF J		6
C117,118			CC45FCH1H101J	CERAMIC 100PF J	ETXMIY	5
C119-132			CC73FCH1H221J	CHIP C 220PF J		
C137,138			CE04LW1H2R2M	ELECTRO 2.2UF 50WV		
C139,140			CC73FCH1H101J	CHIP C 100PF J		
C141,142			CE04LW1H2R2M	ELECTRO 2.2UF 50WV		
C143,144			CC73FCH1H101J	CHIP C 100PF J		
C145,146			CE04LW1C220M	ELECTRO 22UF 16WV		
C147,148			CC73FCH1H471J	CHIP C 470PF J		
C149,150			CE04LW1E470M	ELECTRO 47UF 25WV		
C151,152			CC73FCH1H100D	CHIP C 10PF D		
C153,154			CE04KW1H100M	ELECTRO 10UF 50WV		
C155,156			CE04KW1H2R2M	ELECTRO 2.2UF 50WV		
C157,158			CC73FCH1H102J	CHIP C 1000PF J		
C159,160			CK73FB1H222K	CHIP C 2200PF K		
C161,162			CC73FCH1H220J	CHIP C 22PF J		
C163,164			CC73FCH1H102J	CHIP C 1000PF J		
C165,166			CE04KW1A101M	ELECTRO 100UF 10WV		
C167-170			CK73FF1E104Z	CHIP C 0.10UF Z		
C171,172			CQ93FMG1H472J	MYLAR 4700PF J		
C175,176			CC73FCH1H471J	CHIP C 470PF J		
C177,178			CE04LW1E470M	ELECTRO 47UF 25WV		
C179,180			CC73FCH1H100D	CHIP C 10PF D		
C181,182			CE04KW1H100M	ELECTRO 10UF 50WV		
C183,184			CE04KW1H2R2M	ELECTRO 2.2UF 50WV		
C185,186			CC73FCH1H102J	CHIP C 1000PF J		
C187,188			CK73FB1H222K	CHIP C 2200PF K		
C189,190			CC45FCH1H220J	CERAMIC 22PF J		
C191,192			CC73FCH1H102J	CHIP C 1000PF J		
C193,194			CE04KW1A101M	ELECTRO 100UF 10WV		
C195-198			CK73FF1E104Z	CHIP C 0.10UF Z		
C199			CQ93FMG1H472J	MYLAR 4700PF J		6
C200,201			CQ93FMG1H472J	MYLAR 4700PF J		
C202			CQ93FMG1H472J	MYLAR 4700PF J		6
C205			CC73FCH1H471J	CHIP C 470PF J		
C206			CE04LW1E470M	ELECTRO 47UF 25WV		
C207			CC73FCH1H100D	CHIP C 10PF D		
C208			CE04KW1H100M	ELECTRO 10UF 50WV		
C209			CE04KW1H2R2M	ELECTRO 2.2UF 50WV		
C210			CC73FCH1H102J	CHIP C 1000PF J		

L: Scandinavia

K: USA

P: Canada

R: Mexico

C: China

I: Malaysia

Y: PX(Far East,Hawaii)

T: England

E: Europe

G: Germany

V: China(Shanghai)

Y: AAFES(Europe)

X: Australia

Q: Russia

H: Korea

M: Other Areas

Δ indicates safety critical components.

KRF-V4530D/N5030D/N6030D/MR-405/406/414

PARTS LIST

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

7

Ref. No	Add- ress	New Parts	Parts No.	Description	Desti- nation	Re- marks
C211			CK73FB1H222K	CHIP C 2200PF K		
C212			CC45FCH1H220J	CERAMIC 22PF J		
C213			CC73FCH1H102J	CHIP C 1000PF J		
C214			CE04KW1A101M	ELECTRO 100UF 10WV		
C215,216			CK73FF1E104Z	CHIP C 0.10UF Z		
C217			CQ93FMG1H472J	MYLAR 4700PF J		
C220			CC73FCH1H471J	CHIP C 470PF J		
C221			CE04LW1A101M	ELECTRO 100UF 10WV		
C222			CC73FCH1H101J	CHIP C 100PF J		
C223			CE04LW1H100M	ELECTRO 10UF 50WV		
C224			CC73FCH1H221J	CHIP C 220PF J		
C225,226			CK45FF1H103Z	CERAMIC 0.010UF Z		
C231,232		*	C90-3916-05	ELECTRO 4700UF 75WV	KP	56
C231,232		*	C90-3916-05	ELECTRO 4700UF 75WV	MIXY	
C231,232		*	C90-3918-05	ELECTRO 4700UF 63WV	ET	
C231,232		*	C90-3918-05	ELECTRO 4700UF 63WV	KP	4
C233,234		*	C90-3917-05	ELECTRO 3300UF 42WV	KP	56
C233,234		*	C90-3917-05	ELECTRO 3300UF 42WV	MIXY	
C233,234		*	C90-3919-05	ELECTRO 3300UF 35WV	ET	
C235			CE04KW1E222M	ELECTRO 2200UF 25WV		
C236			CE04KW1E471M	ELECTRO 470UF 25WV		
C237,238			CE04LW1C101M	ELECTRO 100UF 16WV		
C239			CE04LW1H220M	ELECTRO 22UF 50WV		
C240			CE04LW1V470M	ELECTRO 47UF 35WV		5
C241			CC45FCH1H101J	CERAMIC 100PF J		6
C241			CC45FCH1H101J	CERAMIC 100PF J	ETMXIY	5
C242			CK45FF1H103Z	CERAMIC 0.010UF Z		6
C242			CK45FF1H103Z	CERAMIC 0.010UF Z	ETMXIY	5
C245			CC73FCH1H221J	CHIP C 220PF J		
C246			CK45FF1H103Z	CERAMIC 0.010UF Z		
C248			CC73FCH1H221J	CHIP C 220PF J		
C250			CC73FCH1H102J	CHIP C 1000PF J		
C251,252			CE04KW2A100M	ELECTRO 10UF 100WV		
C253,254			CE04KW2A101M	ELECTRO 100UF 100WV		
C255,256			CE04DW1J101M	ELECTRO 100UF 63WV		6
C255,256			CE04DW1J101M	ELECTRO 100UF 63WV	ETMXIY	5
C259			CE04LW1A101M	ELECTRO 100UF 10WV	KP	5
C260			CE04LW0J221M	ELECTRO 220UF 6.3WV		
C261			CE04LW1V4R7M	ELECTRO 4.7UF 35WV		
C262			CE04LW0J221M	ELECTRO 220UF 6.3WV		
C263			CE04LW1V4R7M	ELECTRO 4.7UF 35WV		
C264			CE04LW1H010M	ELECTRO 1.0UF 50WV		
C269			CK45FE2H103P	CERAMIC 0.010UF P	KP	4
C415			CE04LW1H010M	ELECTRO 1.0UF 50WV		
C416,417			CE04HW1E100M	NP-ELEC 10UF 25WV		
C601			CE04LW1E332M	ELECTRO 3300UF 25WV		
C602			CE04LW1H100M	ELECTRO 10UF 50WV		
C603			CK45FF1H103Z	CERAMIC 0.010UF Z		
C604			CE04LW1H100M	ELECTRO 10UF 50WV		
C605			CE04LW0J222M	ELECTRO 2200UF 6.3WV	YMI	
C606			CK73FB1E104K	CHIP C 0.10UF K	KPETX	
C606			CK73FB1H683K	CHIP C 0.068UF K	MIX	
CN1			E40-8364-05	PIN ASSY		

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

8

Ref. No	Add- ress	New Parts	Parts No.	Description	Desti- nation	Re- marks
CN2			E40-8197-05	SOCKET FOR PIN ASSY		
CN3		*	E40-8485-05	FLAT CABLE CONNECTOR	KPET	
CN4			E40-4871-05	PIN ASSY		
CN5			E40-9831-05	SOCKET FOR PIN ASSY		
CN6			E40-9848-05	PIN ASSY		
CN7		*	E40-8490-05	FLAT CABLE CONNECTOR	KPETX	
CN61			E40-4245-05	PIN ASSY	YMI	
CN62			E40-4245-05	PIN ASSY	YMI	
CN63			E40-4428-05	PIN ASSY	YMI	
CN64			E40-4245-05	PIN ASSY	YMI	
CN65			E40-8196-05	PIN ASSY		6
J1			E70-0049-05	SCREW TERMINAL BOARD		45
J1		*	E70-0122-05	LOCK TERMINAL BOARD		6
J2			E70-0057-05	LOCK TERMINAL BOARD		45
J2			E70-0065-05	LOCK TERMINAL BOARD		
J3		*	E63-1143-05	PIN JACK		
J7		*	E63-1146-05	PIN JACK		
J8			E20-0321-05	LOCK TERMINAL BOARD(2P,F)		
J8			E70-0052-05	LOCK TERMINAL BOARD		
Δ J61			E03-0148-05	AC OUTLET	KPY	
Δ J61			E03-0149-05	AC OUTLET	MIE	
Δ J61			E03-0310-05	AC OUTLET	T	
Δ J61			E03-0325-05	AC OUTLET	X	56
W182			E31-0001-00	JUMPER WIRE		
Δ F1			F05-2525-05	FUSE (SEMKO) (250V T2.5AL)	YMXI	5
Δ F1			F05-3121-05	FUSE (SEMKO) (250V T3.15AL)	ET	
Δ F1			F05-3121-05	FUSE (SEMKO) (250V T3.15AL)	MIX	6
Δ F1			F50-0076-05	FUSE(5X20)	KP	4
Δ F1			F50-0077-05	FUSE(5X20)	KP	56
Δ F2			F05-2525-05	FUSE (SEMKO) (250V T2.5AL)	E	
CN66,67			J13-0075-05	FUSE CLIP		
CN68,69			J13-0075-05	FUSE CLIP	E	
CF1,2			L72-0531-05	CERAMIC FILTER	YMXI	
CF1,2			L72-0536-05	CERAMIC FILTER	ET	
CF1,2			L72-0596-05	CERAMIC FILTER	KP	
CF3			L72-0607-05	CERAMIC FILTER	YMXI	
L1		*	L39-1384-05	COMBINATION COIL		
L2			L40-1091-82	SMALL FIXED INDUCTOR(1.0UH)		
L3			L30-0911-05	AM IFT		
L4			L30-0933-05	FM IFT	KP	
L4			L30-0950-05	FM IFT	ET	
L5			L30-0951-05	FM IFT	ET	
L6,7			L79-1236-05	LC FILTER	ET	
L101-105			L39-1373-05	PHASE COMPENSATION COIL		
Δ T1		*	L07-2758-05	POWER TRANSFORMER	KPXET	
Δ T1		*	L07-2761-05	POWER TRANSFORMER	KPXET	
Δ T1		*	L07-2805-05	POWER TRANSFORMER	YMI	
X1			L77-2232-05	CRYSTAL RESONATOR		
R1			RK73FB2A101J	CHIP R 100 J 1/10W		
R4			RK73FB2A681J	CHIP R 680 J 1/10W		
R5			RK73FB2A332J	CHIP R 3.3K J 1/10W		
R6			RK73FB2A221J	CHIP R 220 J 1/10W		
R7			RK73FB2A821J	CHIP R 820 J 1/10W		

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

KRF-V4530D/V5030D/V6030D/VR-405/406/414
PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

9

Ref. No	Add-ress	New Parts	Parts No.	Description	Destination	Re-marks
R8			RK73FB2A100J	CHIP R 10	J 1/10W	ET
R8			RK73FB2A330J	CHIP R 33	J 1/10W	KPYMIX
R9			RK73FB2A391J	CHIP R 390	J 1/10W	
R10			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R11			RK73FB2A220J	CHIP R 22	J 1/10W	ET
R11			RK73FB2A330J	CHIP R 33	J 1/10W	KPYMIX
R12			RK73FB2A101J	CHIP R 100	J 1/10W	
R14			RK73FB2A101J	CHIP R 100	J 1/10W	KPET
R14			RK73FB2A271J	CHIP R 270	J 1/10W	MIXY
R15			RK73FB2A333J	CHIP R 33K	J 1/10W	ET
R15			RK73FB2A472J	CHIP R 4.7K	J 1/10W	KP
R16			RK73FB2A220J	CHIP R 22	J 1/10W	
R17			RK73FB2A362J	CHIP R 3.6K	J 1/10W	
R18			RK73FB2A302J	CHIP R 3.0K	J 1/10W	
R19			RK73FB2A822J	CHIP R 8.2K	J 1/10W	
R20			RK73FB2A392J	CHIP R 3.9K	J 1/10W	
R23			RK73FB2A153J	CHIP R 15K	J 1/10W	ET
R23			RK73FB2A332J	CHIP R 3.3K	J 1/10W	YMIX
R23			RK73FB2A912J	CHIP R 9.1K	J 1/10W	KP
R25			RK73FB2A163J	CHIP R 16K	J 1/10W	KP
R25			RK73FB2A183J	CHIP R 18K	J 1/10W	YMIX
R25			RK73FB2A273J	CHIP R 27K	J 1/10W	ET
R27, 28			RK73FB2A432J	CHIP R 4.3K	J 1/10W	ET
R27, 28			RK73FB2A682J	CHIP R 6.8K	J 1/10W	KP
R27, 28			RK73FB2A752J	CHIP R 7.5K	J 1/10W	YMIX
R29			RK73FB2A101J	CHIP R 100	J 1/10W	YMI
R30			RK73FB2A561J	CHIP R 560	J 1/10W	YMI
R31			RK73FB2A473J	CHIP R 47K	J 1/10W	YMI
R32			RK73FB2A272J	CHIP R 2.7K	J 1/10W	KPYMIX
R33, 34			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R35			RK73FB2A101J	CHIP R 100	J 1/10W	ET
R36			RK73FB2A102J	CHIP R 1.0K	J 1/10W	ET
R37			RK73FB2A392J	CHIP R 3.9K	J 1/10W	ET
R38			RK73FB2A102J	CHIP R 1.0K	J 1/10W	ET
R39			RK73FB2A103J	CHIP R 10K	J 1/10W	ET
R42			RK73FB2A103J	CHIP R 10K	J 1/10W	
R43			RK73FB2A221J	CHIP R 220	J 1/10W	
R44			RD14NB2E271J	RD 270	J 1/4W	
R45			RK73EB2B102J	CHIP R 1.0K	J 1/8W	
R46			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R47			RK73EB2B102J	CHIP R 1.0K	J 1/8W	
R48			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R49			RK73FB2A103J	CHIP R 10K	J 1/10W	
R50			RD14NB2E471J	RD 470	J 1/4W	
R51			RK73FB2A562J	CHIP R 5.6K	J 1/10W	
R52			RK73FB2A101J	CHIP R 100	J 1/10W	
R53			RK73FB2A222J	CHIP R 2.2K	J 1/10W	
R54			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R55			RK73FB2A333J	CHIP R 33K	J 1/10W	
R56, 57			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R58			RK73FB2A123J	CHIP R 12K	J 1/10W	
R59			RK73FB2A122J	CHIP R 1.2K	J 1/10W	
R72, 73			RK73FB2A153J	CHIP R 15K	J 1/10W	KP
R72, 73			RK73FB2A392J	CHIP R 3.9K	J 1/10W	ET
R72, 73			RK73FB2A822J	CHIP R 8.2K	J 1/10W	YMIX

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
 Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
 Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

10

Ref. No	Add-ress	New Parts	Parts No.	Description	Destination	Re-marks
R74			RK73FB2A473J	CHIP R 47K	J 1/10W	
R75			RK73FB2A822J	CHIP R 8.2K	J 1/10W	
R76			RK73FB2A182J	CHIP R 1.8K	J 1/10W	
R78			RK73FB2A821J	CHIP R 820	J 1/10W	
R79			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R80			RK73FB2A223J	CHIP R 22K	J 1/10W	ET
R81			RS14KB3A820J	FL-PROOF RS 82	J 1W	ET
R82			RK73FB2A272J	CHIP R 2.7K	J 1/10W	
R83			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R84			RK73EB2B102J	CHIP R 1.0K	J 1/8W	
R85-87			RK73FB2A105J	CHIP R 1.0M	J 1/10W	
R88			RK73FB2A563J	CHIP R 56K	J 1/10W	
R89			RK73FB2A333J	CHIP R 33K	J 1/10W	
R101,102			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R101,102			RK73FB2A102J	CHIP R 1.0K	J 1/10W	ETMXIY 6 5
R103,104			RK73FB2A273J	CHIP R 27K	J 1/10W	
R103,104			RK73FB2A273J	CHIP R 27K	J 1/10W	ETMXIY 6 5 6 5 45
R105,106			RK73FB2A101J	CHIP R 100	J 1/10W	
R105,106			RK73FB2A101J	CHIP R 100	J 1/10W	ETMXIY 6 5 6 5 45
R115,116			RD14BB2C102J	RD 1.0K	J 1/6W	KP
R117,118			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R119,120			RK73FB2A224J	CHIP R 220K	J 1/10W	
R121,122			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R123,124			RK73FB2A224J	CHIP R 220K	J 1/10W	
R125,126			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R127,128			RK73FB2A224J	CHIP R 220K	J 1/10W	
R129,130			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R131,132			RK73FB2A224J	CHIP R 220K	J 1/10W	
R133,134			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R135,136			RK73FB2A224J	CHIP R 220K	J 1/10W	
R137,138			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R139,140			RK73FB2A224J	CHIP R 220K	J 1/10W	
R141,142			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R143,144			RK73FB2A224J	CHIP R 220K	J 1/10W	
R153-156			RK73FB2A224J	CHIP R 220K	J 1/10W	
R159			RK73FB2A562J	CHIP R 5.6K	J 1/10W	
R161,162			RK73FB2A302J	CHIP R 3.0K	J 1/10W	
R163,164			RK73FB2A682J	CHIP R 6.8K	J 1/10W	
R165,166			RK73FB2A183J	CHIP R 18K	J 1/10W	
R167,168			RK73FB2A182J	CHIP R 1.8K	J 1/10W	
R169,170			RK73FB2A224J	CHIP R 220K	J 1/10W	
R171,172			RK73FB2A183J	CHIP R 18K	J 1/10W	
R173,174			RK73FB2A222J	CHIP R 2.2K	J 1/10W	
R175,176			RK73FB2A104J	CHIP R 100K	J 1/10W	
R177,178			RK73FB2A563J	CHIP R 56K	J 1/10W	
R179			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R180			RK73EB2B102J	CHIP R 1.0K	J 1/8W	
R181-184			RS14KB3DPR22J	FL-PROOF RS 0.22	J 2W	
R185,186			RK73FB2A563J	CHIP R 56K	J 1/10W	
R187,188			RK73FB2A182J	CHIP R 1.8K	J 1/10W	KPMXI 6
R187,188			RK73FB2A222J	CHIP R 2.2K	J 1/10W	KPMXIY 5
R187,188			RK73FB2A242J	CHIP R 2.4K	J 1/10W	E 6
R187,188			RK73FB2A272J	CHIP R 2.7K	J 1/10W	ET 5
R187,188			RK73FB2A272J	CHIP R 2.7K	J 1/10W	KP 4
R189,190			RS14KB3D120J	FL-PROOF RS 12	J 2W	

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
 Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
 Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

11

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
R191,192			RS14KB3D391J	FL-PROOF RS 390	J 2W	
R199,200			RK73FB2A333J	CHIP R 33K	J 1/10W	
R201,202			RK73FB2A303J	CHIP R 30K	J 1/10W	
R203,204			RK73FB2A113J	CHIP R 11K	J 1/10W	
R203,204			RK73FB2A113J	CHIP R 11K	J 1/10W	
R203,204			RK73FB2A153J	CHIP R 15K	J 1/10W	
R203,204			RK73FB2A912J	CHIP R 9.1K	J 1/10W	
R205,206			RK73FB2A471J	CHIP R 470	J 1/10W	
R209,210			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R211,212			RK73FB2A273J	CHIP R 27K	J 1/10W	
R213,214			RK73FB2A182J	CHIP R 1.8K	J 1/10W	
R215,216			RK73FB2A224J	CHIP R 220K	J 1/10W	
R217,218			RK73FB2A183J	CHIP R 18K	J 1/10W	
R219,220			RK73EB2B222J	CHIP R 2.2K	J 1/8W	
R221,222			RK73FB2A104J	CHIP R 100K	J 1/10W	
R223,224			RK73FB2A563J	CHIP R 56K	J 1/10W	
R225			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R227-230			RS14KB3DR22J	FL-PROOF RS 0.22	J 2W	
R233,234			RK73FB2A182J	CHIP R 1.8K	J 1/10W	
R233,234			RK73FB2A222J	CHIP R 2.2K	J 1/10W	
R233,234			RK73FB2A242J	CHIP R 2.4K	J 1/10W	
R233,234			RK73FB2A272J	CHIP R 2.7K	J 1/10W	
R233,234			RK73FB2A272J	CHIP R 2.7K	J 1/10W	
R235,236			RS14KB3D120J	FL-PROOF RS 12	J 2W	
R243,244			RK73FB2A333J	CHIP R 33K	J 1/10W	
R245,246			RK73FB2A303J	CHIP R 30K	J 1/10W	
R247,248			RK73FB2A113J	CHIP R 11K	J 1/10W	
R247,248			RK73FB2A113J	CHIP R 11K	J 1/10W	
R247,248			RK73FB2A153J	CHIP R 15K	J 1/10W	
R247,248			RK73FB2A912J	CHIP R 9.1K	J 1/10W	
R249,250			RK73FB2A471J	CHIP R 470	J 1/10W	
R251			RK73FB2A183J	CHIP R 18K	J 1/10W	
R252			RK73FB2A182J	CHIP R 1.8K	J 1/10W	
R253			RK73FB2A224J	CHIP R 220K	J 1/10W	
R254			RK73FB2A183J	CHIP R 18K	J 1/10W	
R256			RK73FB2A104J	CHIP R 100K	J 1/10W	
R257			RK73FB2A563J	CHIP R 56K	J 1/10W	
R259,260			RS14KB3DR22J	FL-PROOF RS 0.22	J 2W	
R262			RK73FB2A182J	CHIP R 1.8K	J 1/10W	
R262			RK73FB2A222J	CHIP R 2.2K	J 1/10W	
R262			RK73FB2A242J	CHIP R 2.4K	J 1/10W	
R262			RK73FB2A272J	CHIP R 2.7K	J 1/10W	
R262			RK73FB2A272J	CHIP R 2.7K	J 1/10W	
R263			RS14KB3D120J	FL-PROOF RS 12	J 2W	
R267			RK73FB2A303J	CHIP R 30K	J 1/10W	
R268			RK73FB2A113J	CHIP R 11K	J 1/10W	
R268			RK73FB2A113J	CHIP R 11K	J 1/10W	
R268			RK73FB2A153J	CHIP R 15K	J 1/10W	
R268			RK73FB2A912J	CHIP R 9.1K	J 1/10W	
R269			RK73FB2A471J	CHIP R 470	J 1/10W	
R270			RK73FB2A333J	CHIP R 33K	J 1/10W	
R271			RK73FB2A183J	CHIP R 18K	J 1/10W	
R272			RK73FB2A241J	CHIP R 240	J 1/10W	
R273			RK73FB2A332J	CHIP R 3.3K	J 1/10W	
R274			RK73FB2A183J	CHIP R 18K	J 1/10W	

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

12

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
R276			RK73FB2A224J	CHIP R 220K	J 1/10W	
R277			RK73FB2A331J	CHIP R 330	J 1/10W	
R278			RK73FB2A102J	CHIP R 1.0K	J 1/10W	
R279,280		*	R92-1955-05	METAL GLAZE 10K	J 1/4W	
R279,280		*	R92-1956-05	METAL GLAZE 33K	J 1/4W	
R279,280		*	R92-1956-05	METAL GLAZE 33K	J 1/4W	
R279,280		*	R92-1956-05	METAL GLAZE 33K	J 1/4W	
R281		*	R92-1945-05	METAL GLAZE 1	J 1/4W	
R283		*	RK73FB2A1R0J	CHIP R 1	J 1/10W	
R283		*	RK73FB2A1R0J	CHIP R 1	J 1/10W	
R283		*	RK73FB2A1R0J	CHIP R 1	J 1/10W	
R284		*	RK73FB2A104J	CHIP R 100K	J 1/10W	
R285		*	R92-1945-05	METAL GLAZE 1	J 1/4W	
R287			RK73EB2B101J	CHIP R 100	J 1/8W	
R301,302			RK73FB2A513J	CHIP R 51K	J 1/10W	
R303-306			RS14KB3A392J	FL-PROOF RS 3.9K	J 1W	
R303-306			RS14KB3A392J	FL-PROOF RS 3.9K	J 1W	
R303-306			RS14KB3A392J	FL-PROOF RS 3.9K	J 1W	
R307			RK73EB2B273J	CHIP R 27K	J 1/8W	
R307			RK73EB2B273J	CHIP R 27K	J 1/8W	
R307			RK73EB2B273J	CHIP R 27K	J 1/8W	
R308			RK73FB2A273J	CHIP R 27K	J 1/10W	
R308			RK73FB2A273J	CHIP R 27K	J 1/10W	
R309,310			RK73FB2A1R0J	CHIP R 1	J 1/10W	
R309,310			RK73FB2A1R0J	CHIP R 1	J 1/10W	
R312			RD14NB2E103J	RD 10K	J 1/4W	
R313,314			RK73FB2A473J	CHIP R 47K	J 1/10W	
R315			RK73FB2A1R0J	CHIP R 1	J 1/10W	
R316			RD14NB2E101J	RD 100	J 1/4W	
R317			RD14BB2C752J	RD 7.5K	J 1/6W	
R320			RK73FB2A103J	CHIP R 10K	J 1/10W	
R322			RD14BB2C103J	RD 10K	J 1/6W	
R323			RK73FB2A393J	CHIP R 39K	J 1/10W	
R324,325			RK73FB2A104J	CHIP R 100K	J 1/10W	
R324,325			RK73FB2A204J	CHIP R 200K	J 1/10W	
R324,325			RK73FB2A753J	CHIP R 75K	J 1/10W	
R324,325			RK73FB2A753J	CHIP R 75K	J 1/10W	
R326-328			RK73FB2A473J	CHIP R 47K	J 1/10W	
R329			RK73FB2A123J	CHIP R 12K	J 1/10W	
R330			RK73FB2A153J	CHIP R 15K	J 1/10W	
R331			RK73FB2A332J	CHIP R 3.3K	J 1/10W	
R332			RK73FB2A682J	CHIP R 6.8K	J 1/10W	
R333			RK73FB2A223J	CHIP R 22K	J 1/10W	
R334			RK73FB2A123J	CHIP R 12K	J 1/10W	
R335			RK73FB2A153J	CHIP R 15K	J 1/10W	
R336			RK73FB2A332J	CHIP R 3.3K	J 1/10W	
R337			RK73FB2A682J	CHIP R 6.8K	J 1/10W	
R339,340			RK73FB2A472J	CHIP R 4.7K	J 1/10W	
R341		*	R92-1945-05	METAL GLAZE 1	J 1/4W	
R342-344			RS14KB3A151J	FL-PROOF RS 150	J 1W	
R347			RS14KB3D4R7J	FL-PROOF RS 4.7	J 2W	
R349			RS14KB3A4R7J	FL-PROOF RS 4.7	J 1W	
R350			RK73FB2A1R0J	CHIP R 1	J 1/10W	
R350			RK73FB2A1R0J	CHIP R 1	J 1/10W	

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

KRF-V4530D/V5030D/V6030D/NR-405/406/414
PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

13

Ref. No	Address	New Parts	Parts No.	Description	Destination	Remarks
Δ R350			RK73FB2A1R0J	CHIP R 1 J 1/10W	KP	5
R351			RK73FB2A103J	CHIP R 10K J 1/10W		
R352			RK73FB2A223J	CHIP R 22K J 1/10W		
R353			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R356-358			RK73FB2A103J	CHIP R 10K J 1/10W		
R360			RK73FB2A103J	CHIP R 10K J 1/10W		
R361,362			RK73FB2A473J	CHIP R 47K J 1/10W		
R363			RK73FB2A361J	CHIP R 360 J 1/10W		
R370			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R371			RK73FB2A563J	CHIP R 56K J 1/10W		
R372			RK73FB2A104J	CHIP R 100K J 1/10W		
R373			RK73FB2A361J	CHIP R 360 J 1/10W		
R375			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R377,378			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R384			RK73EB2B102J	CHIP R 1.0K J 1/8W		
R387,388			RK73FB2A473J	CHIP R 47K J 1/10W		
R389			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R390			RK73FB2A473J	CHIP R 47K J 1/10W		
R391-394			RK73FB2A470J	CHIP R 47 J 1/10W		
Δ R397-399			RD14NB2E1R0J	RD 1 J 1/4W		
Δ R601			RD14NB2E1R0J	RD 1 J 1/4W	KP	
R604			RD14NB2E100J	RD 10 J 1/4W	XET	
R604			RD14NB2E390J	RD 39 J 1/4W	ET	
R609			RD14NB2E151J	RD 150 J 1/4W	X	
R609			RD14NB2E181J	RD 180 J 1/4W		
R609			RD14NB2E2R2J	RD 2.2 J 1/4W	YMI	
R609			RD14NB2E270J	RD 27 J 1/4W	KP	
Δ R610			R92-1844-05	CARBON 3.3M J 1/2W	KP	
VR1			R32-0037-05	SEMI FIXED VARIABLE RESISTOR		
W108			R92-0670-05	CHIP R 0 OHM		
W262			R92-0670-05	CHIP R 0 OHM		
W301			R92-0679-05	CHIP R 0 OHM		
W302			R92-0670-05	CHIP R 0 OHM		
W303-306			R92-0679-05	CHIP R 0 OHM		
W307			R92-0670-05	CHIP R 0 OHM		
W308			R92-0679-05	CHIP R 0 OHM		
W309-311			R92-0670-05	CHIP R 0 OHM		
W312			R92-0679-05	CHIP R 0 OHM		
W313			R92-0670-05	CHIP R 0 OHM		
W315-318			R92-0679-05	CHIP R 0 OHM		
W319,320			R92-0670-05	CHIP R 0 OHM		
W321			R92-0679-05	CHIP R 0 OHM		
W322,323			R92-0670-05	CHIP R 0 OHM		
W324-333			R92-0679-05	CHIP R 0 OHM		
W334,335			R92-0670-05	CHIP R 0 OHM	KP	45
W336			R92-0679-05	CHIP R 0 OHM		
W337,338			R92-0670-05	CHIP R 0 OHM	KP	45
W338,339			R92-0670-05	CHIP R 0 OHM		6
W338,339			R92-0670-05	CHIP R 0 OHM	XYEMTI	5
W340,341			R92-0679-05	CHIP R 0 OHM		
W342,343			R92-0670-05	CHIP R 0 OHM		
W506			R92-0679-05	CHIP R 0 OHM		
W513,514			R92-0679-05	CHIP R 0 OHM		
W523			R92-0679-05	CHIP R 0 OHM		
W651-655			R92-0670-05	CHIP R 0 OHM		

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia

Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)

Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

14

Ref. No	Address	New Parts	Parts No.	Description	Destination	Remarks
W656			R92-0670-05	CHIP R 0 OHM	YMI	6
W659			R92-0670-05	CHIP R 0 OHM		
W660			R92-0670-05	CHIP R 0 OHM	ET	
W662			R92-0670-05	CHIP R 0 OHM		
W680			R92-0679-05	CHIP R 0 OHM		
W683			R92-0679-05	CHIP R 0 OHM	IX	6
W683			R92-0679-05	CHIP R 0 OHM	KP	5
W683			R92-0679-05	CHIP R 0 OHM	KP	4
W683			R92-0679-05	CHIP R 0 OHM	KPM	6
W683			R92-0679-05	CHIP R 0 OHM	MIX	5
W684,685			R92-0679-05	CHIP R 0 OHM		
K1,2			S76-0042-05	MAGNETIC RELAY		
K3			S76-0042-05	MAGNETIC RELAY		6
K4			S76-0042-05	MAGNETIC RELAY		
Δ K601			S76-0099-05	MAGNETIC RELAY	KP	5
Δ K601			S76-0099-05	MAGNETIC RELAY		6
Δ K601		*	S76-0107-05	MAGNETIC RELAY	EMXI	5
S1			S62-0034-05	SLIDE SWITCH	YMI	
D1			UDZ3.3B	ZENER DIODE		
Δ D101			D5SBA20F03	DIODE		
Δ S102			S1ZB20(4101)	DIODE		
Δ D103			D5SBA20F03	DIODE	KP	56
Δ D103			D5SBA20F03	DIODE	XY	
Δ D103			RBV-602LFA	DIODE	ETMI	
D104			HZS16N(B2)	ZENER DIODE		
D104			MTZJ16(B)	ZENER DIODE		
D105			HZS15N(B2)	ZENER DIODE		
D105			MTZJ15(B)	ZENER DIODE		
D106,107			MA111	DIODE		
D108			UDZ3.3B	ZENER DIODE	KP	
D108			UDZ5.6B	ZENER DIODE	ET	5
D108			UDZ6.2B	ZENER DIODE	E	6
D108			UDZ6.8B	ZENER DIODE	KPMXIY	5
D108			UDZ8.2B	ZENER DIODE		
D109			UDZ10B	ZENER DIODE	KPMXI	6
D109			UDZ11B	ZENER DIODE	E	6
D109			UDZ13B	ZENER DIODE	ET	5
D109			UDZ13B	ZENER DIODE	KP	4
D109			UDZ13B	ZENER DIODE	MI	5
D109			UDZ15B	ZENER DIODE	KPMXI	6
D109			UDZ16B	ZENER DIODE	KPMXIY	5
D110			UDZ10B	ZENER DIODE	ET	5
D110			UDZ13B	ZENER DIODE	E	6
D110			UDZ13B	ZENER DIODE	KP	4
D110			UDZ13B	ZENER DIODE		
D110			UDZ16B	ZENER DIODE	KPMXIY	5
D111-115			MA111	DIODE	KPMXI	6
D117-120			UDZ15B	ZENER DIODE		
D117-120			UDZ15B	ZENER DIODE	ETMXIY	6
D117-120			UDZ15B	ZENER DIODE		5
D121			UDZ15B	ZENER DIODE	KP	5
D122			MA111	DIODE		
D123			UDZ3.9B	ZENER DIODE		
D123			HSS104A	DIODE		
D123			1SS133	DIODE		

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia

Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)

Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

KRF-V4530D/V5030D/V6030D/VR-405/406/414

PARTS LIST

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
D124 D125,126 D125,126 D127,128 D129			UDZ3.9B HSS104A 1SS133 MA111 MA111	ZENER DIODE DIODE DIODE DIODE DIODE	YMI YMI	6
D130 D201 D201 D201 D203			MA111 DA204U MA143A 1SS302 HZS8.2N(B2)	DIODE DIODE DIODE DIODE ZENER DIODE		
D203 D204 D204 D209 D209			MTZJ8.2(B) HZS5.1N(B2) MTZJ5.1(B) HZS3.3N(B2) MTZJ3.3(B)	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE		
D211 D213 D601 D602-605 D602-605			MA111 MA111 S1ZB20(4101) HSS104A 1SS133	DIODE DIODE DIODE DIODE DIODE	ET	
D608 D608 D608 IC101 IC101			HSS104A RB721Q 1SS133 * STK412-010A * STK412-010A	DIODE DIODE DIODE HYBRID IC HYBRID IC	KP YMIKXET KP ETMXIY KP	5 5
IC101 IC102 IC102 IC102 IC103			* STK412-020A * STK413-010A * STK413-010A * STK413-020A * KIA7812API	HYBRID IC HYBRID IC HYBRID IC HYBRID IC ANALOGUE IC	ETMXIY KP	6 5 5 6
IC104 IC105 IC105 IC106 IC107,108			* KIA7912PI NJM4580ED NJM4580ED NJU7313AM NJM4565M	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	ETMXIY	6 5
IC109 IC110-112 IC113 IC114 IC201			NJU7313AM NJM4565M * STK442-090 * STK443-090 LA1837	ANALOGUE IC ANALOGUE IC HYBRID IC HYBRID IC ANALOGUE IC	KP KP KP KP KPET	4 4
IC201 IC202 IC601 IC602 Q1 ,2 Q1 ,2 Q5 ,6 Q7 ,8 Q7 ,8 Q7 ,8 Q11 ,12 Q13 ,14 Q13 ,14 Q16 Q17 Q51 -53			LA1838 LC72131 * XC62FP5102P BA05T 2SC1740S(Q,R) 2SC2785(F,E) 2SD2351 2SC1740S(Q,R) 2SC2785(F,E) 2SD2351 2SC2878(B) 2SA1576A(R,S)	ANALOGUE IC MOS-IC ANALOGUE IC ANALOGUE IC TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	MXIY KP YMIKXET	

L : Scandinavia Y : PK(Far East,Hawaii) Y : AAFES(Europe)
K : USA T : England X : Australia
P : Canada E : Europe Q : Russia
R : Mexico G : Germany H : Korea
C : China V : China(Shanghai) M : Other Areas
I : Malaysia
Δ indicates safety critical components.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
Q51-53 Q54 Q113-117 Q118 Q118			2SB1218A(Q,R) 2SB1640 2SC3906K 2SA1576A(R,S) 2SB1218A(Q,R)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		
Q119,120 Q121 Q121 Q122,123 Q132			2SC3906K 2SA1576A(R,S) 2SB1218A(Q,R) 2SC1845(F,E) 2SC3906K	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		
Q133 Q134 Q135 Q135 Q136			2SB1566 2SC1845(F,E) 2SA1576A(R,S) 2SB1218A(Q,R) UN5219	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR		
Q137 Q138 Q139,140 Q141 Q142			2SD2395 2SB1640 DTC123JUA DTC123JUA DTC123JUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR		6
Q201 Q201 Q202 Q202 Q203,204			2SC4081(R,S) 2SD1819A(Q,R) 2SA1576A(R,S) 2SB1218A(Q,R) 2SC4081(R,S)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	YMI	
Q203,204 Q206,207 Q206,207 Q210,211 Q212			2SD1819A(Q,R) 2SC4081(R,S) 2SD1819A(Q,R) 2SD1757K 2SA1576A(R,S)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	YMI ET ET	
Q212 Q214 Q214 Q601 Q601			2SB1218A(Q,R) 2SA1576A(R,S) 2SB1218A(Q,R) 2SC1740S(Q,R) 2SC2785(F,E)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		
A1 A1			W02-2584-05 W02-2622-05	FM FRONT-END ASSY FM FRONT-END ASSY	ET KPYMIKX	
PREAMP (X08-3010-10)						
C1 ,2 C3 C4 C5 ,6 C7 ,8			CE04RW1C100M CK73FB1H103K CC73FCH1H101J CK73FB1H222K CK73FB1E104K	ELECTRO CHIP C CHIP C CHIP C CHIP C	10UF 0.010UF 100PF 2200PF 0.10UF	16WV K J K K
C9 ,10 C21 C22 C23 C24 ,25			CE04RW1C4R7M CK73FB1E104K CE04LW1H100M CK73FB1H102K CK73FB1E104K	ELECTRO CHIP C ELECTRO CHIP C CHIP C	4.7UF 0.10UF 10UF 1000PF 0.10UF	16WV K 50WV K K
C26 C27 C29 C31 C32		*	CK73FF1C105Z C91-1597-05 CK73FB1H103K CC73FCH1H220J CK73FB1H472K	CHIP C CER.MIC CHIP C CHIP C CHIP C	1.0UF 4.7UF 0.010UF 22PF 4700PF	Z Z K J K
C33			CC73FCH1H220J	CHIP C	22PF	J

L : Scandinavia Y : PK(Far East,Hawaii) Y : AAFES(Europe)
K : USA T : England X : Australia
P : Canada E : Europe Q : Russia
R : Mexico G : Germany H : Korea
C : China V : China(Shanghai) M : Other Areas
I : Malaysia
Δ indicates safety critical components.

KRF-V4530D/N5030D/N6030D/NR-405/406/414
PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

17

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C34			CK73FB1H472K	CHIP C 4700PF	K	
C35			CK73FF1C105Z	CHIP C 1.0UF	Z	
C41			CC73FCH1H220J	CHIP C 22PF	J	
C42			CC73FCH1H270J	CHIP C 27PF	J	
C43, 44			CK73FB1H102K	CHIP C 1000PF	K	
C45			CK73FB1H103K	CHIP C 0.010UF	K	
C46			CC73FCH1H220J	CHIP C 22PF	J	
C54, 55			CC73FCH1H220J	CHIP C 22PF	J	
C56			CK73FB1H102K	CHIP C 1000PF	K	
C57			CK73FF1C105Z	CHIP C 1.0UF	Z	
C58, 59			CK73FB1H103K	CHIP C 0.010UF	K	
C103, 104			CK73FF1C105Z	CHIP C 1.0UF	Z	
C105, 106			CK73FB1H182K	CHIP C 1800PF	K	
C107, 108			CK73FB1H222K	CHIP C 2200PF	K	
C109			CK73FB1H103K	CHIP C 0.010UF	K	
C110			CC73FCH1H101J	CHIP C 100PF	J	
C121, 122			CC73FCH1H220J	CHIP C 22PF	J	
C125			CK73FB1H103K	CHIP C 0.010UF	K	
C126			CC73FCH1H101J	CHIP C 100PF	J	
C141			CC73FCH1H101J	CHIP C 100PF	J	
C151, 152			CK73FF1C225Z	CHIP C 2.2UF	Z	
C153, 154			CC73FCH1H101J	CHIP C 100PF	J	
C155, 156			CK73FF1C105Z	CHIP C 1.0UF	Z	
C157-160			CK73FF1C225Z	CHIP C 2.2UF	Z	
C161, 162			CK73FB1H822K	CHIP C 8200PF	K	
C163, 164			CK73FB1H153K	CHIP C 0.015UF	K	
C165, 166			CK73FB1C334K	CHIP C 0.33UF	K	
C167, 168			CK73FF1C225Z	CHIP C 2.2UF	Z	
C169, 170			CK73FB1H222K	CHIP C 2200PF	K	
C177-182			CK73FF1C225Z	CHIP C 2.2UF	Z	
C183			CK73FF1C105Z	CHIP C 1.0UF	Z	
C184			CC73FCH1H221J	CHIP C 220PF	J	
C185, 186			CK73FB1E104K	CHIP C 0.10UF	K	
C187, 188			CK73FB1H102K	CHIP C 1000PF	K	
C203, 204			CK73FF1C105Z	CHIP C 1.0UF	Z	
C205, 206			CK73FB1H182K	CHIP C 1800PF	K	
C207, 208			CK73FB1H222K	CHIP C 2200PF	K	
C209			CK73FB1H103K	CHIP C 0.010UF	K	
C210			CC73FCH1H101J	CHIP C 100PF	J	
C251-256			CC73FCH1H221J	CHIP C 220PF	J	
C303, 304			CK73FF1C105Z	CHIP C 1.0UF	Z	
C305			CK73FB1H182K	CHIP C 1800PF	K	
C306			CK73FB1H682K	CHIP C 6800PF	K	
C307			CK73FB1H222K	CHIP C 2200PF	K	
C308			CK73FB1H822K	CHIP C 8200PF	K	
C309			CK73FB1H103K	CHIP C 0.010UF	K	
C310			CC73FCH1H101J	CHIP C 100PF	J	
C401-403			CK73FB1H103K	CHIP C 0.010UF	K	
C411-414			CC73FCH1H220J	CHIP C 22PF	J	
C415-418			CC73FCH1H101J	CHIP C 100PF	J	
C419			CC73FCH1H100D	CHIP C 10PF	D	
C450			CK73FB1H103K	CHIP C 0.010UF	K	
C451			CK73FB1E104K	CHIP C 0.10UF	K	
C452			CE04LW1C222M	ELECTRO 2200UF	16WV	
C453, 454			CK73FB1E104K	CHIP C 0.10UF	K	

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
 Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
 Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas A indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

18

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C455			CE04LW1A101M	ELECTRO 100UF	10WV	
C456, 457			CK73FB1E104K	CHIP C 0.10UF	K	
C458			C92-0047-05	CHIP-ELE 47UF	6.3WV	
C459, 460			CK73FB1E104K	CHIP C 0.10UF	K	
C461			CE04LW1E470M	ELECTRO 47UF	25WV	
C501-504			CK73FB1E104K	CHIP C 0.10UF	K	
C505			CK73FB1H102K	CHIP C 1000PF	K	
C506			CC73FCH1H471J	CHIP C 470PF	J	
C507			CK73FB1H103K	CHIP C 0.010UF	K	
C508			CE04LW1H2R2M	ELECTRO 2.2UF	50WV	
C509			CE04LW1E470M	ELECTRO 47UF	25WV	
C510, 511			CK73FB1H103K	CHIP C 0.010UF	K	
C601			CC73FCH1H470J	CHIP C 47PF	J	
C602			CE04LW1E470M	ELECTRO 47UF	25WV	
C603			CC73FCH1H470J	CHIP C 47PF	J	
C604			CE04LW1E470M	ELECTRO 47UF	25WV	
C607			CC73FCH1H470J	CHIP C 47PF	J	
C608			CE04LW1E470M	ELECTRO 47UF	25WV	
C609, 610			CC73FCH1H470J	CHIP C 47PF	J	
C621, 622			CK73FB1E104K	CHIP C 0.10UF	K	
C751, 752			CC73FCH1H221J	CHIP C 220PF	J	
C753			CK73FB1H103K	CHIP C 0.010UF	K	
CN1		*	E40-8485-05	FLAT CABLE CONNECTOR		
CN2		*	E40-8484-05	FLAT CABLE CONNECTOR		
CN5		*	E40-4248-05	PIN ASSY.		
CN5		*	E40-8358-05	PIN ASSY.		
J1		*	E63-1080-05	PIN JACK		
J1		*	E63-1140-05	PIN JACK		
J2		*	E63-1139-05	PIN JACK		
J2		*	E63-1139-05	PIN JACK		
J3		*	E63-1138-05	PIN JACK		
J61		*	E63-1141-05	PIN JACK		
J75			E11-0293-05	MINIATURE PHONE JACK(2P)		
E1, 2			J11-0809-05	WIRE CLAMPER		
L31, 32		*	L92-0511-05	CHIP FERRITE		
L41		*	L92-0510-05	CHIP FERRITE		
L41		*	L77-2296-05	CRYSTAL RESONATOR(12.288MHZ)		
CP41-44			R90-0728-05	MULTI-COMP 180 X4		
CP51, 52			R90-0714-05	MULTI-COMP 10K X4		
R1, 2			RK73FB2A562J	CHIP R 5.6K	J 1/10W	
R3, 4			RK73FB2A101J	CHIP R 100	J 1/10W	
R5, 6			RK73FB2A471J	CHIP R 470	J 1/10W	
R7 -10			RK73FB2A472J	CHIP R 4.7K	J 1/10W	
R11, 12			RK73FB2A471J	CHIP R 470	J 1/10W	
R20		*	R92-1946-05	METAL GLAZE 4.7	J 1/4W	
R21			RK73FB2A221J	CHIP R 220	J 1/10W	
R31, 32			RK73FB2A820J	CHIP R 82	J 1/10W	
R33			RK73FB2A471J	CHIP R 470	J 1/10W	
R34			RD14NB2E4R7J	RD 4.7	J 1/4W	
R41, 42			RK73FB2A105J	CHIP R 1.0M	J 1/10W	
R43 -45			RK73FB2A221J	CHIP R 220	J 1/10W	
R54			RK73FB2A912J	CHIP R 9.1K	J 1/10W	

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
 Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
 Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas A indicates safety critical components.

PARTS LIST

KRF-V4530D/V5030D/V6030D/MR-405/406/414

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
R55 -58			RK73FB2A221J	CHIP R 220 J 1/10W		
R59			RK73FB2A101J	CHIP R 100 J 1/10W		
R66			RK73FB2A104J	CHIP R 100K J 1/10W		
R67			RK73FB2A103J	CHIP R 10K J 1/10W		
R68			RK73FB2A221J	CHIP R 220 J 1/10W		
R101,102			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R103,104			RK73FB2A104J	CHIP R 100K J 1/10W		
R107,108			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R109,110			RK73FB2A103J	CHIP R 10K J 1/10W		
R111,112			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R113,114			RK73FB2A221J	CHIP R 220 J 1/10W		
R121-124			RK73FB2A103J	CHIP R 10K J 1/10W		
R125,126			RK73FB2A101J	CHIP R 100 J 1/10W		
R127,128			RK73FB2A242J	CHIP R 2.4K J 1/10W		
R151-156			RK73FB2A100J	CHIP R 10 J 1/10W		
R157,158			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R159-164			RK73FB2A101J	CHIP R 100 J 1/10W		
R165			RK73FB2A751J	CHIP R 750 J 1/10W		
R166			RK73FB2A272J	CHIP R 2.7K J 1/10W		
R168,169			RK73FB2A1R0J	CHIP R 1 J 1/10W		
R170,171			RK73FB2A471J	CHIP R 470 J 1/10W		
R172-175			RK73FB2A473J	CHIP R 47K J 1/10W		
R201,202			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R203,204			RK73FB2A104J	CHIP R 100K J 1/10W		
R207,208			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R209,210			RK73FB2A272J	CHIP R 2.7K J 1/10W		
R211,212			RK73FB2A562J	CHIP R 5.6K J 1/10W		
R213,214			RK73FB2A221J	CHIP R 220 J 1/10W		
R215,216			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R217,218			RK73FB2A562J	CHIP R 5.6K J 1/10W		
R251,252			RK73FB2A153J	CHIP R 15K J 1/10W		
R253,254			RK73FB2A223J	CHIP R 22K J 1/10W		
R255,256			RK73FB2A103J	CHIP R 10K J 1/10W		
R257,258			RK73FB2A223J	CHIP R 22K J 1/10W		
R259,260			RK73FB2A103J	CHIP R 10K J 1/10W		
R261,262			RK73FB2A223J	CHIP R 22K J 1/10W		
R301			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R302			RK73FB2A103J	CHIP R 10K J 1/10W		
R303,304			RK73FB2A104J	CHIP R 100K J 1/10W		
R307			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R308			RK73FB2A123J	CHIP R 12K J 1/10W		
R309,310			RK73FB2A103J	CHIP R 10K J 1/10W		
R311,312			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R313,314			RK73FB2A221J	CHIP R 220 J 1/10W		
R401-406			RK73FB2A471J	CHIP R 470 J 1/10W		
R407			RK73FB2A473J	CHIP R 47K J 1/10W		
R412			RK73FB2A221J	CHIP R 220 J 1/10W		
R426,427			RK73FB2A221J	CHIP R 220 J 1/10W		
R428			RK73FB2A1R0J	CHIP R 1 J 1/10W		
R431,432			RK73FB2A103J	CHIP R 10K J 1/10W		
Δ R450-453		*	R92-1945-05	METAL GLAZE 1 J 1/4W		
R454		*	R92-1946-05	METAL GLAZE 4.7 J 1/4W		
R461,462			RK73FB2A221J	CHIP R 220 J 1/10W		
R463			RK73FB2A473J	CHIP R 47K J 1/10W		
R464			RK73FB2A472J	CHIP R 4.7K J 1/10W		

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
R465			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R501-503			RK73FB2A221J	CHIP R 220 J 1/10W		
R505			RK73FB2A103J	CHIP R 10K J 1/10W		
R514			RK73FB2A101J	CHIP R 100 J 1/10W		
R515			RK73FB2A221J	CHIP R 220 J 1/10W		
R516			RK73FB2A103J	CHIP R 10K J 1/10W		
R517			RK73FB2A221J	CHIP R 220 J 1/10W		
R518			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R519			RK73FB2A221J	CHIP R 220 J 1/10W		
R520,521			RK73FB2A103J	CHIP R 10K J 1/10W		
R522,523			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R524			RK73FB2A333J	CHIP R 33K J 1/10W		
R527			RK73FB2A103J	CHIP R 10K J 1/10W		
R601			RK73FB2A820J	CHIP R 82 J 1/10W		
R603			RK73FB2A820J	CHIP R 82 J 1/10W		
R607			RK73FB2A820J	CHIP R 82 J 1/10W		
R609			RK73FB2A104J	CHIP R 100K J 1/10W		
R610			RK73FB2A680J	CHIP R 68 J 1/10W		
R611			RK73FB2A104J	CHIP R 100K J 1/10W		
R612			RK73FB2A680J	CHIP R 68 J 1/10W		
R613			RK73FB2A1R0J	CHIP R 1 J 1/10W		
Δ R631,632			RK73FB2A681J	CHIP R 680 J 1/10W		
Δ R633,634		*	R92-1954-05	METAL GLAZE 100 J 1/10W		
D1			DAN202U	DIODE		
D1			MA142WK	DIODE		
D1			1SS301	DIODE		
D2			DAP202U	DIODE		
D2			MA142WA	DIODE		
D2			1SS300	DIODE		
D3			DAN202U	DIODE		
D3			MA142WK	DIODE		
D3			1SS301	DIODE		
D6			MA111	DIODE		
Δ D41			S1ZB20(4072)	DIODE		
D42,43			UDZ5.6B	ZENER DIODE		
D44			UDZ3.9B	ZENER DIODE		
D51,52			MA111	DIODE		
D61,62			UDZ5.6B	ZENER DIODE		
D75,76			MA111	DIODE		
D151,152			UDZ7.5B	ZENER DIODE		
IC1			NJM4565MD	IC(OP AMP X2)		
IC2		*	AK4527-VQ	MOS-IC		
IC4			TC7WU04FU	MOS-IC		
IC5		*	AK4110-VF	MOS-IC		
IC6		*	TC7WH123FU	MOS-IC		
IC11			NJM4565MD	IC(OP AMP X2)		
IC12			NJU7311AM	MOS-IC		
IC13			NJM4565MD	IC(OP AMP X2)		
IC14			NJU7311AM	MOS-IC		
IC15			M62446FP	ANALOGUE IC		
IC21			NJM4565MD	IC(OP AMP X2)		
IC31			NJM4565MD	IC(OP AMP X2)		
IC41		*	TC74HC07AF	MOS-IC		
IC42			TC74HCT7007AF	MOS-IC		

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

KRF-V4530D/V5030D/V6030D/MR-405/406/414
PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

17

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C34			CK73FB1H472K	CHIP C 4700PF	K	
C35			CK73FF1C105Z	CHIP C 1.0UF	Z	
C41			CC73FCH1H220J	CHIP C 22PF	J	
C42			CC73FCH1H270J	CHIP C 27PF	J	
C43, 44			CK73FB1H102K	CHIP C 1000PF	K	
C45			CK73FB1H103K	CHIP C 0.010UF	K	
C46			CC73FCH1H220J	CHIP C 22PF	J	
C54, 55			CC73FCH1H220J	CHIP C 22PF	J	
C56			CK73FB1H102K	CHIP C 1000PF	K	
C57			CK73FF1C105Z	CHIP C 1.0UF	Z	
C58, 59			CK73FB1H103K	CHIP C 0.010UF	K	
C103, 104			CK73FF1C105Z	CHIP C 1.0UF	Z	
C105, 106			CK73FB1H182K	CHIP C 1800PF	K	
C107, 108			CK73FB1H222K	CHIP C 2200PF	K	
C109			CK73FB1H103K	CHIP C 0.010UF	K	
C110			CC73FCH1H101J	CHIP C 100PF	J	
C121, 122			CC73FCH1H220J	CHIP C 22PF	J	
C125			CK73FB1H103K	CHIP C 0.010UF	K	
C126			CC73FCH1H101J	CHIP C 100PF	J	
C141			CC73FCH1H101J	CHIP C 100PF	J	
C151, 152			CK73FF1C225Z	CHIP C 2.2UF	Z	
C153, 154			CC73FCH1H101J	CHIP C 100PF	J	
C155, 156			CK73FF1C105Z	CHIP C 1.0UF	Z	
C157-160			CK73FF1C225Z	CHIP C 2.2UF	Z	
C161, 162			CK73FB1H822K	CHIP C 8200PF	K	
C163, 164			CK73FB1H153K	CHIP C 0.015UF	K	
C165, 166			CK73FB1C334K	CHIP C 0.33UF	K	
C167, 168			CK73FF1C225Z	CHIP C 2.2UF	Z	
C169, 170			CK73FB1H222K	CHIP C 2200PF	K	
C177-182			CK73FF1C225Z	CHIP C 2.2UF	Z	
C183			CK73FF1C105Z	CHIP C 1.0UF	Z	
C184			CC73FCH1H221J	CHIP C 220PF	J	
C185, 186			CK73FB1E104K	CHIP C 0.10UF	K	
C187, 188			CK73FB1H102K	CHIP C 1000PF	K	
C203, 204			CK73FF1C105Z	CHIP C 1.0UF	Z	
C205, 206			CK73FB1H182K	CHIP C 1800PF	K	
C207, 208			CK73FB1H222K	CHIP C 2200PF	K	
C209			CK73FB1H103K	CHIP C 0.010UF	K	
C210			CC73FCH1H101J	CHIP C 100PF	J	
C251-256			CC73FCH1H221J	CHIP C 220PF	J	
C303, 304			CK73FF1C105Z	CHIP C 1.0UF	Z	
C305			CK73FB1H182K	CHIP C 1800PF	K	
C306			CK73FB1H682K	CHIP C 6800PF	K	
C307			CK73FB1H222K	CHIP C 2200PF	K	
C308			CK73FB1H822K	CHIP C 8200PF	K	
C309			CK73FB1H103K	CHIP C 0.010UF	K	
C310			CC73FCH1H101J	CHIP C 100PF	J	
C401-403			CK73FB1H103K	CHIP C 0.010UF	K	
C411-414			CC73FCH1H220J	CHIP C 22PF	J	
C415-418			CC73FCH1H101J	CHIP C 100PF	J	
C419			CC73FCH1H100D	CHIP C 10PF	D	
C450			CK73FB1H103K	CHIP C 0.010UF	K	
C451			CK73FB1E104K	CHIP C 0.10UF	K	
C452			CE04LW1C222M	ELECTRO 2200UF	16WV	
C453, 454			CK73FB1E104K	CHIP C 0.10UF	K	

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia

Y: PX(Far East,Hawaii)

T: England

E: Europe

G: Germany

V: China(Shanghai)

Y: AAFES(Europe)

X: Australia

Q: Russia

H: Korea

M: Other Areas

A indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

18

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C455			CE04LW1A101M	ELECTRO 100UF	10WV	
C456, 457			CK73FB1E104K	CHIP C 0.10UF	K	
C458			C92-0047-05	CHIP-ELE 47UF	6.3WV	
C459, 460			CK73FB1E104K	CHIP C 0.10UF	K	
C461			CE04LW1E470M	ELECTRO 47UF	25WV	
C501-504			CK73FB1E104K	CHIP C 0.10UF	K	
C505			CK73FB1H102K	CHIP C 1000PF	K	
C506			CC73FCH1H471J	CHIP C 470PF	J	
C507			CK73FB1H103K	CHIP C 0.010UF	K	
C508			CE04LW1H2R2M	ELECTRO 2.2UF	50WV	
C509			CE04LW1E470M	ELECTRO 47UF	25WV	
C510, 511			CK73FB1H103K	CHIP C 0.010UF	K	
C601			CC73FCH1H470J	CHIP C 47PF	J	
C602			CE04LW1E470M	ELECTRO 47UF	25WV	
C603			CC73FCH1H470J	CHIP C 47PF	J	
C604			CE04LW1E470M	ELECTRO 47UF	25WV	
C607			CC73FCH1H470J	CHIP C 47PF	J	
C608			CE04LW1E470M	ELECTRO 47UF	25WV	
C609, 610			CC73FCH1H470J	CHIP C 47PF	J	
C621, 622			CK73FB1E104K	CHIP C 0.10UF	K	
C751, 752			CC73FCH1H221J	CHIP C 220PF	J	
C753			CK73FB1H103K	CHIP C 0.010UF	K	
CN1		*	E40-8485-05	FLAT CABLE CONNECTOR		
CN2		*	E40-8484-05	FLAT CABLE CONNECTOR		
CN5		*	E40-4248-05	PIN ASSY		
CN5		*	E40-8358-05	PIN ASSY		
J1		*	E63-1080-05	PIN JACK		
J1		*	E63-1140-05	PIN JACK		
J2		*	E63-1139-05	PIN JACK		
J2		*	E63-1139-05	PIN JACK		
J3		*	E63-1138-05	PIN JACK		
J61		*	E63-1141-05	PIN JACK		
J75			E11-0293-05	MINIATURE PHONE JACK(2P)		
E1, 2			J11-0809-05	WIRE CLAMPER		
L31, 32		*	L92-0511-05	CHIP FERRITE		
L41		*	L92-0510-05	CHIP FERRITE		
X1		*	L77-2296-05	CRYSTAL RESONATOR(12.288MHZ)		
CP41-44			R90-0728-05	MULTI-COMP 180 X4		
CP51, 52			R90-0714-05	MULTI-COMP 10K X4		
R1, 2			RK73FB2A562J	CHIP R 5.6K	J 1/10W	
R3, 4			RK73FB2A101J	CHIP R 100	J 1/10W	
R5, 6			RK73FB2A471J	CHIP R 470	J 1/10W	
R7 -10			RK73FB2A472J	CHIP R 4.7K	J 1/10W	
R11, 12			RK73FB2A471J	CHIP R 470	J 1/10W	
R20		*	R92-1946-05	METAL GLAZE 4.7	J 1/4W	
R21			RK73FB2A221J	CHIP R 220	J 1/10W	
R31, 32			RK73FB2A820J	CHIP R 82	J 1/10W	
R33			RK73FB2A471J	CHIP R 470	J 1/10W	
R34			RD14NB2E4R7J	RD 4.7	J 1/4W	
R41, 42			RK73FB2A105J	CHIP R 1.0M	J 1/10W	
R43-45			RK73FB2A221J	CHIP R 220	J 1/10W	
R54			RK73FB2A912J	CHIP R 9.1K	J 1/10W	

L: Scandinavia

K: USA

P: Canada

R: Mexico

C: China

I: Malaysia

Y: PX(Far East,Hawaii)

T: England

E: Europe

G: Germany

V: China(Shanghai)

Y: AAFES(Europe)

X: Australia

Q: Russia

H: Korea

M: Other Areas

A indicates safety critical components.

PARTS LIST

KRF-V4530D/M5030D/M6030D/NR-405/406/414

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

19

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
R55-58			RK73FB2A221J	CHIP R 220 J 1/10W		
R59			RK73FB2A101J	CHIP R 100 J 1/10W		
R66			RK73FB2A104J	CHIP R 100K J 1/10W		
R67			RK73FB2A103J	CHIP R 10K J 1/10W		
R68			RK73FB2A221J	CHIP R 220 J 1/10W		
R101,102			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R103,104			RK73FB2A104J	CHIP R 100K J 1/10W		
R107,108			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R109,110			RK73FB2A103J	CHIP R 10K J 1/10W		
R111,112			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R113,114			RK73FB2A221J	CHIP R 220 J 1/10W		
R121-124			RK73FB2A103J	CHIP R 10K J 1/10W		
R125,126			RK73FB2A101J	CHIP R 100 J 1/10W		
R127,128			RK73FB2A242J	CHIP R 2.4K J 1/10W		
R151-156			RK73FB2A100J	CHIP R 10 J 1/10W		
R157,158			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R159-164			RK73FB2A101J	CHIP R 100 J 1/10W		
R165			RK73FB2A751J	CHIP R 750 J 1/10W		
R166			RK73FB2A272J	CHIP R 2.7K J 1/10W		
R168,169			RK73FB2A1R0J	CHIP R 1 J 1/10W		
R170,171			RK73FB2A471J	CHIP R 470 J 1/10W		
R172-175			RK73FB2A473J	CHIP R 47K J 1/10W		
R201,202			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R203,204			RK73FB2A104J	CHIP R 100K J 1/10W		
R207,208			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R209,210			RK73FB2A272J	CHIP R 2.7K J 1/10W		
R211,212			RK73FB2A562J	CHIP R 5.6K J 1/10W		
R213,214			RK73FB2A221J	CHIP R 220 J 1/10W		
R215,216			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R217,218			RK73FB2A562J	CHIP R 5.6K J 1/10W		
R251,252			RK73FB2A153J	CHIP R 15K J 1/10W		
R253,254			RK73FB2A223J	CHIP R 22K J 1/10W		
R255,256			RK73FB2A103J	CHIP R 10K J 1/10W		
R257,258			RK73FB2A223J	CHIP R 22K J 1/10W		
R259,260			RK73FB2A103J	CHIP R 10K J 1/10W		
R261,262			RK73FB2A223J	CHIP R 22K J 1/10W		
R301			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R302			RK73FB2A103J	CHIP R 10K J 1/10W		
R303,304			RK73FB2A104J	CHIP R 100K J 1/10W		
R307			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R308			RK73FB2A123J	CHIP R 12K J 1/10W		
R309,310			RK73FB2A103J	CHIP R 10K J 1/10W		
R311,312			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R313,314			RK73FB2A221J	CHIP R 220 J 1/10W		
R401-406			RK73FB2A471J	CHIP R 470 J 1/10W		
R407			RK73FB2A473J	CHIP R 47K J 1/10W		
R412			RK73FB2A221J	CHIP R 220 J 1/10W		
R426,427			RK73FB2A221J	CHIP R 220 J 1/10W		
R428			RK73FB2A1R0J	CHIP R 1 J 1/10W		
R431,432			RK73FB2A103J	CHIP R 10K J 1/10W		
R450-453		*	R92-1945-05	METAL GLAZE 1 J 1/4W		
R454		*	R92-1946-05	METAL GLAZE 1 J 1/4W		
R461,462			RK73FB2A221J	CHIP R 220 J 1/10W		
R463			RK73FB2A473J	CHIP R 47K J 1/10W		
R464			RK73FB2A472J	CHIP R 4.7K J 1/10W		

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

20

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
R465			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R501-503			RK73FB2A221J	CHIP R 220 J 1/10W		
R505			RK73FB2A103J	CHIP R 10K J 1/10W		
R514			RK73FB2A101J	CHIP R 100 J 1/10W		
R515			RK73FB2A221J	CHIP R 220 J 1/10W		
R516			RK73FB2A103J	CHIP R 10K J 1/10W		
R517			RK73FB2A221J	CHIP R 220 J 1/10W		
R518			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R519			RK73FB2A221J	CHIP R 220 J 1/10W		
R520,521			RK73FB2A103J	CHIP R 10K J 1/10W		
R522,523			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R524			RK73FB2A333J	CHIP R 33K J 1/10W		
R527			RK73FB2A103J	CHIP R 10K J 1/10W		
R601			RK73FB2A820J	CHIP R 82 J 1/10W		
R603			RK73FB2A820J	CHIP R 82 J 1/10W		
R607			RK73FB2A820J	CHIP R 82 J 1/10W		
R609			RK73FB2A104J	CHIP R 100K J 1/10W		
R610			RK73FB2A680J	CHIP R 68 J 1/10W		
R611			RK73FB2A104J	CHIP R 100K J 1/10W		
R612			RK73FB2A680J	CHIP R 68 J 1/10W		
R613			RK73FB2A1R0J	CHIP R 1 J 1/10W		
R631,632			RK73FB2A681J	CHIP R 680 J 1/10W		
R633,634		*	R92-1954-05	METAL GLAZE 100 J 1/10W		
D1			DAN202U	DIODE		
D1			MA142WK	DIODE		
D1			1SS301	DIODE		
D2			DAP202U	DIODE		
D2			MA142WA	DIODE		
D2			1SS300	DIODE		
D3			DAN202U	DIODE		
D3			MA142WK	DIODE		
D3			1SS301	DIODE		
D6			MA111	DIODE		
D41			S1ZB20(4072)	DIODE		
D42,43			UDZ5.6B	ZENER DIODE		
D44			UDZ3.9B	ZENER DIODE		
D51,52			MA111	DIODE		
D61,62			UDZ5.6B	ZENER DIODE		
D75,76			MA111	DIODE		
D151,152			UDZ7.5B	ZENER DIODE		
IC1			NJM4565MD	IC(OP AMP X2)		
IC2		*	AK4527-VQ	MOS-IC		
IC4			TC7WU04FU	MOS-IC		
IC5		*	AK4110-VF	MOS-IC		
IC6		*	TC7WH123FU	MOS-IC		
IC11			NJM4565MD	IC(OP AMP X2)		
IC12			NJU7311AM	MOS-IC		
IC13			NJM4565MD	IC(OP AMP X2)		
IC14			NJU7311AM	MOS-IC		
IC15			M62446FP	ANALOGUE IC		
IC21			NJM4565MD	IC(OP AMP X2)		
IC31			NJM4565MD	IC(OP AMP X2)		
IC41		*	TC74HC07AF	MOS-IC		
IC42			TC74HCT7007AF	MOS-IC		

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas Δ indicates safety critical components.

KRF-V4530D/V5030D/V6030D/NR-405/406/414
PARTS LIST

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

21

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
△ IC45		*	TA48M05F	ANALOGUE IC		
△ IC46			TA48M033F	ANALOGUE IC		
△ IC47		*	TA48M025F	ANALOGUE IC		
△ IC51		*	CS493253-CLR	MOS-IC		
△ IC51		*	CS493263-CLR	MOS-IC		
△ IC61			NJM2279M	ANALOGUE IC		
△ Q1			DTC124EUA	DIGITAL TRANSISTOR		
△ Q1			UN5212	DIGITAL TRANSISTOR		
△ Q15			2SD1664(Q,R)	TRANSISTOR		
△ Q15		*	2SD1963(R,S)-G	TRANSISTOR		
△ Q16			2SB1132(Q,R)	TRANSISTOR		
△ Q16		*	2SB1308(Q,R)-G	TRANSISTOR		
△ Q41			2SC4081(R,S)	TRANSISTOR		
△ Q41			2SD1819A(Q,R)	TRANSISTOR		
△ Q42			2SA1576A(R,S)	TRANSISTOR		
△ Q42			2SB1218A(Q,R)	TRANSISTOR		
△ Q61			2SD1664(Q,R)	TRANSISTOR		
△ Q61		*	2SD1963(R,S)-G	TRANSISTOR		
△ Q62			2SB1132(Q,R)	TRANSISTOR		
△ Q62		*	2SB1308(Q,R)-G	TRANSISTOR		
A1		*	W02-2716-05	OPTIC RECEIVING MODULE		

DISPLAY (X14-7120-10)

D1		*	B30-2567-05	LED(RED(80) HI-BR)		
D3 -5			B30-2545-05	LED(RED3(160))		
C1			CE04RW0J331M	ELECTRO	330UF	6.3WV
C1			CE04RW1A101M	ELECTRO	100UF	10WV
C2			CK73FB1H103K	CHIP C	0.010UF	K
C3			CE04RW1H010M	ELECTRO	1.0UF	50WV
C4 ,5			CE04RW1C100M	ELECTRO	10UF	16WV
C6		*	CE04RW0J100M	ELECTRO	10UF	6.3WV
C7			CK73FB1H103K	CHIP C	0.010UF	K
C9			CC73FCH1H470J	CHIP C	47PF	J
C10 -19			CK73FB1H103K	CHIP C	0.010UF	K
C20 ,21			CK73FB1C104K	CHIP C	0.10UF	K
C22			CK73FF1C105Z	CHIP C	1.0UF	Z
C23			CE04RW0J470M	ELECTRO	47UF	6.3WV
C24			CE04RW0J470M	ELECTRO	47UF	6.3WV
C25			CK73FB1H103K	CHIP C	0.010UF	K
C26 ,27			CC73FCH1H270J	CHIP C	27PF	J
C28			CC73FCH1H561J	CHIP C	560PF	J
C29			CC73FCH1H271J	CHIP C	270PF	J
C30		*	CE04RW1V2R2M	ELECTRO	2.2UF	35WV
C31			CC73FCH1H101J	CHIP C	100PF	J
C32			CE04RW0J220M	ELECTRO	22UF	6.3WV
C33 -35			CC73FCH1H101J	CHIP C	100PF	J
C36 ,37			CC73FCH1H470J	CHIP C	47PF	J
C38		*	CE04RW1H330M	ELECTRO	33UF	50WV
C39			CK73FB1H103K	CHIP C	0.010UF	K
C40			C90-1826-05	BACKUP-C	0.047F	5.5WV
C41			CK73FB1H103K	CHIP C	0.010UF	K
C42			CK73FB1H103K	CHIP C	0.010UF	K
C43 ,44			CC73FCH1H101J	CHIP C	100PF	J
C45 ,46			CC73FCH1H470J	CHIP C	47PF	J
C47			CC73FCH1H101J	CHIP C	100PF	J

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas △ indicates safety critical components.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

22

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C48			CC73FCH1H101J	CHIP C	100PF	J
C49			CE04RW0J331M	ELECTRO	330UF	6.3WV
C50			CC73FCH1H101J	CHIP C	100PF	J
C51		*	CE04RW1H2R2M	ELECTRO	2.2UF	50WV
C52			CK73FB1H103K	CHIP C	0.010UF	K
C53			CC73FCH1H101J	CHIP C	100PF	J
C54		*	CE04RW1H4R7M	ELECTRO	4.7UF	50WV
C55			CC73FCH1H470J	CHIP C	47PF	J
C56			CC73FCH1H220J	CHIP C	22PF	J
C57			CC73FCH1H221J	CHIP C	220PF	J
C58			CC73FCH1H470J	CHIP C	47PF	J
C59			CK73FF1C105Z	CHIP C	1.0UF	Z
C106,107			CC73FCH1H101J	CHIP C	100PF	J
CN1		*	E40-8510-05	FLAT CABLE CONNECTOR		
CN2		*	E40-8504-05	FLAT CABLE CONNECTOR		
CN3			E40-3247-05	PIN ASSY		
CN5			E40-3261-05	PIN ASSY		
J1			E11-0272-05	PHONE JACK		
E5			J11-0808-05	WIRE CLAMPER		
X1		*	L78-0714-05	RESONATOR (8MHZ)		
X2			L77-2002-05	CRYSTAL RESONATOR(4.332MHZ)		ET
CP1			R90-0855-05	MULTI-COMP	100KX5	J
CP2 ,3			R90-0482-05	MULTI-COMP	100KX4	J 1/6W
CP501			R90-0855-05	MULTI-COMP	100KX5	J
CP502			R90-0850-05	MULTI-COMP	100KX3	J 1/6W
R4			RK73FB2A102J	CHIP R	1.0K	J 1/10W
R5			RK73FB2A103J	CHIP R	10K	J 1/10W
R7			RK73FB2A104J	CHIP R	100K	J 1/10W
R8			RK73FB2A102J	CHIP R	1.0K	J 1/10W
R11			RK73FB2A223J	CHIP R	22K	J 1/10W
R12			RK73FB2A331J	CHIP R	330	J 1/10W
R13 ,14			RK73FB2A104J	CHIP R	100K	J 1/10W
R15			RK73FB2A331J	CHIP R	330	J 1/10W
R29			RK73FB2A122J	CHIP R	1.2K	J 1/10W
R31 -33			RK73FB2A221J	CHIP R	220	J 1/10W
R36 ,37			RK73FB2A104J	CHIP R	100K	J 1/10W
R38 -43			RK73FB2A103J	CHIP R	10K	J 1/10W
R44 -49			RK73FB2A101J	CHIP R	100	J 1/10W
R50			RK73FB2A272J	CHIP R	2.7K	J 1/10W
R51			RK73FB2A102J	CHIP R	1.0K	J 1/10W
R52 ,53			RK73FB2A272J	CHIP R	2.7K	J 1/10W
R54 ,55			RK73FB2A103J	CHIP R	10K	J 1/10W
R57 ,58			RK73FB2A223J	CHIP R	22K	J 1/10W
R59 -63			RK73FB2A104J	CHIP R	100K	J 1/10W
R64			RK73FB2A101J	CHIP R	100	J 1/10W
R65 ,66			RK73FB2A103J	CHIP R	10K	J 1/10W
R67			RD14NB2E222J	RD	2.2K	J 1/4W
R69 ,70			RK73FB2A103J	CHIP R	10K	J 1/10W
R71 ,72			RK73FB2A473J	CHIP R	47K	J 1/10W
R83			RK73FB2A564J	CHIP R	560K	J 1/10W
R86			RD14NB2E152J	RD	1.5K	J 1/4W
R98			RK73FB2A104J	CHIP R	100K	J 1/10W
R107-109			RK73FB2A104J	CHIP R	100K	J 1/10W

L: Scandinavia K: USA P: Canada R: Mexico C: China I: Malaysia
Y: PX(Far East,Hawaii) T: England E: Europe G: Germany V: China(Shanghai)
Y: AAFES(Europe) X: Australia Q: Russia H: Korea M: Other Areas △ indicates safety critical components.

PARTS LIST

KRF-V4530D/N5030D/N6030D/NR-405/406/414

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

23

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
R110			RK73FB2A1R0J	CHIP R 1 J 1/10W	ET	
R111			RK73FB2A101J	CHIP R 100 J 1/10W	ET	
R112			RK73FB2A473J	CHIP R 47K J 1/10W	ET	
R113			RK73FB2A101J	CHIP R 100 J 1/10W	ET	
R114			RK73FB2A104J	CHIP R 100K J 1/10W		
R118			RK73FB2A104J	CHIP R 100K J 1/10W		
R119-126			RK73FB2A101J	CHIP R 100 J 1/10W		
R127-129			RK73FB2A104J	CHIP R 100K J 1/10W		
R130			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R141,142			RK73FB2A104J	CHIP R 100K J 1/10W		
R143			RK73FB2A101J	CHIP R 100 J 1/10W		
R161,162			RK73FB2A104J	CHIP R 100K J 1/10W		
R501,502			RK73FB2A104J	CHIP R 100K J 1/10W		
W503			R92-0679-05	CHIP R 0 OHM		
W505			R92-0679-05	CHIP R 0 OHM	YMI	
W509			R92-0679-05	CHIP R 0 OHM		
W514			R92-0679-05	CHIP R 0 OHM		
S4 -18			S70-0031-05	TACT SWITCH		
S19			S68-0107-05	PUSH SWITCH	YMIKXET	
S1			T99-0602-05	ROTARY ENCODER		
S2		*	T99-0630-05	ROTARY ENCODER		
D7			HZS6.2N(B2)	ZENER DIODE		
D7			MTZJ6.2(B)	ZENER DIODE		
D8 ,9			RB721Q	DIODE		
D11 ,12			MA111	DIODE	KP	
D13			HSS104A	DIODE	KP	
D13			1SS133	DIODE		
D15 ,16			MA111	DIODE		
D17 -22			HSS104A	DIODE		
D17 -22			1SS133	DIODE		
D24			HSS104A	DIODE	ETX	
D24			1SS133	DIODE	ETX	
D27			HSS104A	DIODE	KP	
D27			1SS133	DIODE	KP	
D28			HSS104A	DIODE	ETMXIY	
D28			1SS133	DIODE	ETMXIY	
D29			HSS104A	DIODE	X	
D29			1SS133	DIODE	X	
D30			HSS104A	DIODE	ET	
D30			1SS133	DIODE	ET	
D33			HSS104A	DIODE		
D33			1SS133	DIODE		
D35 ,36			MA111	DIODE	YMI	
ED1		*	SVA-11MS22	FLUORESCENT INDICATOR TUBE		
IC1		*	MN101C35DRA	MI-COM IC		
IC2			S-80840ANY	ANALOGUE IC		
IC3		*	TA78057F	ANALOGUE IC	KPXET	
IC4			BU1923F	ANALOGUE IC	ET	
IC5			S-80840ANY	ANALOGUE IC	YMI	
IC6			XC62FP5102P	ANALOGUE IC	YMI	
Q1			2SC4081(R,S)	TRANSISTOR		
Q2			2SA1576A(R,S)	TRANSISTOR		
Q3 -5			2SC4081(R,S)	TRANSISTOR		

6
6

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
Y : PX(Far East,Hawaii) T : England E : Europe G : Germany V : China(Shanghai)
V : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas Δ indicates safety critical components.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

24

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
Q6			UN5219	DIGITAL TRANSISTOR		
Q9 -11			UN5219	DIGITAL TRANSISTOR		
Q12 ,13			2SA1576A(R,S)	TRANSISTOR		
Q14			DTA124EUA	DIGITAL TRANSISTOR		
Q14			UN5112	DIGITAL TRANSISTOR		
A1			W02-2625-05	OPTIC RECEIVING MODULE		

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
Y : PX(Far East,Hawaii) T : England E : Europe G : Germany V : China(Shanghai)
V : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas Δ indicates safety critical components.

HOW TO READ THE PARTS LIST

Destination column has the abbreviation for sale country and model.
Alphabets mean the country. Numerals do model.
Example: X means KRF-V4530D-S and KRF-V6030D-S for Australia market.
5 does KRF-V4530D, KRF-5030D, KRF-V5030DE KRF-V5030D-S and VR-405.

ABBREVIATION OF MODEL AND MASS PRODUCTION'S DESTINATIONS

MODEL	CNT	Australia	Canada	China	England	Europe	Germany	Korea	Malaysia
ABB.		X	P	C	T	E	G	H	I
KRF-V4530D	5	-	-	-	-	E4	-	-	-
KRF-V5030D	5	-	-	-	T5	E1	-	-	-
KRF-V5030DE	5	-	-	-	-	E2	-	-	-
KRF-V5030D-S	5	X5	-	-	-	E3	-	-	I5
KRF-V6030D	6	-	-	-	-	E6	-	-	-
KRF-V6030DE	6	-	-	-	-	E7	-	-	-
KRF-V6030D-S	6	X6	-	-	-	-	-	-	I6
VR-405	5	-	P5	-	-	-	-	-	-
VR-406	6	-	P6	-	-	-	-	-	-
VR-414	4	-	P4	-	-	-	-	-	-
MODEL	CNT	Mexico	PX/AAFES	Russia	Scandinavia	Shanghai	USA	Other area	Other area(M2)
ABB.		R	Y	Q	L	V	K	M	M2
KRF-V4530D	5	-	-	-	-	-	-	-	-
KRF-V5030D	5	-	Y5	-	-	-	-	-	-
KRF-V5030DE	5	-	-	-	-	-	-	-	-
KRF-V5030D-S	5	-	-	-	-	-	-	M5	-
KRF-V6030D	6	-	-	-	-	-	-	-	-
KRF-V6030DE	6	-	-	-	-	-	-	-	-
KRF-V6030D-S	6	-	-	-	-	-	-	M6	-
VR-405	5	-	-	-	-	-	K5	-	-
VR-406	6	-	-	-	-	-	K6	-	-
VR-414	4	-	-	-	-	-	K4	-	-

KRF-V4530D/V5030D/V6030D/VR-405/406/414
PARTS LIST

KRF-V4530D/V5030D/V6030D/VR-405/406/414

SPECIFICATIONS

For U.S.A and Canada

AUDIO section (VR-407/406)

Rated power output during STEREO operation

100 watts per channel minimum RMS, both channels driven, at 8 Ω from 20 Hz (VR-407), 40Hz (VR-406) to 20 kHz with no more than 0.7% total harmonic distortion. (FTC)

Effective power output during SURROUND operation

FRONT (20-20kHz/VR-407, 40-20kHz/VR-406, 0.7% T.H.D. at 8 Ω one channel driven)	100 W + 100 W
CENTER (20-20kHz/VR-407, 40-20kHz/VR-406, 0.7% T.H.D. at 8 Ω one channel driven)	100 W
SURROUND (20-20kHz/VR-407, 40-20kHz/VR-406, 0.7% T.H.D. at 8 Ω one channel driven)	100 W + 100 W
Total harmonic distortion	0.055% (1 kHz, 50W, 8 Ω)
Frequency response	
CD	10 Hz ~ 53 kHz, +0 dB, -3.0 dB
Signal to noise ratio (IHF'66)	
PHONO (MM)	75 dB
CD	91 dB
Input sensitivity / impedance	
PHONO (MM)	2.5 mV / 27 k Ω
CD	200 mV / 47 k Ω
MONITOR IN (VR-406:VIDEO2/MONITOR)	200 mV / 47 k Ω
Output level / impedance	
TAPE REC	200 mV / 1 k Ω
MONITOR OUT (VR-406:VIDEO2/MONITOR)	200 mV / 1 k Ω
PRE OUT (SUBWOOFER)	2 V / 2.2 k Ω
Tone control	
BASS	± 10 dB (at 100 Hz)
TREBLE	± 10 dB (at 10 kHz)

AUDIO section (VR-405/414)

Rated power output during STEREO operation

80 watts (VR-405), 50watts (VR-414) per channel minimum RMS, both channels driven, at 8 Ω from 40 Hz to 20 kHz with no more than 0.7% total harmonic distortion. (FTC)

Effective power output during SURROUND operation

FRONT (40-20kHz, 0.7% T.H.D. at 8 Ω one channel driven)	80 W + 80 W (VR-405), 50 W + 50 W (VR-414)
CENTER (40-20kHz, 0.7% T.H.D. at 8 Ω one channel driven)	80 W (VR-405), 50 W (VR-414)
SURROUND (40-20kHz, 0.7% T.H.D. at 8 Ω one channel driven)	80 W + 80 W (VR-405), 50 W + 50 W (VR-414)
Total harmonic distortion	0.055% (1 kHz, 40W, 8 Ω)
Frequency response	
CD	10 Hz ~ 53 kHz, +0 dB, -3.0 dB
Signal to noise ratio (IHF'66)	
CD	91 dB
Input sensitivity / impedance	
CD	200 mV / 47 k Ω
MONITOR IN (VIDEO2/MONITOR)	200 mV / 47 k Ω
Output level / impedance	
TAPE REC	200 mV / 1 k Ω
MONITOR OUT (VIDEO2/MONITOR)	200 mV / 1 k Ω
PRE OUT (SUBWOOFER)	2 V / 2.2 k Ω
Tone control	
BASS	± 10 dB (at 100 Hz)
TREBLE	± 10 dB (at 10 kHz)

DIGITAL AUDIO section

Sampling frequency	32 kHz, 44.1 kHz, 48 kHz, 96kHz
Input level / impedance / wave length	
Optical	(-15 dBm ~ -21 dBm), 660 nm ± 30 nm
Coaxial	0.5 Vp-p / 75 Ω

VIDEO section

VIDEO inputs / outputs

VIDEO (composite)	1 Vp-p / 75 Ω
S VIDEO (VR-407 only)	
(luminance signal)	1 Vp-p / 75 Ω
(chrominance signal)	0.286 Vp-p / 75 Ω

FM tuner section

Tuning frequency range	87.5 MHz ~ 108 MHz
Usable sensitivity (MONO)	
	1.6 μ V (75 Ω) / 15.2 dBf (75 kHz DEV., SINAD 30 dB)
50dB quieting sensitivity	
STEREO	31.6 μ V (75 Ω) / 41.2 dBf
Total harmonic distortion (1 kHz)	
MONO	0.6% (65 dBf input)
STEREO	0.7% (65 dBf input)
Signal to noise ratio (1 kHz, 75 kHz DEV.)	
MONO	75 dB (65 dBf input)
STEREO	68 dB (65 dBf input)
Stereo separation (1 kHz)	38 dB
Selectivity (± 400 kHz)	70 dB
Frequency response	(30 Hz ~ 15kHz), +0.5 dB, -3.0 dB

AM tuner section

Tuning frequency range	
10 kHz step	530 kHz ~ 1,700 kHz
Usable sensitivity (30% mod., S/N 20 dB)	16 μ V / (600 μ V/m)
Signal to noise ratio (30% mod. 1 mV input)	50 dB

GENERAL

Power consumption (VR-414)	2.3 A
(VR-405)	2.0 A
(VR-407/406)	2.6 A
AC outlet	
SWITCHED	(total 150 W, 1.25 A max.)
Dimensions	W : 440 mm (17-5/16")
	H : 143 mm (5-5/8")
	D : 400 mm (15-3/4")
Weight (Net)	7.2 kg (15.8 lb)

Notes

1. KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.
2. The full performance may not be exhibited in an extremely cold location (under a water-freezing temperature).

KRF-V4530D/V5030D/V6030D/VR-405/406/414

SPECIFICATIONS

For other countries

AUDIO section (KRF-V7030D/V6030D)

Effective power output during STEREO operation
1kHz, 10% T.H.D., at 8 Ω 140 W + 140 W
Rated power output during STEREO operation

100 watts per channel minimum RMS, both channels driven, at 8 Ω from 40 Hz (KRF-V6030D), 20Hz (KRF-V7030D) to 20 kHz with no more than 0.7% total harmonic distortion.(FTC)

Effective power output during SURROUND operation
FRONT (1kHz, 10% T.H.D. at 8 Ω one channel driven) 140 W + 140 W
CENTER (1kHz, 10% T.H.D. at 8 Ω one channel driven) 140 W
SURROUND (1kHz, 10% T.H.D. at 8 Ω one channel driven) 140 W + 140 W
Total harmonic distortion 0.055% (1 kHz, 50W, 8 Ω)
Frequency response
CD 10 Hz ~ 50 kHz, +0 dB, -3.0 dB
Signal to noise ratio (IHF'66)
PHONO (MM) 75 dB
CD 91 dB
Input sensitivity / impedance
PHONO (MM) 2.5 mV / 27 k Ω
CD 200 mV / 47 k Ω
MONITOR IN (KRF-V6030D:VIDEO2/MONITOR) 200 mV / 47 k Ω
Output level / impedance
TAPE REC 200 mV / 1 k Ω
MONITOR OUT (KRF-V6030D:VIDEO2/MONITOR) 200 mV / 1 k Ω
PRE OUT (SUBWOOFER) 2 V / 2.2 k Ω
Tone control
BASS (For Australia and U.S-Military) ± 10 dB (at 100 Hz)
BASS (Other countries) ± 10 dB (at 60 Hz)
TREBLE ± 10 dB (at 10 kHz)

AUDIO section (KRF-V5030D)

Effective power output during STEREO operation
(1 kHz, 10%, 8 Ω) 110 W + 110 W

80 watts channel minimum RMS, both channels driven, at 8 Ω from 40 Hz to 20 kHz with no more than 0.7% total harmonic distortion. (FTC)

Effective power output during SURROUND operation
FRONT (1kHz, 10% T.H.D. at 8 Ω one channel driven) 110 W + 110 W
CENTER (1kHz, 10% T.H.D. at 8 Ω one channel driven) 110 W
SURROUND (1kHz, 10% T.H.D. at 8 Ω one channel driven) 110 W + 110 W
Total harmonic distortion 0.055% (1 kHz, 40W, 8 Ω)
Frequency response
CD 10 Hz ~ 53 kHz, +0 dB, -3.0 dB
Signal to noise ratio (IHF'66)
PHONO (MM) 73 dB
CD 91 dB
Input sensitivity / impedance
PHONO (MM) 2.5 mV / 27 k Ω
CD 200 mV / 47 k Ω

MONITOR IN (VIDEO2/MONITOR) 200 mV / 47 k Ω
Output level / impedance
TAPE REC 200 mV / 1 k Ω
MONITOR OUT (VIDEO2/MONITOR) 200 mV / 1 k Ω
PRE OUT (SUBWOOFER) 2 V / 2.2 k Ω
Tone control
BASS (For Australia and U.S-Military) ± 10 dB (at 100 Hz)
BASS (Other countries) ± 10 dB (at 60 Hz)
TREBLE ± 10 dB (at 10 kHz)

DIGITAL AUDIO section

Sampling frequency 32 kHz, 44.1 kHz, 48 kHz, 96kHz
Input level / impedance / wave length
Optical (-15 dBm ~ -21 dBm), 660 nm ± 30 nm
Coaxial 0.5 Vp-p / 75 Ω

VIDEO section

VIDEO inputs / outputs
VIDEO (composite) 1 Vp-p / 75 Ω
S VIDEO (KRF-V7030D only)
(luminance signal) 1 Vp-p / 75 Ω
(chrominance signal) 0.286 Vp-p / 75 Ω

FM tuner section

Tuning frequency range 87.5 MHz ~ 108 MHz
Usable sensitivity (MONO)
..... 1.6 μ V (75 Ω) / 15.2 dBf (75 kHz DEV., SINAD 30 dB)
50dB quieting sensitivity
STEREO 31.6 μ V (75 Ω) / 41.2 dBf
Total harmonic distortion (1 kHz)
MONO 0.6% (65 dBf input)
STEREO 0.7% (65 dBf input)
Signal to noise ratio (1 kHz, 75 kHz DEV.)
MONO 75 dB (65 dBf input)
STEREO 68 dB (65 dBf input)
Stereo separation (1 kHz) 38 dB
Selectivity (± 400 kHz) 50 dB
Frequency response (30 Hz ~ 15kHz), +0.5 dB, -3.0 dB

AM tuner section

Tuning frequency range
9 kHz step 531 kHz ~ 1,602 kHz
10 kHz step 530 kHz ~ 1,610 kHz
Usable sensitivity 16 μ V / (600 μ V/m)
Signal to noise ratio (30% mod. 1 mV input) 50 dB

GENERAL

Power consumption
KRF-V5030D 190 W
KRF-V7030D/V6030D 250 W
AC outlet
SWITCHED (total 90 W max.)
Dimensions W : 440 mm
H : 143 mm
D : 400 mm
Weight (Net)(KRF-V7030D/V6030D) 7.4 kg
(Net)(KRF-V5030D) 7.2 kg

Notes

1. KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.
2. The full performance may not be exhibited in an extremely cold location (under a water-freezing temperature).